





- U.S.A. : **Kubota Tractor Corporation**
1000 Kubota Drive, Grapevine, Texas 76051, U.S.A.
Telephone : (1)-817-756-1171
- Canada : **Kubota Canada Ltd.**
1155 Kubota Drive, Pickering, Ontario L1X 0H4, Canada
Telephone : (1)-905-294-6535
- France : **Kubota Europe S.A.S.**
19-25, Rue Jules Vercurysse, Z.I., BP88 95101 Argenteuil Cedex, France
Telephone : (33)-1-3426-3434
- Italy : **KUBOTA EUROPE S.A.S Italy Branch**
Via Grandi, 29 20068 Peschiera Borrome (MI) Italy
Telephone : (39)02-51650377
- Germany : **Kubota Baumaschinen GmbH**
Steinhauser Straße 100, 66482 Zweibrücken Rheinlandpfalz, Germany
Telephone : (49)-6332-4870
- U.K. : **KUBOTA (U.K.) LTD.**
Dormer Road, Thame, Oxfordshire, OX9 3UN, U.K.
Telephone : (44)1844-214500
- Spain : **Kubota España S.A.**
Calle Fernando Alonso número 15, Leganés, 28914 (Madrid), Spain
Telephone : (34)-91-508-6442
- Turkey : **KUBOTA TURKEY MAKINE TIC.LTD.ŞTI.**
Cumhuriyet Mah. Yahya Kaptan Cad. No:3 Cayirova / Kocaeli/Turkey 41420
Telephone : (90)262-658-9045
- Australia : **KUBOTA AUSTRALIA PTY LTD.**
25-29 Permas Way, Truganina, VIC 3029, Australia
Telephone : (61)-3-9394-4400
- Malaysia : **KUBOTA MALAYSIA SDN. BHD.**
Lot 766, Jalan Subang 4, off Persiaran Subang Sungai Penaga Industrial Park,
47500 Subang Jaya
Telephone : (60)-3-7890-3533
- Philippines : **KUBOTA PHILIPPINES, INC.**
232 Quirino Highway, Baesa, Quezon City 1106, Philippines
Telephone : (63)2-422-3500
- Taiwan : **SHIN TAIWAN AGRICULTURAL MACHINERY CO., LTD.**
16, Fengping 2nd Rd, Taliaw Shiang Kaohsiung 83107, Taiwan R.O.C.
Telephone : (886)7-702-2333
- Indonesia : **PT KUBOTA MACHINERY INDONESIA**
Tower A at EightyEight@Kasablanka Lantai 16
Jalan Raya Casablanka Kav. 88, Jakarta 12870 Indonesia
Telephone : (62)-21-29568-720
- Thailand : **SIAM KUBOTA CORPORATION CO., LTD.**
101/19-24 Moo 20, Navanakorn Industrial Estate, Tambon Khlongnueng, Amphur Khlongluang,
Pathumthani 12120, THAILAND
Telephone : (66)2-909-0300
- Korea : **KUBOTA KOREA CO., LTD.**
41-27, Jayumyeok-gil, Baeksan-myeon, Gimje-si, Jeollabuk-do, Korea
Telephone : (82)-63-544-5822
- India : **KUBOTA AGRICULTURAL MACHINERY INDIA PVT. LTD.**
B 500 A & C, Indospace Industrial Park, 104 Polivakkam Village,
Sriperumbadur-Thiruvallur Main Road, Thiruvallur District-602 002.
Telephone : (91)44-4019-2000
- Vietnam : **KUBOTA VIETNAM CO., LTD.**
Lot B-3A2-CN, My Phuoc 3 Industrial Park, Thoi Hoa Ward, Ben Cat Town, Binh Duong Province, Vietnam
Telephone : (84)-274-3577-507

English (U.S.A.)
Code No. 6C820-6311-2

OPERATOR'S MANUAL

KUBOTA TRACTOR

MODELS LX2620 LX2620SU

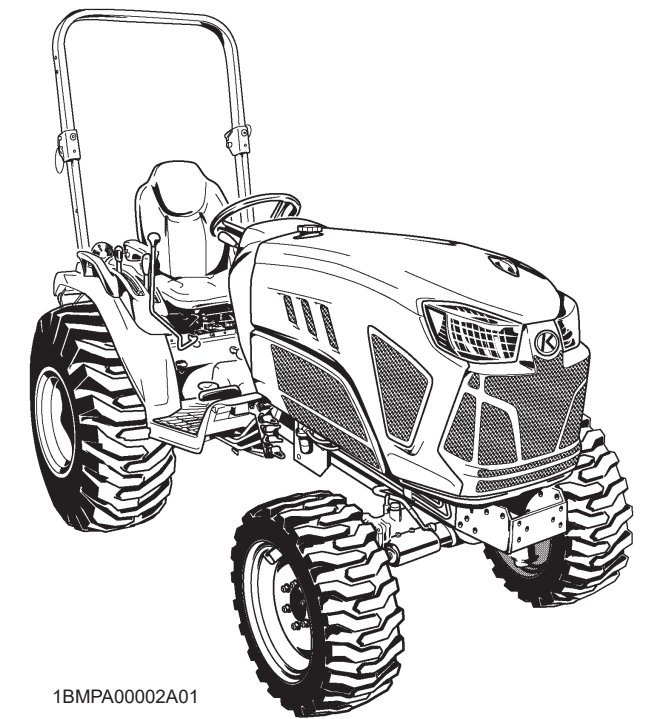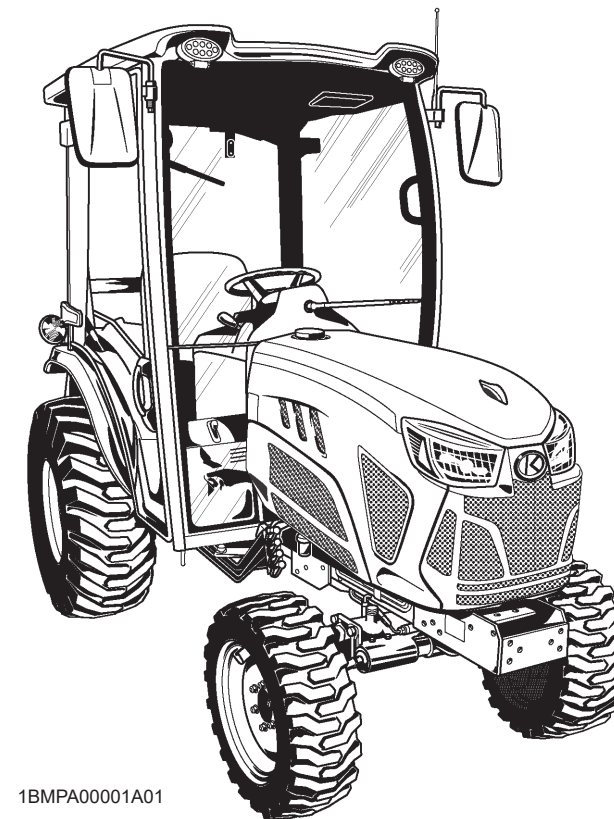

L
X
2
6
2
0

L
X
2
6
2
0
S
U

READ AND SAVE THIS MANUAL

ABBREVIATION LIST

Abbreviations	Definitions
2WD	2-wheel drive
4WD	4-wheel drive
API	American Petroleum Institute
ASABE	American Society of Agricultural and Biological Engineers, USA
ASTM	American Society for Testing and Materials, USA
DEF	Diesel exhaust fluid
DIN	Deutsches Institut für Normung, Germany
DPF	Diesel particulate filter
DT	Dual traction (4WD)
fpm	Feet per minute
GST	Glide shift transmission
Hi-Lo	High speed-low speed
HST	Hydrostatic transmission
m/s	Meters per second
PTO	Power take-off
RH/LH	Right-hand and left-hand sides are determined by facing in the direction of forward travel
ROPS	Roll-over protective structures
rpm	Revolutions per minute
r/s	Revolutions per second
SAE	Society of Automotive Engineers, USA
SCR	Selective catalytic reduction
SMV	Slow moving vehicle

California Proposition 65

WARNING

Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

IMPORTANT





 


The engine in this machine is not equipped by the manufacturer with a standard spark arrester. It is a violation of California Public Resource Code Section 4442 to use or operate this engine on or near any forest-covered, brush-covered land, or grass-covered land unless the exhaust system is equipped with a working spark arrester meeting state laws. Other states or federal areas may have similar laws.

**Canadian Electromagnetic Compatibility (EMC):
This machine complies with Industry Canada ICES-002.**


 









UNIVERSAL SYMBOLS

As a guide to the operation of your tractor, various universal symbols have been utilized on the instruments and controls. The symbols are shown below with an indication of their meaning.


 
 

 





■ **General**

 -  Safety alert symbol
-  Master system warning
-  Fast
-  Slow
-  Read operator's manual
-  Lock
-  Unlock





■ **Engine-related**

-  Diesel fuel
-  Fuel level
-  Hour meter / elapsed operating hours
-  Engine coolant - temperature
-  Engine oil - pressure
-  Engine speed control
-  Engine - rotational speed
n/min
-  Engine - run
-  Engine - start
-  Engine - stop
-  Diesel preheat / glow plugs (low temperature start aid)




 
■ **Vehicle body-related**

-  Tractor forward movement - overhead view
-  Tractor rearward movement - overhead view
-  4-wheel drive - on
-  4-wheel drive - off
-  Cruise control / speed set
-  Clutch
-  Brake
-  Parking brake
-  Differential lock
-  Steering wheel - tilt control

■ **PTO-related**

 
-  PTO - off (disengaged)
-  PTO - off (disengaged)
-  PTO - on (engaged)
-  PTO - on (engaged)

■ **Hydraulic-related**

-  Position control - raised position
-  Position control - lowered position
-  3-point lowering speed control
-  Remote cylinder - retract



Remote cylinder - extend



Remote cylinder - float

■ **Electric-related**



Battery charging condition



Headlight



Work light



Turn signal



Hazard warning lights



Audible warning device



Front wiper/washer switch



Rear wiper/washer switch



Rear window defroster

FOREWORD

Thank you for the purchase of a Kubota product. Before using this product, read this manual carefully and use the product correctly. After reading, keep the manual in a safe and easy-to-access place for future reference. Note that product specifications are subject to change without prior notice. The product delivered to you may differ slightly from the product described in the manual.



SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.



DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION: Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

IMPORTANT: Indicates that equipment or property damage could result if instructions are not followed.

NOTE: Gives helpful information.

OTHERS

About trademarks

Trademark	Owner
AdBlue®	AdBlue is a registered trademark of the VDA - Verband der Automobilindustrie e.V. (The German Association of the Automotive Industry).

Company names, product names and service names described in this manual are the trademarks or registered trademarks of their respective owners. In the text, those names are not accompanied by trademark symbols (®, ™).

CONTENTS

SAFE OPERATION	11
SERVICING OF TRACTOR	25
WARRANTY.....	26
SCRAPPING THE TRACTOR AND ITS PROCEDURE	26
SPECIFICATIONS	27
SPECIFICATION TABLE FOR ROPS MODEL	27
SPECIFICATION TABLE FOR CAB MODEL	29
TRAVELING SPEEDS	31
IMPLEMENT LIMITATIONS	32
IMPLEMENT SPECIFICATION TABLE.....	33
INSTRUMENT PANEL AND CONTROLS	34
SWITCHES AND HAND CONTROLS	34
INSTRUMENT PANEL	36
FOOT AND HAND CONTROLS	37
PRE-OPERATION CHECK	39
DAILY CHECK	39
OPERATING THE ENGINE	40
STARTING THE ENGINE	40
OPERATING THE ENGINE IN FREEZING CONDITIONS	44
1. Block heater (if equipped).....	44
STOPPING THE ENGINE.....	44
WARMING UP THE ENGINE	44
1. Warm-up and transmission fluid at low temperature range	44
JUMP STARTING	45
OPERATING THE TRACTOR	46
OPERATING NEW TRACTOR	46
1. Do not operate the tractor at full speed for the first 50 hours	46
2. Changing lubricating oil for new tractors	46
BOARDING AND LEAVING THE TRACTOR	46
OPERATING FOLDABLE ROPS (IF EQUIPPED).....	46
1. Folding the ROPS.....	47
2. Raising the ROPS to upright position	47
3. Adjustment of foldable ROPS	48
STARTING THE TRACTOR.....	48
1. Operator's seat	48
2. Seat belt	50
3. Tilt steering adjustment [except LX2620SU].....	50
4. Headlight switch	50
5. Turn signal switch and hazard light switch	51
6. Horn button [CAB only].....	52
7. Brake pedals (right and left)	52
8. Parking brake lever.....	52
9. Range gear shift lever (L-M-H)	53
10. Front wheel drive lever	54
10.1 Front-wheel drive (4WD) usage	54
11. Hand throttle lever.....	54
12. Speed control pedal.....	55
13. Speed set lever [LX2620 ROPS model only].....	55
14. Cruise control lever [LX2620 CAB model only]	56

STOPPING THE TRACTOR	57
CHECK DURING DRIVING	57
1. Easy Checker	57
2. Fuel gauge	57
3. Coolant temperature gauge	58
3.1 Overheating countermeasures	58
4. Hourmeter and tachometer	58
5. Changing display mode	58
PARKING THE TRACTOR.....	59
OPERATING TECHNIQUES.....	60
1. Differential lock	60
2. Operating the tractor on a road	61
3. Operating on slopes and rough terrain	61
4. Transporting the tractor safely	62
5. Directions for the use of power steering	62
6. Electrical outlet	62
PTO	64
PTO OPERATION	64
1. PTO select lever [except LX2620SU]	64
2. PTO clutch lever [LX2620].....	65
3. PTO clutch lever [LX2620SU].....	65
4. LCD monitor message	66
5. PTO shaft cover and shaft cap	66
6. Stationary PTO	66
3-POINT HITCH AND DRAWBAR.....	68
THE 3-POINT HITCH SETUP.....	70
1. Selecting the holes of lower links	70
2. Selecting the top link mounting holes	70
3. Drawbar	71
4. Lifting rod (right)	71
5. Top link	71
6. Telescopic stabilizers	71
7. Telescopic lower links [CAB model].....	72
DRAWBAR.....	72
1. Adjusting drawbar length	72
HYDRAULIC UNIT.....	73
3-POINT HITCH CONTROL SYSTEM.....	73
1. Position control	73
2. 3-point hitch lowering speed knob	73
AUXILIARY HYDRAULICS	74
1. Hydraulic block type outlet.....	74
2. Dual remote hydraulic control system	75
2.1 Control lever and hydraulic hose connections	75
2.2 Rear hydraulic outlet (if equipped)	76
2.3 Loader/remote control valve lever	76
2.4 Valve lock	76
REMOTE HYDRAULIC CONTROL SYSTEM (IF EQUIPPED)	77
1. Remote control valve	77
2. Remote control valve lever	77
3. Remote control valve coupler	78
4. Hydraulic control unit reference chart	79
TIRES, WHEELS, AND BALLAST	80
TIRES.....	80
1. Inflation pressure	80
2. Dual tires	80

WHEEL ADJUSTMENT	80
1. Front wheels	80
1.1 Front jack point.....	81
2. Rear wheels.....	81
2.1 Rear jack point	81
3. Treads.....	82
BALLAST	83
1. Front ballast.....	83
1.1 Front end weights (option)	83
2. Rear ballast	83
2.1 Liquid ballast in rear tires	83
CAB OPERATION.....	85
DOORS AND WINDOWS	85
1. Locking and unlocking the door.....	85
2. Opening the door	85
3. Rear window	85
4. Rear window half-lock	85
5. Emergency exit.....	86
LIGHT.....	86
1. Dome light	86
2. Work light switch.....	86
3. Front work light	87
4. Rear work light (if equipped).....	87
WIPER	87
1. Front wiper and washer switch	87
2. Rear wiper and washer switch.....	87
3. Using the wipers in cold season	87
AIR CONDITIONER	88
1. Airflow	88
2. Air control vent.....	88
2.1 Front air outlet.....	88
2.2 Side air outlet and door air outlet	88
2.3 Recirculation or fresh air selection lever	89
3. Control panel	89
3.1 Mode switch	89
3.2 Temperature control dial.....	89
3.3 Blower switch	89
3.4 Air conditioner switch	89
4. Operation	90
4.1 Heating.....	90
4.2 Cooling or dehumidifying-heating.....	90
4.3 Foot warming and head cooling.....	90
4.4 Defrosting or demisting	91
REAR DEFOGGER.....	91
HANGER.....	92
MAINTENANCE.....	93
SERVICE INTERVALS.....	93
LUBRICANTS, FUEL AND COOLANT	95
1. Biodiesel fuel (BDF) B0-B20.....	97
PERIODIC SERVICE	99
WASTE DISPOSAL	99
HOW TO OPEN THE HOOD	99
1. Hood	99
1.1 Opening the hood.....	99
1.2 Closing the hood	100
2. Engine side cover	100

DAILY CHECK	100
1. Walk around inspection	100
2. Checking and refueling	100
3. Checking engine oil level	101
4. Checking transmission fluid level	101
5. Checking coolant level	102
6. Cleaning evacuator valve	102
7. Cleaning air conditioner condenser screen [CAB model]	102
8. Cleaning grill and radiator screen	103
9. Checking brake pedal	103
10. Checking gauges, meter and Easy Checker	103
11. Checking headlight, hazard light, and so on	104
12. Checking seat belt and ROPS	104
13. Checking and cleaning of electrical wiring and battery cables	104
14. Checking movable parts	104
EVERY 50 HOURS	104
1. Lubricating grease fittings	104
2. Checking engine start system	105
3. Checking the wheel bolt torque	106
EVERY 100 HOURS	106
1. Checking battery condition	106
1.1 How to read indicator	107
1.2 Charging the battery	107
1.3 Directions for battery storage	107
2. Cleaning air cleaner primary element	108
3. Cleaning fuel filter	108
4. Adjusting fan belt tension	109
5. Adjusting brake pedal	109
EVERY 200 HOURS	110
1. Replacing engine oil filter	110
2. Changing engine oil	111
3. Replacing transmission oil filter	111
4. Checking the power steering line	112
5. Adjusting toe-in	112
6. Adjusting air conditioner belt tension [CAB model]	113
7. Cleaning inner air filter [CAB model]	113
8. Cleaning fresh air filter [CAB model]	113
8.1 Cleaning the filter	113
9. Checking the air conditioner condenser [CAB model]	114
EVERY 400 HOURS	114
1. Changing transmission fluid	114
2. Replacing hydraulic oil filter	115
3. Replacing fuel filter	116
4. Adjusting front axle pivot (4WD)	117
5. Changing front axle gear case oil	117
EVERY 800 HOURS	118
1. Adjusting engine valve clearance	118
EVERY 1000 HOURS OR 1 YEAR	118
1. Replacing air cleaner primary element and secondary element	118
EVERY 1500 HOURS	118
1. Cleaning fuel injector nozzle injection pressure	118
EVERY 2000 HOURS OR 2 YEARS	118
1. Flushing cooling system and changing coolant	118
2. Antifreeze	119
EVERY 3000 HOURS	120
1. Checking injection pump	120
EVERY 1 YEAR	120
1. Checking the radiator hoses and clamps	120

2. Checking fuel lines	120
3. Checking intake air line	120
4. Checking the air conditioner pipe and hose [CAB model]	121
5. Checking CAB isolation cushion [CAB model]	121
EVERY 2 YEARS.....	121
1. Checking radiator hose (water pipes).....	121
2. Checking power steering line	121
3. Checking air conditioner hose [CAB model]	121
EVERY 4 YEARS.....	121
1. Replacing fuel lines	121
2. Replacing intake air line	121
SERVICE AS REQUIRED.....	121
1. Bleeding fuel system	121
2. Draining clutch housing water	122
3. Replacing fuses	122
4. Replacing light bulb	123
4.1 Replacing headlamp [SU model only]	123
4.2 Replacing tail light	124
4.3 Replacing room lamp [CAB model only]	124
5. Replacing the LED light	125
6. Lubricating points for door and window [CAB model]	125
7. Adding washer liquid [CAB model]	125
8. Checking amount of refrigerant (gas) [CAB model]	125
9. Replacing radiator hose (water pipes).....	126
10. Replacing fuel lines	126
11. Replacing the intake air line.....	126
STORAGE.....	127
TRACTOR STORAGE	127
REMOVING THE TRACTOR FROM STORAGE.....	127
TROUBLESHOOTING	128
ENGINE TROUBLESHOOTING	128
POWERTRAIN TROUBLE SHOOTING.....	129
OPTIONS	130
LIST OF OPTIONS	130
MOUNTING THE SUPPORT PLATE.....	130
1. Installation procedures	130
INDEX.....	132

SAFE OPERATION

Careful operation is your best insurance against an accident.

Read and understand this manual carefully before operating the tractor.

All operators, no matter how much experience they may have, should read this and other related manuals before operating the tractor or any implement attached to it. It is the owner's obligation to instruct all operators in safe operation.

BEFORE OPERATING THE TRACTOR


Before operating the tractor, adhere to the following instructions, and safely operate the tractor.

1. General

- Pay special attention to the safety labels on the tractor.
- Do not operate the tractor or any implement attached to it while under the influence of alcohol, medication, controlled substances or while fatigued.
- Carefully check the vicinity before operating the tractor or any implement attached to it. Check for overhead clearance which may interfere with a CAB or ROPS.
Do not allow any bystanders around or near the tractor during operation.
- Before allowing other people to use your tractor, explain how to operate and have them read this manual before operation.
- Never wear loose, torn, or bulky clothing around the tractor. It may catch on moving parts or controls, leading to the risk of an accident.
Use additional safety items, such as a hard hat, safety boots or shoes, eye and hearing protection, gloves and so on, as appropriate or required.
- Do not allow passengers to ride on any part of the tractor at any time. The operator must remain in the tractor seat during operation.
- Check brakes, clutch, linkage pins and other mechanical parts for improper adjustment and wear. Replace worn or damaged parts promptly. Check the tightness of all nuts and bolts regularly. (See MAINTENANCE on page 93.)
- Keep your tractor clean. Dirt, grease, and trash buildup may contribute to fires and lead to personal injury.
- Use only implements meeting the specifications listed in this manual or implements approved by

Kubota. (See IMPLEMENT LIMITATIONS on page 32.)

- Use proper weights on the front or rear of the tractor to reduce the risk of upsets. When using the front loader, put an implement or ballast on the 3-point hitch to maintain proper balance and braking. Follow the safe operating procedures specified in the implement or attachment manual.
- The narrower the tread, the greater the risk of a tractor upset. For maximum stability, adjust the wheels to the widest practical tread width for your application.
(See TIRES, WHEELS, AND BALLAST on page 80.)

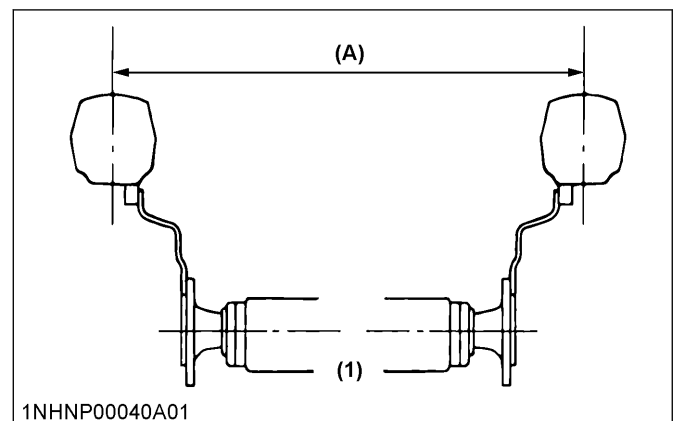

(1) Rear wheels

(A) Tread width


- Do not modify the tractor. Unauthorized modification may affect the function of the tractor, which may result in personal injury.
- Do not make any modifications to the engine or emission components as they may result in damage and malfunctions such as:
 - Damage to the powertrain from excessive engine output.
 - Engine overheating caused by exceeding the engine cooling performance capabilities.
 - Malfunctions of the exhaust gas aftertreatment control devices.Modifications to the engine and its emission components may violate emission regulations and are subject to fines and penalties.
Kubota and its affiliates are not liable for any damage, malfunction or accidents caused by modifications to the engine or emission components.

SAFE OPERATION

2. CAB and ROPS


- Kubota recommends the use of a CAB or roll over protective structures (ROPS) and seat belt in almost all applications. This combination will reduce the risk of serious injury or death, should the tractor be upset. Check for overhead clearance which may interfere with a CAB or ROPS.
- Set the parking brake and stop the engine. Remove any obstruction that may prevent raising or folding of the ROPS. Do not allow any bystanders. Always perform function from a stable position at the rear of the tractor. Hold the top of the ROPS securely when raising or folding. Make sure that all pins are installed and locked.
- If the CAB or ROPS is loosened or removed for any reason, make sure that all parts are reinstalled correctly before operating the tractor.
- Never modify or repair any structural member of a CAB or ROPS because welding, bending, drilling, grinding, or cutting may weaken the structure.
- If any structural member of the CAB or ROPS is damaged, replace the entire structure at your local Kubota dealer.
- If the tractor is equipped with a foldable ROPS it may be temporarily folded down only when absolutely necessary for areas with height constraints.
There is no operator protection provided by the ROPS in the folded position. For operator safety the ROPS should be placed in the upright and locked position and the seat belt fastened for all other operations.
- Always use the seat belt if the tractor has a CAB or ROPS. Do not use the seat belt if a foldable ROPS is down or there is no ROPS. Check the seat belt regularly and replace if frayed or damaged.

[ROPS model]

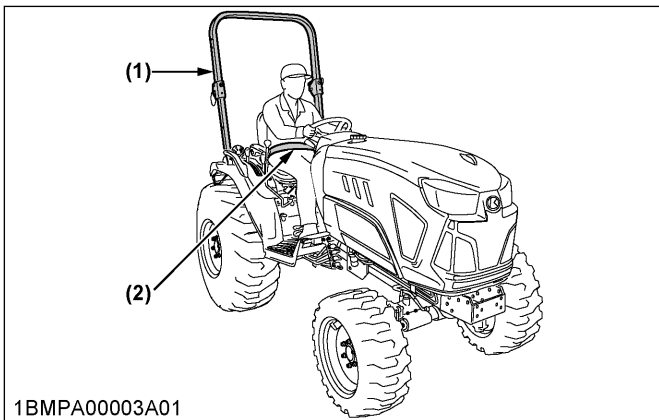

- (1) ROPS
(2) Seat belt

[CAB model]

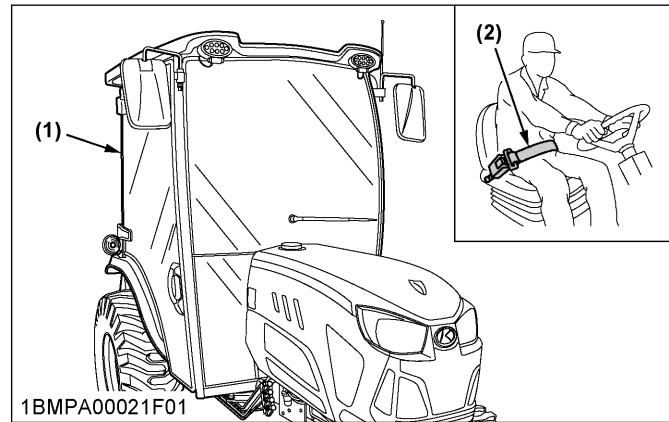

- (1) CAB
(2) Seat belt

OPERATING THE TRACTOR

Operator safety is a priority. Safe operation, specifically with respect to overturning hazards, entails understanding the equipment and environmental conditions at the time of use.

Some prohibited uses which can affect overturning hazards include traveling and turning with implements, loads carried too high and so on. This manual sets forth some of the obvious risks, but the list is not, and cannot be, exhaustive. It is the operator's responsibility to be alert for any equipment or environmental condition that could compromise safe operation.


1. Starting

- Always sit in the operator's seat when starting the engine or operating levers or controls. Adjust the seat per instructions in the operating the tractor section. Never start the engine while standing on the ground.
- Before starting the engine, make sure that all levers (including auxiliary control levers) are in their neutral positions, that the parking brake is engaged, and that both the clutch and the power take-off (PTO) are disengaged or "OFF".
Fasten the seat belt if the tractor has a CAB or a foldable ROPS in the upright and locked position.
- Do not start the engine by shorting across starter terminals or bypassing the safety start switch. The machine may start in gear and move if the normal starting circuitry is bypassed.
- Do not operate or idle the engine in an unventilated area. Carbon monoxide gas is colorless, odorless, and deadly.
- Check that the operator presence control (OPC) system is functioning correctly before each time you use the tractor.
Test the safety systems.
(See Checking engine start system on page 105.)

Do not operate unless they are functioning correctly.

2. Working

- Pull only from the drawbar. Never hitch to axle housing or any other point except the drawbar; such arrangements will increase the risk of serious personal injury or death due to a tractor upset.

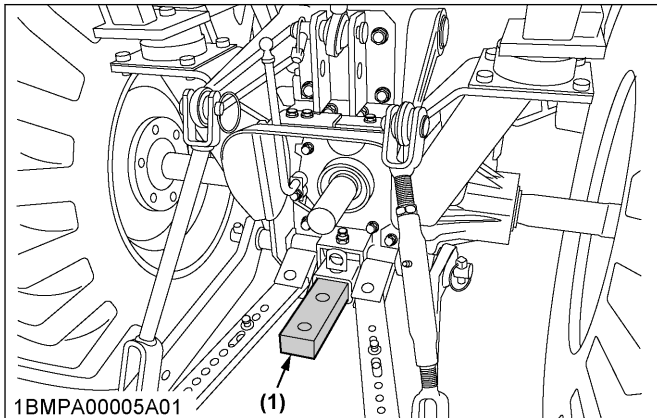

(1) Drawbar

- For trailing PTO-driven implements, set the drawbar to the towing position.
- Attach pulled or towed loads to the drawbar only.
- Keep all shields and guards in place. Replace any that are missing or damaged.
- Avoid sudden starts. To avoid upsets, slow down when turning, on uneven ground, and before stopping.
- The tractor cannot turn with the differential locked and attempting to do so could be dangerous.
- Do not operate near ditches, holes, embankments, or other ground surface features which may collapse under the tractor's weight. The risk of tractor upset is even higher when the ground is loose or wet. Tall grass can hide obstacles; walk the area first to be sure.
- Watch where you are going at all times. Watch for and avoid obstacles. Be alert at row ends, near trees, and other obstructions.
- When working in groups, always let the others know what you are going to do before you do it.
- Never try to get on or off a moving tractor.
- Always sit in the operator's seat when operating levers or controls.
- Do not stand between tractor and implement or trailed vehicle unless the parking brake is applied.
- Whenever the tractor is operated in reverse, confirm visibility to the rear.

3. Safety for children

Tragedy can occur if the operator is not alert to the presence of children. Children generally are attracted to machines and the work the machines do.

- Never assume that children will remain where you last saw them.
- Keep children out of the work area and under the watchful eye of another responsible adult.
- Be alert and shut down your machine if children enter the work area.
- Never carry children on your machine. There is no safe place for children to ride. Children may fall off and be run over or interfere with your control of the machine.
- Never allow children to operate the machine even under adult supervision.
- Never allow children to play on the machine or on the implement.
- Use extra caution when backing up. Look behind and down to make sure that the area is clear before moving.

4. Operating on slopes

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. All slopes require extra caution.


- To avoid upsets, always back up steep slopes. If you cannot back up the slope or if you feel uneasy on it, do not operate on it. Stay off slopes too steep for safe operation.
- Driving forward out of a ditch, mired condition or up a steep slope increases the risk of rear rollovers. Always back out of these situations. Extra caution is required with 4-wheel drive models because their increased traction can give the operator false confidence in the tractor's ability to climb slopes.
- Keep all movement on slopes slow and gradual. Do not make sudden changes in speed, direction or braking, nor make sudden motions with the steering wheel.
- Avoid disengaging the clutch or changing gears when climbing or going down a slope. If on a slope, disengaging the clutch or changing gears to neutral could cause the loss of control.
- Special attention should be paid to the weight and location of implements and loads as such will affect the stability of the tractor.
- To improve stability on slopes, set the widest possible wheel tread.
(See TIRES, WHEELS, AND BALLAST on page 80.)
Follow the recommendations for proper ballasting.

⚠️ SAFE OPERATION

5. Driving the tractor on the road


- Lock the 2 brake pedals together to help assure straight-line stops. Uneven braking at road speeds could cause the tractor to tip over.

[ROPS model]

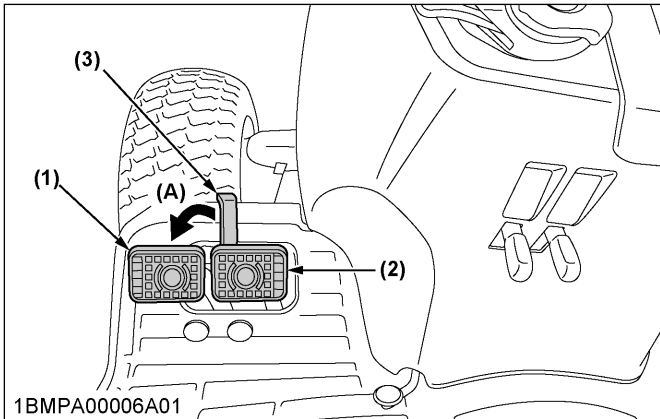


- (1) Brake pedal (LH)
 - (2) Brake pedal (RH)
 - (3) Brake pedal lock
- (A) "Lock the brake pedals whenever traveling on the road"

[ROPS model]

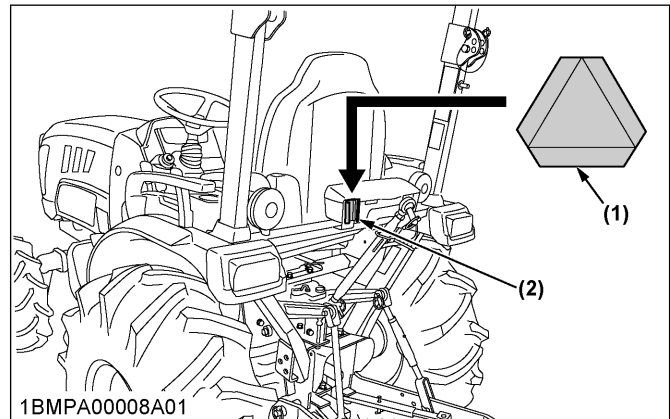


- (1) SMV emblem
- (2) Bracket

[CAB model]

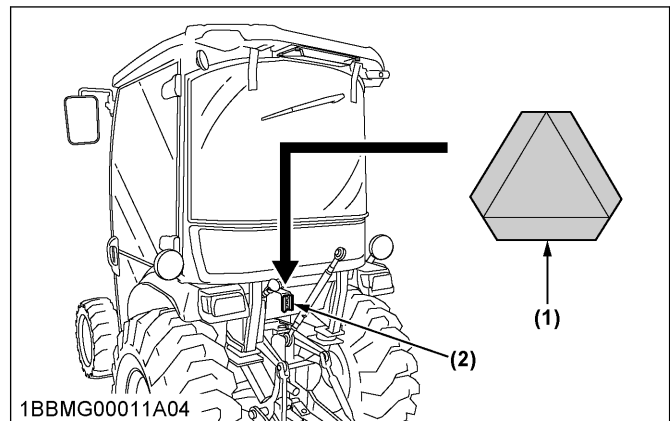

- (1) SMV emblem
- (2) Bracket

[CAB model]

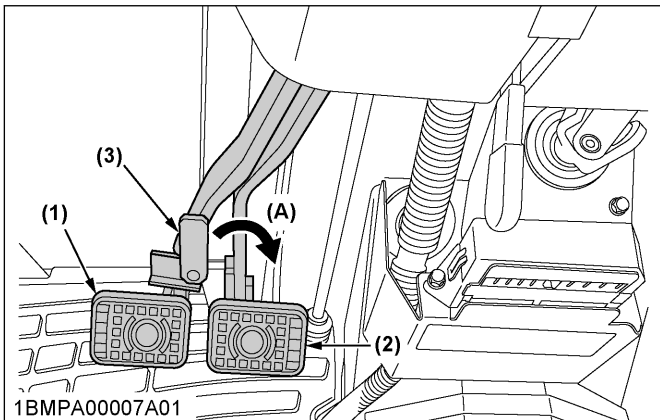

- (1) Brake pedal (LH)
 - (2) Brake pedal (RH)
 - (3) Brake pedal lock
- (A) "Lock the brake pedals whenever traveling on the road"


- Check the front wheel engagement. The braking characteristics are different between 2 and 4-wheel drive. Be aware of the difference and use carefully.
- Always slow down the tractor before turning. Turning at high speed may tip over the tractor.
- Make sure that the Slow Moving Vehicle (SMV) sign is clean and visible. Use hazard lights and turn signals as required.

- Observe all local traffic and safety regulations.
- Turn the headlights on. Dim them when meeting another vehicle.
- Drive at speeds that allow you to maintain control at all times.
- Do not apply the differential lock while traveling at road speeds. The tractor may run out of control.
- Avoid sudden motions of the steering wheel as they can lead to a dangerous loss of stability. The risk is especially high when the tractor is traveling at road speeds.
- Keep the ROPS in the "UP" position and wear the seat belt when driving the tractor on the road. Otherwise, you will not be protected in the event of a tractor roll-over.
- Do not operate an implement while the tractor is on the road. Lock the 3-point hitch in the raised position.
- When towing other equipment, use a safety chain and place an SMV emblem on it as well.

! SAFE OPERATION


OPERATING THE PTO

- Wait until all moving components have completely stopped before getting off the tractor, connecting, disconnecting, adjusting, cleaning, or servicing any PTO driven equipment.
- Keep the PTO shaft cover in place at all times. Put back the PTO shaft cap when the shaft is not in use.

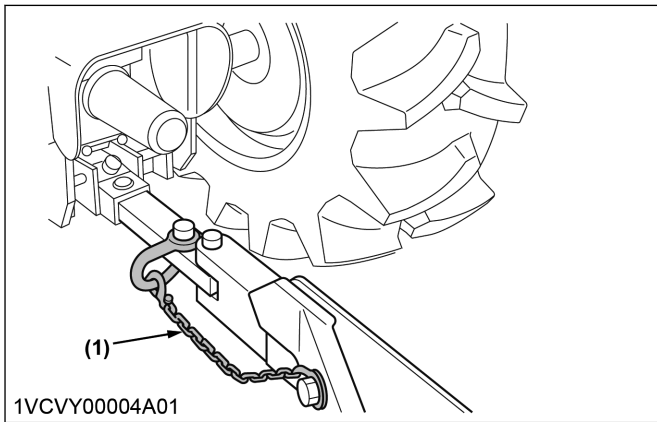

(1) Safety chain


- Set the 3-point hitch lowering speed knob in the "LOCK" position to hold the implement in the raised position.

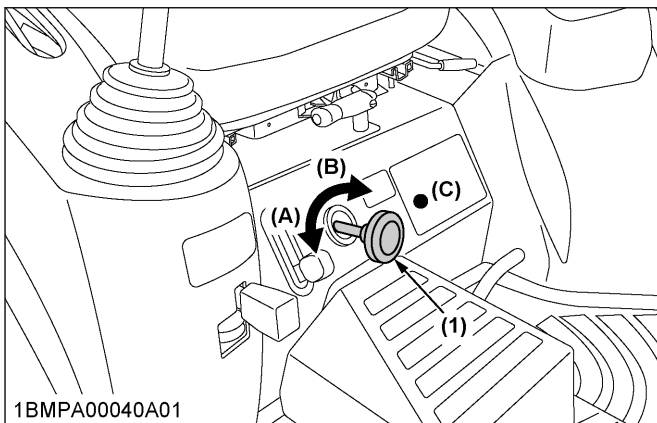

(1) 3-point hitch lowering speed knob
(A) "FAST"
(B) "SLOW"
(C) "LOCK"

PARKING THE TRACTOR

- Disengage the PTO, lower all implements to the ground, place all control levers in their neutral positions, set the parking brake, stop the engine, remove the key from the ignition and lock the CAB door (if equipped).
Leaving transmission in gear with the engine stopped will not prevent the tractor from rolling.
- Make sure that the tractor has come to a complete stop before dismounting.
- Avoid parking on steep slopes. If at all possible, park on a firm and level surface; if not, park across a slope and chock the wheels.
Failure to comply with this warning may allow the tractor to move and could cause injury or death.
- Do not stop the machine on top of straw chaff or dried grass.

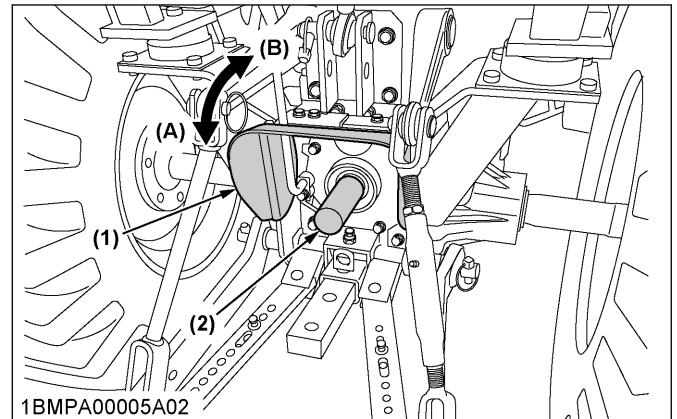


(1) PTO shaft cover
(2) PTO shaft cap
(A) "NORMAL" position
(B) "RAISED" position

- Before installing or using PTO driven equipment, read the manufacturer's manual and review the safety labels attached to the equipment.
- When operating stationary PTO driven equipment, always apply the tractor parking brake and place chocks behind and in front of the rear wheels. Stay clear of all rotating parts. Never step over rotating parts.


USING 3-POINT HITCH

- Use the 3-point hitch only with equipment designed for the appropriate category of 3-point hitch usage.
- When using a 3-point hitch mounted implement, install the proper counterbalance weight on the front of the tractor.
- When transporting on the road, set the 3-point hitch lowering speed knob in the "LOCK" position to hold the implement in the raised position.

⚠️ SAFE OPERATION

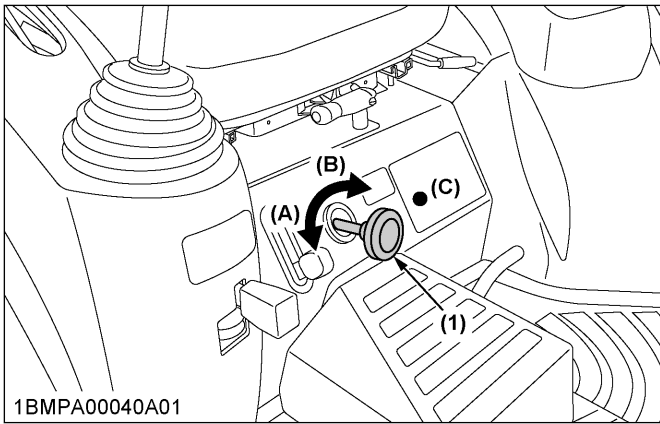

- (1) 3-point hitch lowering speed knob
- (A) "FAST"
 - (B) "SLOW"
 - (C) "LOCK"

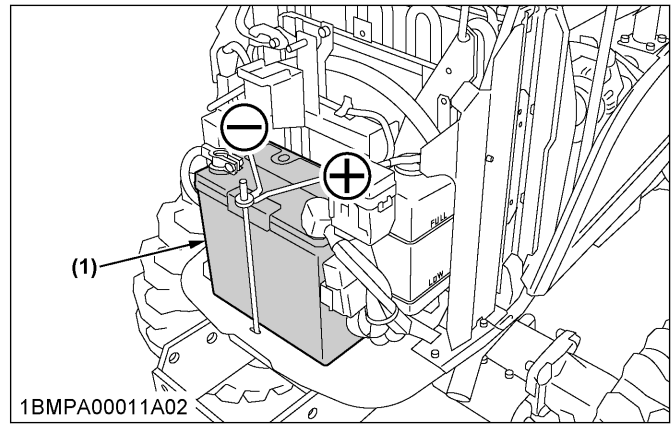


- (1) Battery
- Do not attempt to mount a tire on a rim. This should be done by a qualified person with the proper equipment.
 - Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure shown in the operator's manual.

SERVICING THE TRACTOR


Before servicing the tractor, park it on a firm, flat and level surface, set the parking brake, lower all implements to the ground, place the gear shift lever in neutral, stop the engine and remove the key.

- Allow the tractor time to cool off before working on or near the engine, muffler, radiator and so on.
- Do not remove radiator cap while the coolant is hot. When cool, slowly rotate cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely. If the tractor has a coolant recovery tank, add coolant or water to the recovery tank, not the radiator.
(See Checking coolant level on page 102.)
- Always stop the engine before refueling. Avoid spills and overfilling.
- Do not smoke when working around the battery or when refueling. Keep all sparks and flames away from battery and fuel tank. The battery presents an explosive hazard because it gives off hydrogen and oxygen especially when recharging.
- Before "jump-starting" a dead battery, read and follow all of the instructions.
(See JUMP STARTING on page 45.)
- Keep first aid kit and fire extinguisher handy at all times.
- Disconnect the battery's ground cable before working on or near electric components.
- To avoid the possibility of battery explosion, do not use or charge the refillable type battery if the fluid level is below the [LOWER] (lower limit level) mark. Check the fluid level regularly and add distilled water as required so that the fluid level is between the [UPPER] and [LOWER] levels.
- To avoid sparks from an accidental short circuit, always disconnect the battery's ground cable (-) first and reconnect it last.

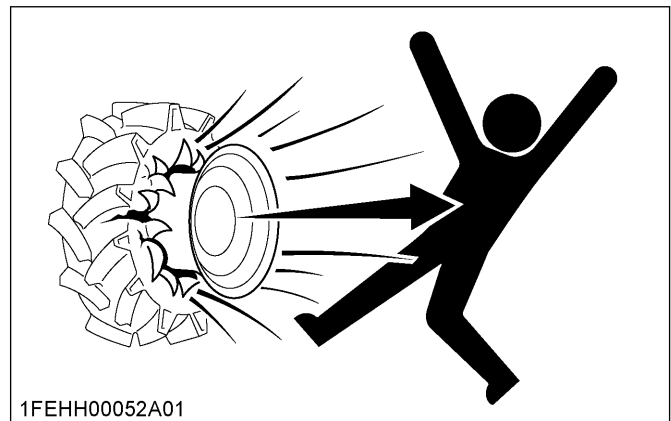


- Securely support the tractor when either changing wheels or adjusting the wheel tread width.
- Make sure that wheel bolts have been tightened to the specified torque.
- Do not work under any hydraulically supported devices. They can settle, suddenly leak down, or be accidentally lowered. If it is necessary to work under the tractor or any machine elements for servicing or adjustment, securely support them with stands or suitable blocking beforehand.
- Escaping hydraulic fluid under pressure has sufficient force to penetrate the skin, causing serious personal injury. Before disconnecting hydraulic lines, release all residual pressure. Before applying pressure to the hydraulic system, make sure that all connections are tight and that all lines, pipes, and hoses are free of damage.

! SAFE OPERATION

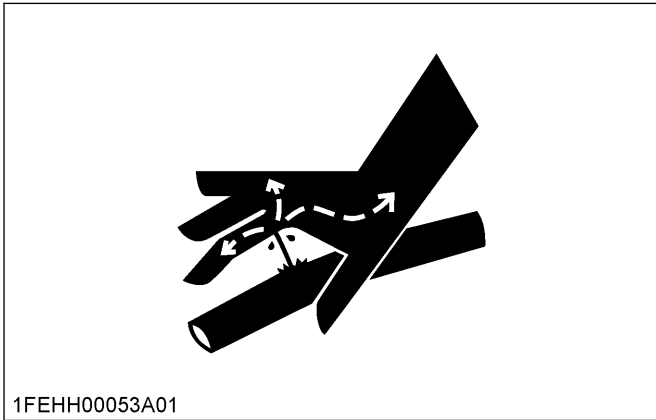

- To avoid fire hazard:
After use and pressure-washing, make sure there is nothing flammable near the exhaust pipe. Grass or twigs under the hood may cause fire.
- Fluid escaping from pinholes may be invisible. Do not use hands to search for suspected leaks; use a piece of cardboard or wood. Use of safety goggles or other eye protection is also highly recommended. If injured by escaping fluid, see a medical doctor at once. This fluid will produce gangrene or severe allergic reactions.

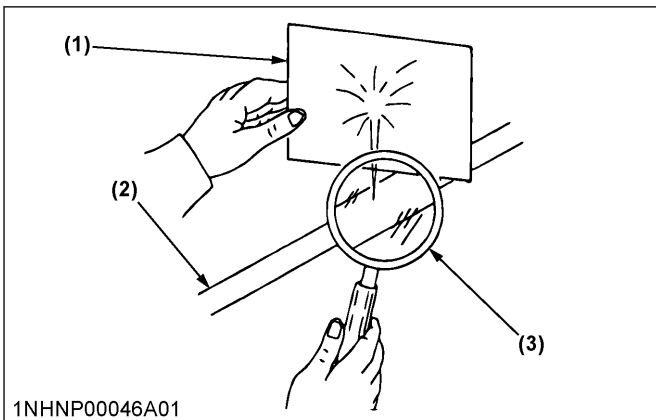

- (1) Cardboard
- (2) Hydraulic line
- (3) Magnifying glass

- The improper disposal or burning of waste causes environmental pollution and can be punishable by your local laws and regulations.
 - When draining fluids from the tractor, place a container underneath the drain port.
 - Do not pour waste onto the ground, down a drain, or into any water source (such as rivers, streams, lakes, marshes, seas, and oceans).
 - Waste products such as used oil, fuel, coolant, hydraulic fluid, aqueous urea solution (DEF (AdBlue)), refrigerant, solvent, filters, rubber, batteries and harmful substances, can harm the environment, people, pets and wildlife. Please dispose of properly. See your local recycling center or Kubota dealer to learn how to recycle or get rid of waste products.

- To avoid hazardous high voltage, turn the key switch to the “OFF” position if it is necessary to check or repair the computer, harness or connectors.
- Keep the tractor away from people, animals or structures which may be susceptible to harm or damage from hot exhaust gases.
- During regeneration, white exhaust gas may be visible. Do not allow regeneration to happen in an unventilated place.
- During regeneration, do not leave the tractor.

! SAFE OPERATION

SAFETY LABELS

(1) Part No. 6C300-3012-3

<p>S.O.C Indicator</p> <ul style="list-style-type: none"> <input type="radio"/> OK <input checked="" type="radio"/> Charge <input type="radio"/> Replace 	 <p>FLAMMABLES SHIELD EYES KEEP OUT OF THE REACH OF CHILDREN</p> <p>CAUTIOUS OF SULFURIC ACID READ INSTRUCTION MANUAL CAREFULLY EXPLOSIVE</p>	<p>! DANGER</p> <ul style="list-style-type: none"> - DUE TO HYDROGEN GAS GENERATED FROM BATTERY, HANDLING WITHOUT CARE CAN CAUSE FIRE AND EXPLOSION. - THIS 12V BATTERY IS ONLY FOR STARTING ENGINE. DO NOT APPLY THIS PRODUCT FOR OTHER USES. - CHARGE THIS BATTERY ONLY AT WELL VENTILATED PLACES, AND AVOID SHORTS OR SPARKS. - REFER TO THE INSTRUCTION MANUAL OF VEHICLE OR BATTERY BEFORE USING BOOSTER CABLE. - SULFURIC ACID MAY CAUSE BLINDNESS OR SEVERE BURN. IN CASE EYES, SKIN, CLOTHES OR ANY ARTICLES ARE STAINED WITH ACID, FLUSH OBJECTS IMMEDIATELY WITH WATER. IF ACID BEING SWALLOWED, DRINK PLENTY OF WATER PROMPTLY. IN CASE OF ACCIDENTAL CONTACT, CONSULT A DOCTOR IMMEDIATELY. - BATTERY FILLED WITH ACID (DO NOT TILT OR SPILL) - FLAMMABLE. DO NOT CHARGE NEAR FIRE OR SPARKS - DO NOT CHARGE RAPIDLY - DO NOT DISASSEMBLE THE BATTERY (SEALED TYPE)
<p>55B24LS 430CCA (SAE) 360CCA (EN) 12V 45Ah (20HR) RC 80(MIN)</p>		<p>CALIFORNIA PROPOSITION 65 ! WARNING: THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING LEAD, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNINGS.CA.GOV</p>



TO AVOID INJURY FROM BATTERY GASES AND ACID



Keep away cigarettes, flames or sparks.



Always shield eyes and face from battery.



Keep out of reach of children.




Poison causes severe burns.
Contains sulfuric acid.



Read and understand operator's manual.




Danger explosive gases.

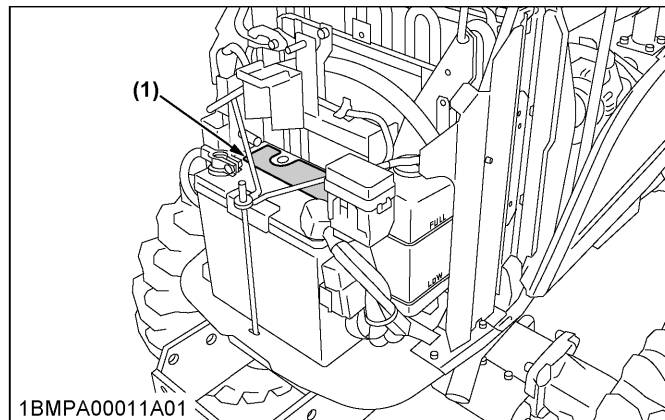

1BMPA00053A01enUS

! SAFE OPERATION

(1) Part No. 6F170-4752-1

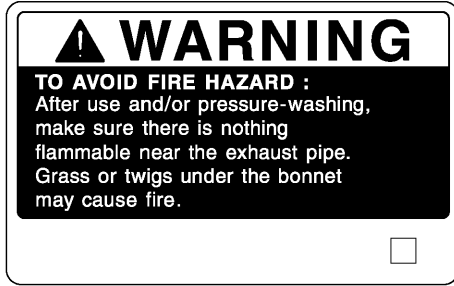


(2) Part No. 6C952-4959-3

Do not touch hot surface like muffler and so on.




(3) Part No. 6F172-4719-3

Do not touch hot surface like muffler and so on.

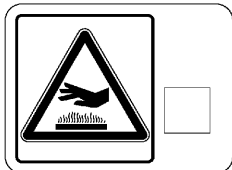

(5) Part No. 6F170-4741-1

DIESEL FUEL ONLY NO OPEN FLAME

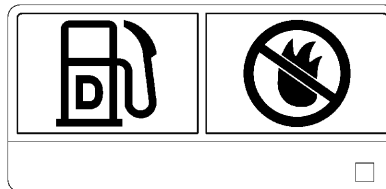


(6) Part No. 6C952-4958-3

Do not get your hands close to engine fan and fan belt.




(4) Part No. 6F170-4718-1

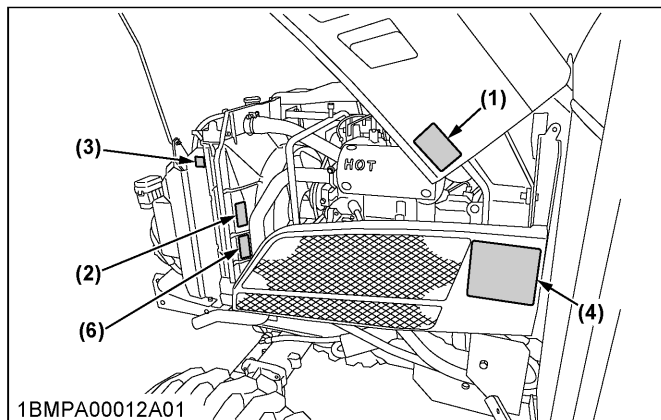

1BMPA00012A01

1BMPA00054A01enUS

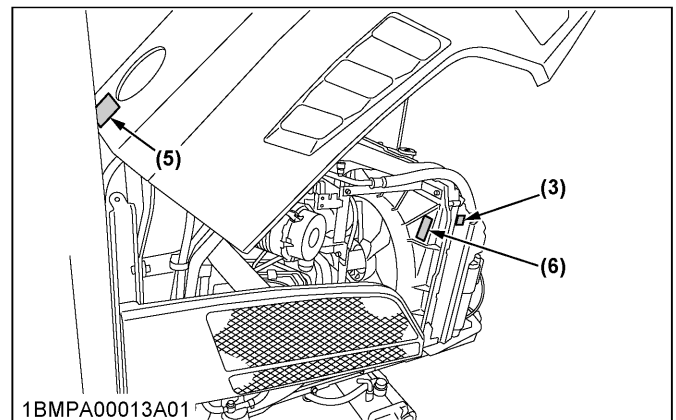



1BMPA00013A01

SAFE OPERATION

ROPS model

(1) Part No. TA240-9848-3

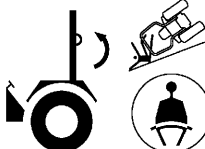	<p>⚠ WARNING</p> <p>TO AVOID INJURY OR DEATH FROM ROLL-OVER:</p> <ul style="list-style-type: none"> ·Keep Roll-Over Protective Structures(ROPS) in the upright and locked position. ·Fasten SEAT BELT before operating.
	<p>THERE IS NO OPERATOR PROTECTION WHEN THE ROPS IS IN THE FOLDED POSITION:</p> <ul style="list-style-type: none"> ·Check the operating area and fold the ROPS only when absolutely necessary. ·Do not wear SEAT BELT if ROPS is folded. ·Raise and lock ROPS as soon as vertical clearance allows. ·Read ROPS related instructions and warnings.

(2) Part No. 6F170-4742-1

⚠ WARNING

TO AVOID PERSONAL INJURY OR DEATH :


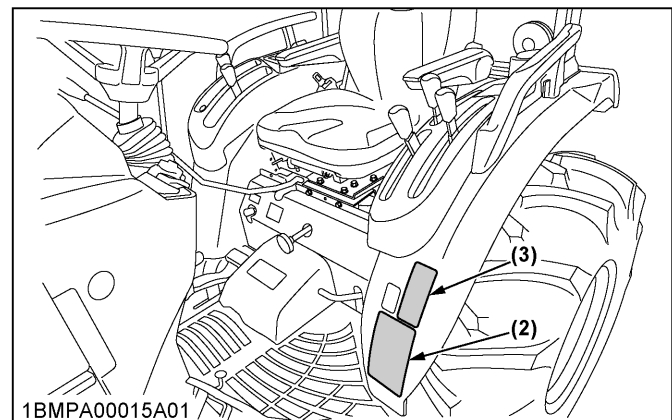
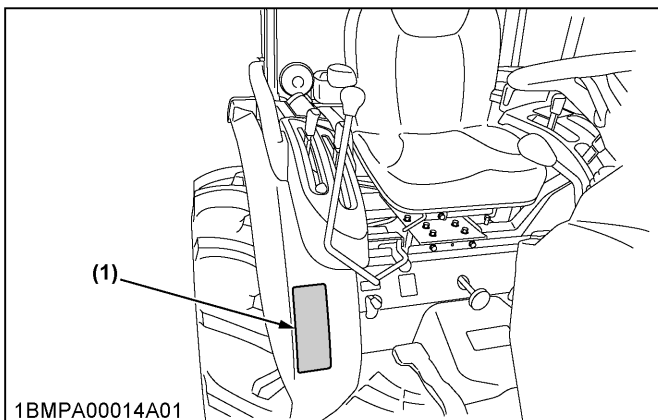
1. Read and understand the operator's manual before operation.
2. Before starting the engine, make sure that everyone is at a safe distance from the tractor and that the PTO is OFF.
3. Do not allow passengers on the tractor at any time.
4. Before allowing other people to use the tractor, have them read the operator's manual.
5. Check the tightness of all nuts and bolts regularly.
6. Keep all shields in place and stay away from all moving parts.
7. Lock the two brake pedals together before driving on the road.
8. Slow down for turns, or rough roads, or when applying individual brakes.
9. On public roads use SMV emblem and hazard lights, if required by local traffic and safety regulations.
10. Pull only from the drawbar.
11. Before dismounting, lower the implement to the ground, set the parking brake, stop the engine and remove the key.
12. Securely support tractor and implements before working underneath.

(3) Part No. 6C800-4742-1

⚠ WARNING

BEFORE DISMOUNTING TRACTOR:

1. ALWAYS SET PARKING BRAKE.
Leaving transmission in gear with the engine stopped will not prevent tractor from rolling.
2. PARK ON LEVEL GROUND WHENEVER POSSIBLE.
If parking on a slope, position tractor across the slope.
3. LOWER ALL IMPLEMENTS TO THE GROUND.
4. STOP THE ENGINE.

1BMPA00055A01enUS

ROPS model

(1) Part No. 6C820-4742-1

! WARNING

Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrester may be required. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.

(2) Part No. 6F170-4754-1

California Proposition 65

! WARNING !

Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

(3) Part No. 6C540-9554-1

! WARNING

Never modify or repair a ROPS because welding, grinding, drilling or cutting any portion may weaken the structure.

! WARNING

TO AVOID PERSONAL INJURY OR DEATH WHEN RAISING OR FOLDING ROPS :

- Set parking brake and stop engine.
- Remove any obstruction that may prevent raising or folding of the ROPS.
- Do not allow any bystanders.
- Always perform function from a stable position at the rear of the tractor.
- Hold the top of the ROPS securely when raising or folding.
- Make sure all pins are installed and locked.

(4) Part No. 6C200-4959-1

! WARNING


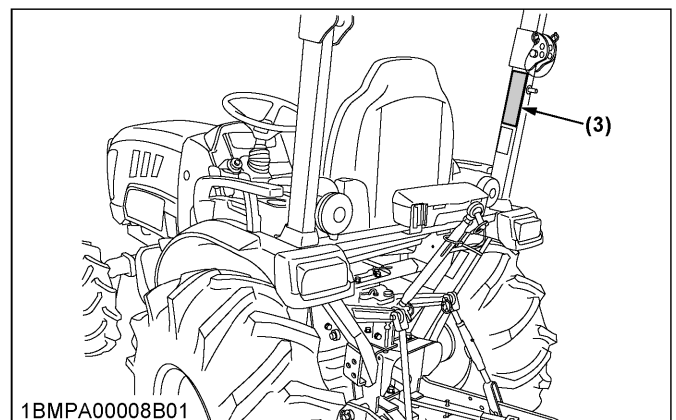
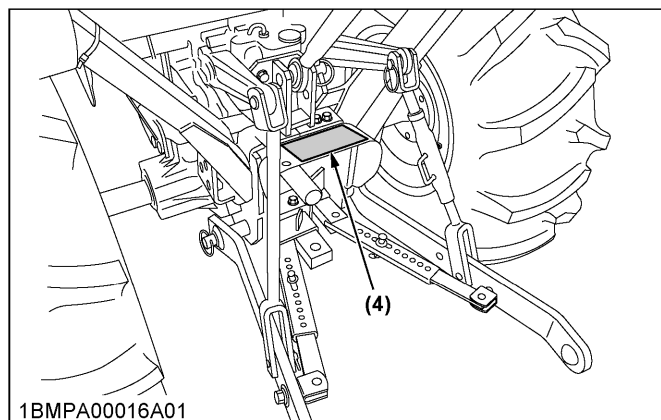
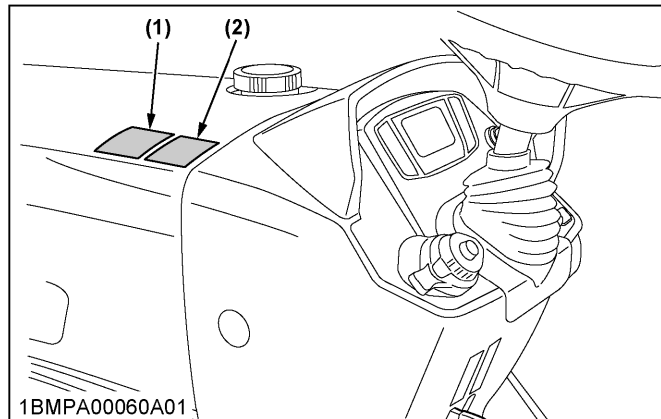
TO AVOID PERSONAL INJURY:

1. Attach pulled or towed loads to the drawbar only.
2. Use the 3-point hitch only with equipment designed for 3-point hitch usage.

! WARNING

TO AVOID PERSONAL INJURY:

1. Keep PTO shield in place at all times.
2. Do not operate the PTO at speeds faster than the speed recommended by the implement manufacturer.
3. For trailing PTO-driven implements, set drawbar at towing position. (see operator's manual)


1BMPA00056A01enUS

SAFE OPERATION

CAB model

(1) Part No. 6F170-4742-1

(2) Part No. 6C820-4742-1

 WARNING

TO AVOID PERSONAL INJURY OR DEATH :

1. Read and understand the operator's manual before operation.
2. Before starting the engine, make sure that everyone is at a safe distance from the tractor and that the PTO is OFF.
3. Do not allow passengers on the tractor at any time.
4. Before allowing other people to use the tractor, have them read the operator's manual.
5. Check the tightness of all nuts and bolts regularly.
6. Keep all shields in place and stay away from all moving parts.
7. Lock the two brake pedals together before driving on the road.
8. Slow down for turns, or rough roads, or when applying individual brakes.
9. On public roads use SMV emblem and hazard lights, if required by local traffic and safety regulations.
10. Pull only from the drawbar.
11. Before dismounting, lower the implement to the ground, set the parking brake, stop the engine and remove the key.
12. Securely support tractor and implements before working underneath.

 WARNING

Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrester may be required. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.

(3) Part No. 6F170-4755-1

(5) Part No. 6F170-4753-1

 CAUTION

TO AVOID PERSONAL INJURY:
Do not put your hands into the lever guide slot, as the cruise lever will shift back swiftly when the brake pedal is applied.

 WARNING





TO AVOID INJURY OR DEATH FROM ROLL-OVER:
Always use seat belt when driving.

(4) Part No. 6F170-4751-2

 WARNING

TO AVOID PERSONAL INJURY OR DEATH: BEFORE STARTING THE ENGINE.


1. Make sure the parking brake is set.
2. Make sure the range gear shift lever (L-M-H) is in "NEUTRAL" position.
3. Make sure the cruise control lever is in "NEUTRAL" position (Far back position).

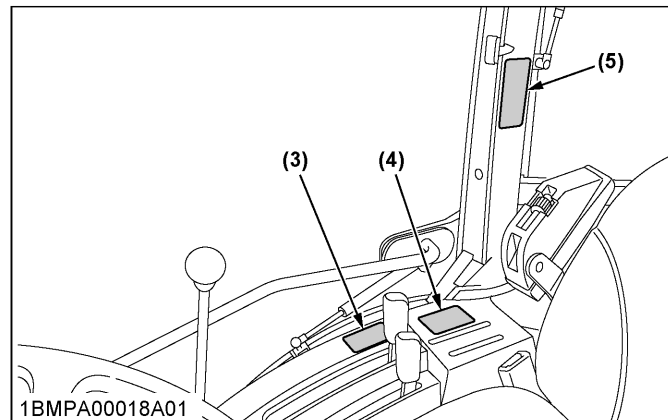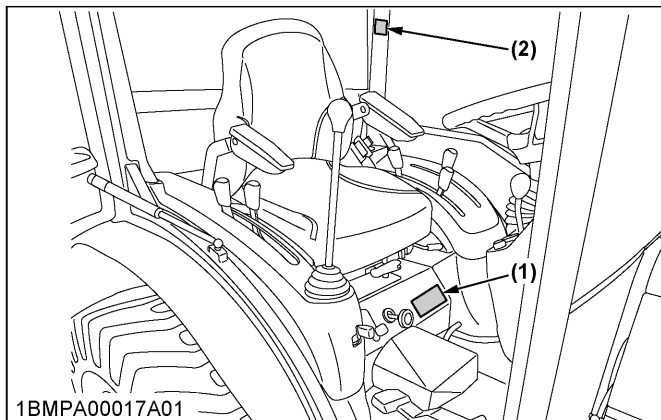


1BMPA00057A01enUS



CAB model

(1) Part No. 6F170-4743-1



	! WARNING
	BEFORE DISMOUNTING TRACTOR: 1. ALWAYS SET PARKING BRAKE. Leaving transmission in gear with the engine stopped will not prevent tractor from rolling. 2. PARK ON LEVEL GROUND WHENEVER POSSIBLE. If parking on a slope, position tractor across the slope. 3. LOWER ALL IMPLEMENTS TO THE GROUND. Failure to comply to this warning may allow the wheels to slip, and could cause injury or death. 4. LOCK SHUTTLE SHIFT LEVER IN NEUTRAL POSITION (if equipped) AND STOP THE ENGINE.


(2) Part No. 6F170-4754-1

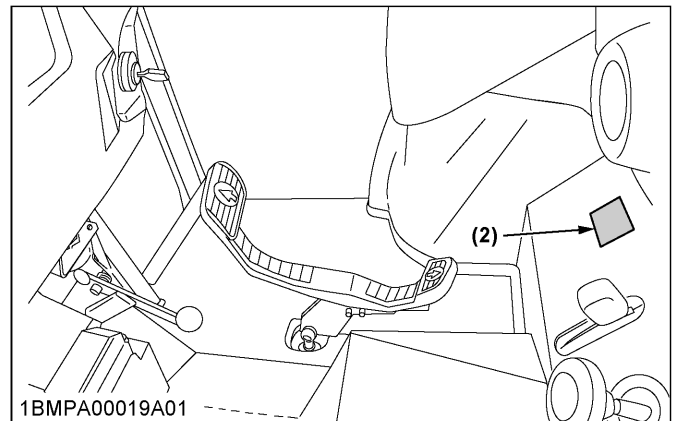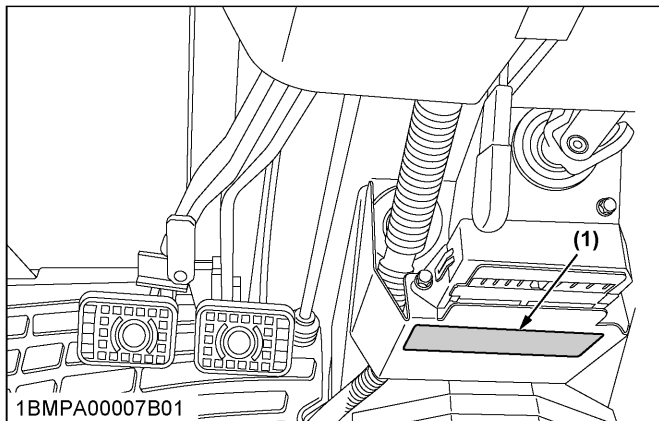California Proposition 65	
	! WARNING !
	Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.



(3) Part No. 6C200-4959-1

	! WARNING
	TO AVOID PERSONAL INJURY: 1. Attach pulled or towed loads to the drawbar only. 2. Use the 3-point hitch only with equipment designed for 3-point hitch usage.
	! WARNING
	TO AVOID PERSONAL INJURY: 1. Keep PTO shield in place at all times. 2. Do not operate the PTO at speeds faster than the speed recommended by the implement manufacturer. 3. For trailing PTO-driven implements, set drawbar at towing position. (see operator's manual)

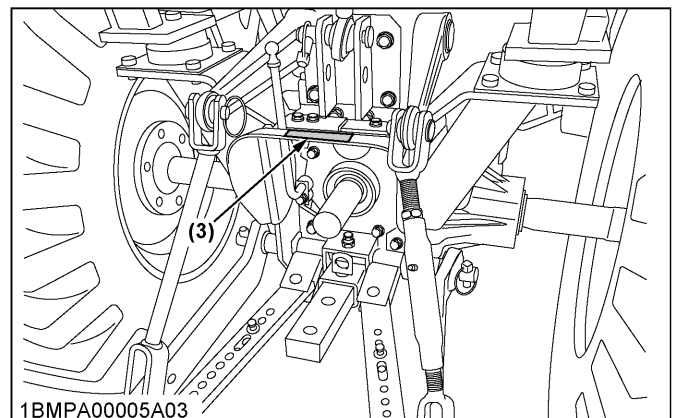

1BMPA00058A01enUS

SAFE OPERATION

CARE OF THE SAFETY LABELS

- Keep the safety labels clean and free from obstructing material.
- Clean the safety labels with soap and water, dry with a soft cloth.
- Replace damaged or missing safety labels with new labels from your local Kubota dealer.
- If a component with safety label(s) affixed is replaced with new part, make sure that the new label(s) is (are) attached in the same location(s) as the replaced component.
- Attach new safety labels by applying on a clean dry surface and pressing any bubbles to outside edge.

SERVICING OF TRACTOR

Your dealer has knowledge of your new machine and has the desire to help you get the most value from it. After reading this manual thoroughly, you will find that you can do some of the regular maintenance yourself. However, when in need of parts or major service, see your Kubota dealer.

For service, contact your local Kubota dealer.

When in need of parts, be prepared to give your dealer the product identification number (PIN), the CAB/ROPS serial number, and the engine serial number.


Locate the PIN and serial numbers now and fill in the following tables.

Date of purchase	
Name of dealer	

Tractor type	
PIN	


	Type	Serial No.
CAB/ROPS		
Engine		

[ROPS model]

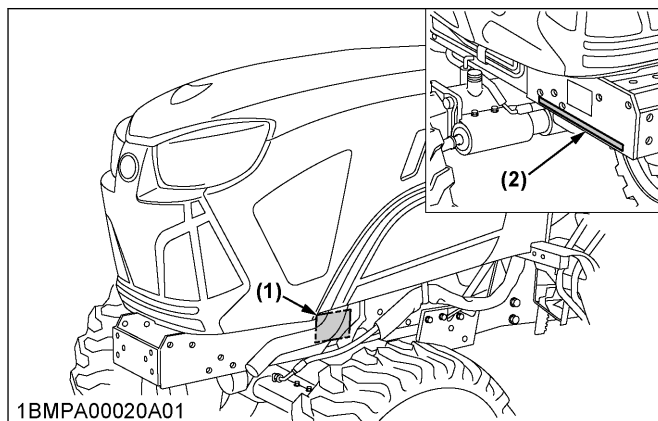


- (1) Identification plate
- (2) Product identification number

[CAB model]

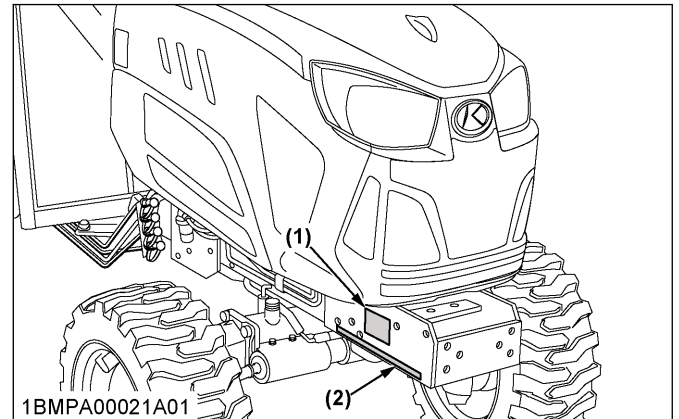


- (1) Identification plate
- (2) Product identification number

All models

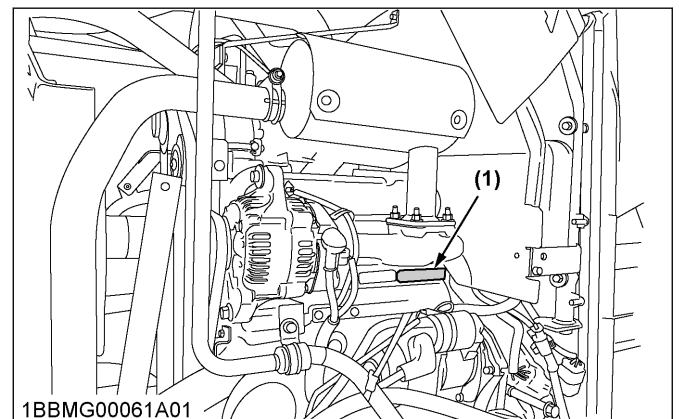


- (1) Engine serial number

[ROPS model]

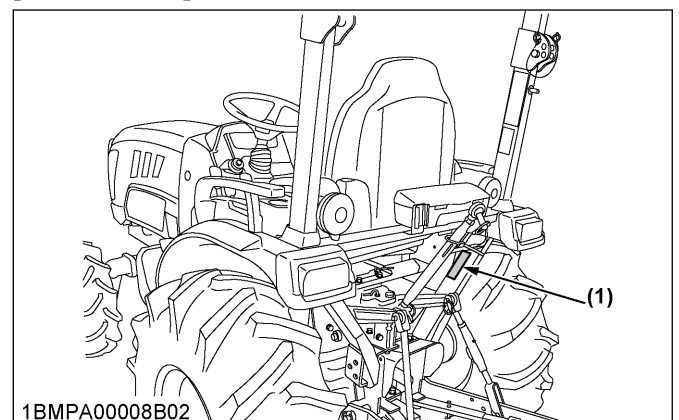

- (1) ROPS identification plate (ROPS serial number)

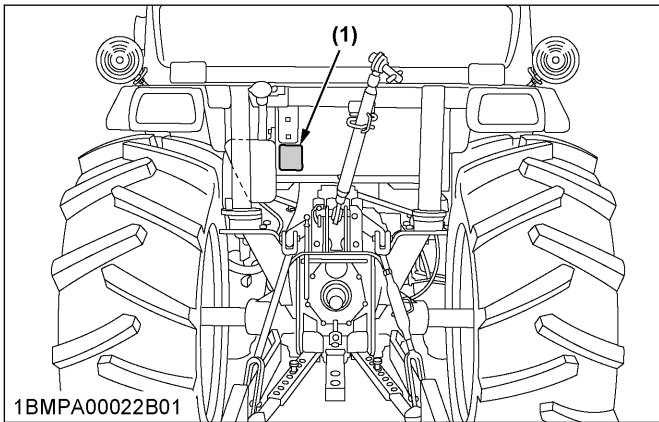[CAB model]

(1) CAB identification plate (CAB serial number)

WARRANTY

This tractor is warranted under the **Kubota Limited Express Warranty**, a copy of which may be obtained from your selling dealer.

No warranty shall, however, apply if the tractor has not been serviced and maintained according to the instruction given in the operator's manual, even if it is within the warranty period.

SCRAPPING THE TRACTOR AND ITS PROCEDURE

To put the tractor out of service, follow the local rules and regulations of the country or territory where you scrap it.

If you have questions, contact your local Kubota dealer.

SPECIFICATIONS

SPECIFICATION TABLE FOR ROPS MODEL

Model			LX2620HSD	LX2620SUHSD	
PTO power*1		kW (HP)	14.5 (19.5)		
Engine	Maker		Kubota		
	Model		D1305-E4-D36R		
	Type		Indirect Injection. Vertical, water-cooled 4 cycle diesel		
	Number of cylinders		3		
	Bore and stroke		mm (in.)	φ78 × 88 (φ3.1 × 3.5)	
	Total displacement		cc (cu. in.)	1261 (77.0)	
	Engine gross power*2		kW (HP)	18.5 (24.8)	
	Rated revolution		rpm	2500	
	Low idling revolution		rpm	1100	
	Maximum torque		N·m (ft·lb)	84.0 (62.0)	
	Battery		12 V, RC : 80min, CCA : 430 A		
Capacities	Fuel tank		L (U.S.gals.)	27 (7.1)	
	Engine crankcase (with filter)		L (U.S.qts.)	4.0 (4.2)	
	Engine coolant		L (U.S.qts.)	4.3 (4.5)	
	Transmission case		L (U.S.gals.)	15 (4.0)	
Dimensions	Overall length (without 3P)		mm (in.)	2585 (101.8)	
	Overall width (min. tread)		mm (in.)	1365 (53.7)	
	Overall height		mm (in.)	2245 (88.4)	
	Wheel base		mm (in.)	1666 (65.6)	
	Minimum ground clearance		mm (in.)	370 (14.6)	
	Tread	Front	mm (in.)	935 (36.8)	
Rear		mm (in.)	1050 (41.3)		
Weight		kg (lbs.)	835 (1840)		
Clutch			Not applicable		
Traveling system	Tires	Front	7-12		
		Rear	12.4-16		

(Continued)

SPECIFICATIONS

Model			LX2620HSD	LX2620SUHSD	
Traveling system	Steering		Hydrostatic type power steering		
	Transmission		Main-hydrostatic transmission, 3 range gear shift (3 forward, 3 reverse)		
	Brake		Wet disk type		
	Minimum turning radius (with brake)	m (feet)	2.1 (6.9)		
Hydraulic unit	Hydraulic control system		Position control		
	Pump capacity	L / min (gals / min)	33.1 (8.7)		
	3-point hitch		SAE Category 1		
	Max. lift force	At lift points	kg (lbs.)	970 (2139)	
		24 in. behind lift point	kg (lbs.)	760 (1676)	
PTO	Rear-PTO		SAE 1-3/8, 6 splines		
	PTO / Engine speed	rpm	1 speed 540 / 2398		
	Mid-PTO		USA No. 5 (Kubota 10-tooth) involute spline	—	
	PTO / Engine speed	rpm	1 speed 2500 / 2500	—	

The company reserves the right to change the specifications without notice.

*1 manufacturer's estimate

*2 SAE J1995. The engine output value indicated on the EPA exhaust gas label is the ISO 8178 net value without a cooling fan.

- LX2620HSD: 18.2 kW
- LX2620SUHSD: 18.2 kW

SPECIFICATION TABLE FOR CAB MODEL

Model			LX2620HSDC	LX2620HSDCC	
PTO power*1		kW (HP)	14.5 (19.5)		
Engine	Maker		Kubota		
	Model		D1305-E4-D26Q		
	Type		Indirect Injection. Vertical, water-cooled 4 cycle diesel		
	Number of cylinders		3		
	Bore and stroke		mm (in.)	$\phi 78 \times 88$ ($\phi 3.1 \times 3.5$)	
	Total displacement		cc (cu. in.)	1261 (77.0)	
	Engine gross power*2		kW (HP)	18.5 (24.8)	
	Rated revolution		rpm	2500	
	Low idling revolution		rpm	1100	
	Maximum torque		N·m (ft·lb)	84.0 (62.0)	
	Battery		12 V, RC : 80 min, CCA : 430 A		
	Capacities	Fuel tank		L (U.S.gals.)	32 (8.4)
Engine crankcase (with filter)		L (U.S.qts.)	4.0 (4.2)		
Engine coolant		L (U.S.qts.)	5.4 (5.7)		
Transmission case		L (U.S.gals.)	15 (4.0)		
Dimensions	Overall length (without 3P)		mm (in.)	2640 (103.9)	
	Overall width (min. tread)		mm (in.)	1365 (53.7)	
	Overall height		mm (in.)	2150 (84.6)	
	Wheel base		mm (in.)	1666 (65.6)	
	Minimum ground clearance		mm (in.)	370 (14.6)	
	Tread	Front	mm (in.)	935 (36.8)	
Rear		mm (in.)	1050 (41.3)		
Weight		kg (lbs.)	1050 (2314)		
Clutch			Not applicable		
Traveling system	Tires	Front	7-12		
		Rear	12.4-16		
	Steering		Hydrostatic type power steering		
	Transmission		Main-hydrostatic transmission, 3 range gear shift (3 forward, 3 reverse)		
	Brake		Wet disk type		
Minimum turning radius (with brake)		m (feet)	2.1 (6.9)		

(Continued)

SPECIFICATIONS

Model			LX2620HSDC	LX2620HSDCC	
Hydraulic unit	Hydraulic control system		Position control		
	Pump capacity	L / min (gals / min)	33.1 (8.7)		
	3-point hitch		SAE Category 1		
	Max. lift force	At lift points	kg (lbs.)	970 (2139)	
		24 in. behind lift point	kg (lbs.)	760 (1676)	
PTO	Rear-PTO		SAE 1-3/8, 6 splines		
	PTO / Engine speed	rpm	1 speed 540 / 2398		
	Mid-PTO		USA No. 5 (Kubota 10-tooth) involute spline		
	PTO / Engine speed	rpm	1 speed 2500 / 2500		

The company reserves the right to change the specifications without notice.

*1 manufacturer's estimate

*2 SAE J1995. The engine output value indicated on the EPA exhaust gas label is the ISO 8178 net value without a cooling fan.

- LX2620HSDC: 18.2 kW
- LX2620HSDCC: 18.2 kW

TRAVELING SPEEDS

Model		LX2620HSD, LX2620SUHSD, LX2620HSDC, LX2620HSDCC			
Tire size (Rear)		12.4 - 16 Farm		13.6 - 16 Turf	
	Range gear shift lever	km / h	mph	km / h	mph
Forward	Low	0 to 5.7	0 to 3.6	0 to 6.0	0 to 3.7
	Middle	0 to 8.5	0 to 5.3	0 to 8.9	0 to 5.5
	High	0 to 18.0	0 to 11.2	0 to 18.9	0 to 11.7
Reverse	Low	0 to 4.3	0 to 2.7	0 to 4.5	0 to 2.8
	Middle	0 to 6.4	0 to 3.9	0 to 6.7	0 to 4.1
	High	0 to 13.5	0 to 8.4	0 to 15.0	0 to 8.8

Model		LX2620HSD, LX2620SUHSD, LX2620HSDC, LX2620HSDCC			
Tire size (Rear)		12.4 - 16 Industry		14-17.5 R14	
	Range gear shift lever	km / h	mph	km / h	mph
Forward	Low	0 to 5.6	0 to 3.5	0 to 5.5	0 to 3.5
	Middle	0 to 8.3	0 to 5.2	0 to 8.2	0 to 5.1
	High	0 to 17.6	0 to 10.9	0 to 17.3	0 to 10.8
Reverse	Low	0 to 4.2	0 to 2.6	0 to 4.2	0 to 2.6
	Middle	0 to 6.2	0 to 3.8	0 to 6.1	0 to 3.8
	High	0 to 13.2	0 to 8.2	0 to 13.1	0 to 8.1

Model		LX2620HSD, LX2620SUHSD, LX2620HSDC, LX2620HSDCC			
Tire size (Rear)		15.0 - 19.5 Industry		15.0 - 19.5 R14	
	Range gear shift lever	km / h	mph	km / h	mph
Forward	Low	0 to 6.1	0 to 3.8	0 to 6.1	0 to 3.8
	Middle	0 to 9.2	0 to 5.8	0 to 9.2	0 to 5.8
	High	0 to 19.5	0 to 12.1	0 to 19.5	0 to 12.1
Reverse	Low	0 to 4.6	0 to 2.9	0 to 4.6	0 to 2.9
	Middle	0 to 6.9	0 to 4.3	0 to 6.9	0 to 4.3
	High	0 to 14.6	0 to 9.1	0 to 14.6	0 to 9.1

At rated engine rpm


The company reserves the right to change the specification without notice.

IMPLEMENT LIMITATIONS

The tractor has been thoroughly tested for proper performance with implements sold or approved by Kubota. Using implements that are not sold or approved by Kubota, which exceed the maximum specifications listed in the following table, or which are otherwise unfit for use with the tractor may result in malfunctions or failures of the tractor, damage to other property and injury to the operator or others. Any malfunctions or failures of the tractor resulting from use with improper implements are not covered by the warranty.

Tread (max. width) with farm tires		Lower link end max. lifting capacity: W_0
Front	Rear	
935 mm (36.8 in.)	1050 mm (41.3 in.)	360 kg (800 lbs.)

Actual figures		
Implement weight and/or size: W_1	Max. drawbar load: W_2	Trailer loading weight max. capacity: W_3
As in the following list (See IMPLEMENT SPECIFICATION TABLE on page 33.)	500 kg (1100 lbs.)	1500 kg (3300 lbs.)

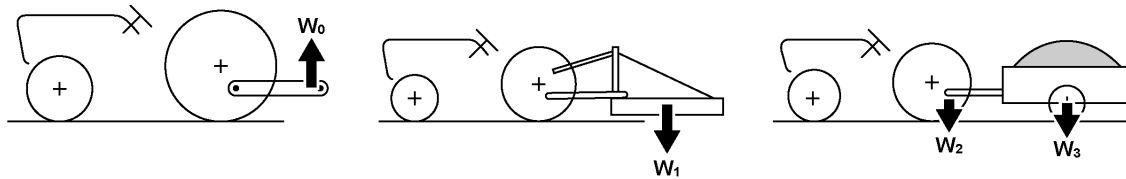

1RVNX00001A02

W_0 Lower link end max. loading weight - the max. allowable load which can be put on the lower link end

W_1 Implement weight - the implement's weight which can be put on the lower link

W_2 Max. drawbar load

W_3 Trailer loading weight - the max. loading weight for trailer (with trailer's weight)

NOTE :

- Implement size may vary depending on soil operating conditions.
- For selecting implements, contact your local dealer.
- Strictly follow the instructions outlined in the operator's manual of the mounted or trailed machinery or trailer, and do not operate the combination of tractor-machine or tractor-trailer unless all instructions have been followed.
- This tractor is not designed, nor intended to be used in a forestry application. Forestry applications present the following hazards:
 - Toppling trees, primarily in the case of when a rear-mounted tree-grab crane is mounted at the rear of the tractor
 - Penetrating objects in the operator's enclosure, primarily in the case of when a winch is mounted at the rear of the tractor

To address with these and other related hazards, the tractor requires additional and optional equipment such as an operator-protective structure (OPS) and a falling object-protective structure (FOPS). Optional equipment such as an OPS and a FOPS, however, are not available for this tractor.

Without optional equipment such as an OPS and a FOPS, the use of the tractor is limited to tractor-specific applications like transport and stationary work.

IMPLEMENT SPECIFICATION TABLE

Implement		Remarks		LX2620
Mower	Mid-mount	Max. cutting width	mm (in.)	1830 (72)
		Max. weight	kg (lbs.)	205 (451)
	Rotary-cutter (1 Blade)	Max. cutting width	mm (in.)	1220 (48)
		Max. weight	kg (lbs.)	227 (500)
	Rear-mount (2 or 3 Blades)	Max. cutting width	mm (in.)	1830 (72)
Max. weight		kg (lbs.)	227 (500)	
	Flail-mower	Max. cutting width	mm (in.)	1220 (48)
	Sickle bar	Max. cutting width	mm (in.)	1524 (60)
Rotary tiller		Max. tilling width	mm (in.)	1270 (50)
		Max. weight	kg (lbs.)	250 (550)
		Slip clutch		Necessary
Bottom plow		Max. size	mm (in.)	305 (12) × 2
Disc plow		Max. size	mm (in.)	559 (22) × 2
Cultivator		Max. size	mm (in.)	1524 (60) 1 Row
Disc harrow		Max. harrowing width	mm (in.)	1676 (66)
		Max. weight	kg (lbs.)	250 (550)
Sprayer		Max. tank capacity	L (U.S.gals.)	246 (65)
Front blade		Max. cutting width	mm (in.)	1676 (66)
		Sub frame		Necessary
Rear blade		Max. cutting width	mm (in.)	1676 (66)
		Max. weight	kg (lbs.)	250 (550)
Front loader		Max. lifting capacity	kg (lbs.)	420 (926)
		Max. width	mm (in.)	1524 (60)
Box blade		Max. cutting width	mm (in.)	1372 (54)
		Max. weight	kg (lbs.)	227 (500)
Back hoe		Max. digging depth	mm (in.)	2295 (90)
		Max. weight	kg (lbs.)	400 (880)
		Sub frame		Necessary
Snow blower		Max. working width	mm (in.)	1542 (60)
		Max. weight	kg (lbs.)	227 (500)
Trailer		Max. load capacity	kg (lbs.)	1500 (3300)
		Max. drawbar load	kg (lbs.)	500 (1100)


NOTE :

- Implement size may vary depending on soil operating conditions.

INSTRUMENT PANEL AND CONTROLS

SWITCHES AND HAND CONTROLS


[ROPS model]

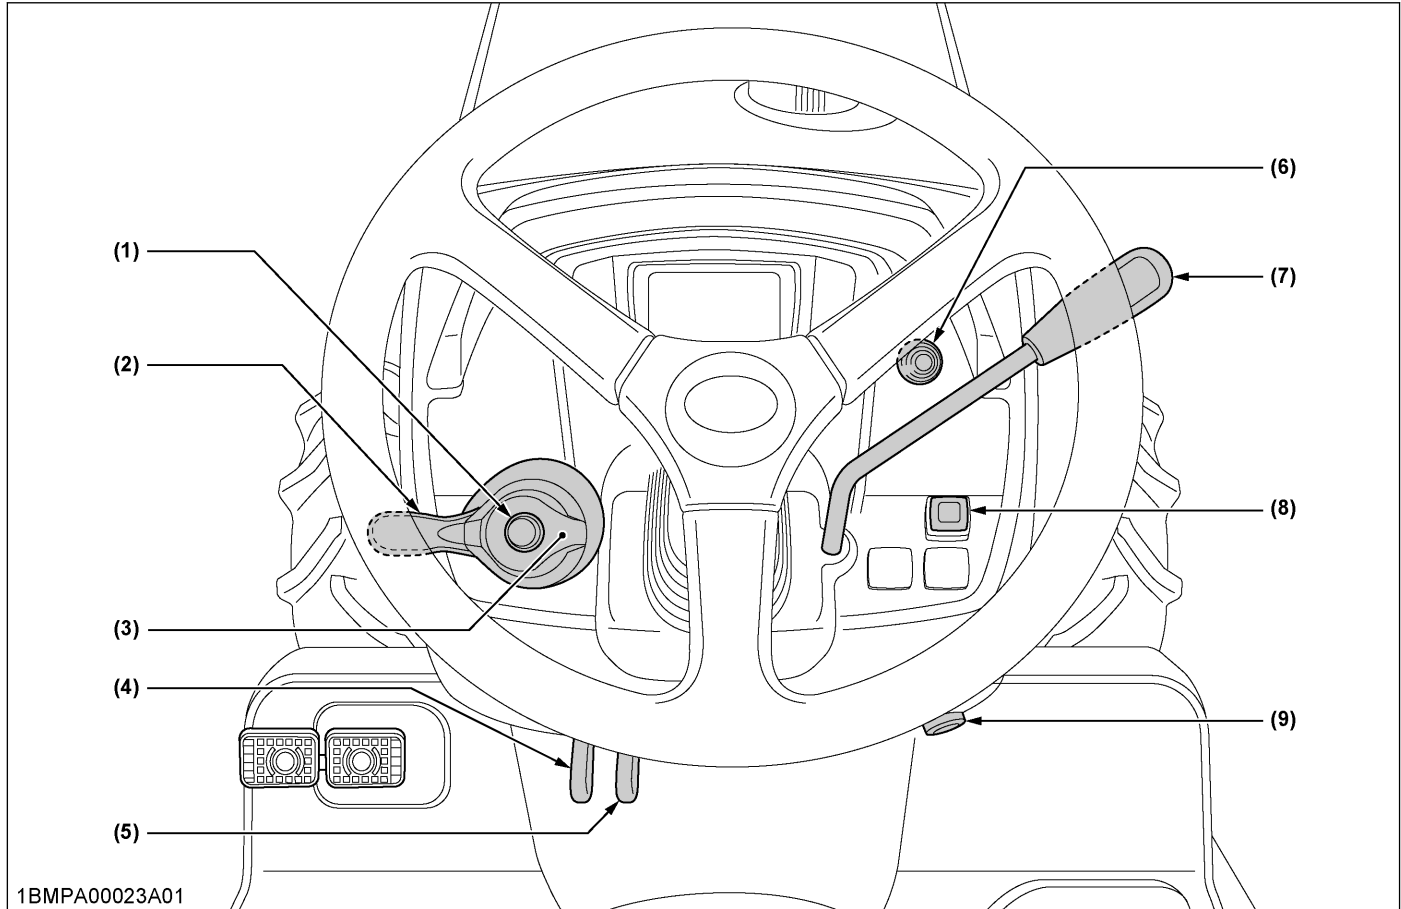

1BMPA00023A01

(1) Hazard light switch.....	51	(6) Display switch (Engine rpm, PTO speed)	58
(2) Turn signal light switch.....	51	(7) Hand throttle lever	54
(3) Headlight switch.....	50	(8) Stationary PTO	66
(4) Parking brake lever.....	52	(9) Key switch.....	40
(5) Speed set lever [except LX2620SU].....	55		

[CAB model]

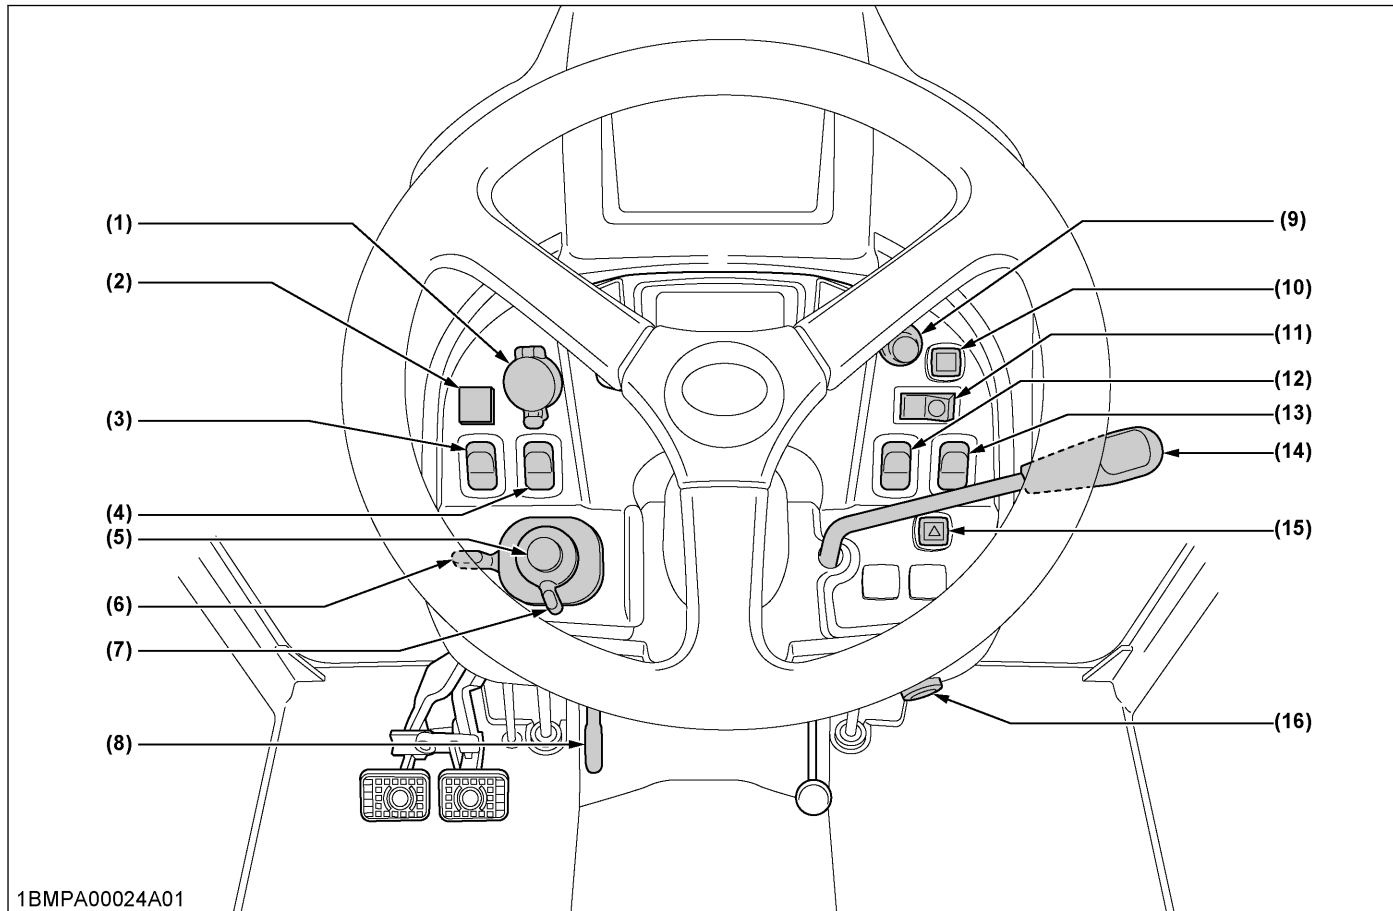


1BMPA00024A01

(1) Electrical outlet	62	(9) Display switch (Engine rpm, PTO speed)	58
(2) Beacon switch (if equipped)		(10) Stationary PTO	66
(3) Front work light switch	87	(11) Defogger switch	91
(4) Rear work light switch (if equipped)	87	(12) Front wiper and washer switch	87
(5) Horn button	52	(13) Rear wiper and washer switch	87
(6) Turn signal light switch	51	(14) Hand throttle lever	54
(7) Headlight switch	50	(15) Hazard light switch	51
(8) Parking brake lever	52	(16) Key switch	40

NOTE :

- See the following figure for beacon connector.


[LX2620HSDCC only]

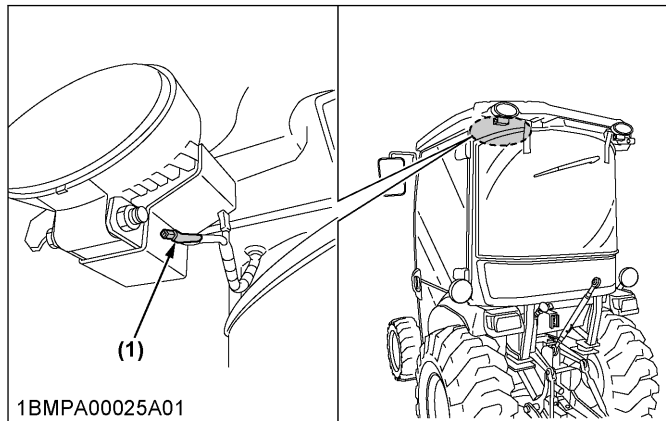

1BMPA00025A01

(1) Beacon connector


INSTRUMENT PANEL

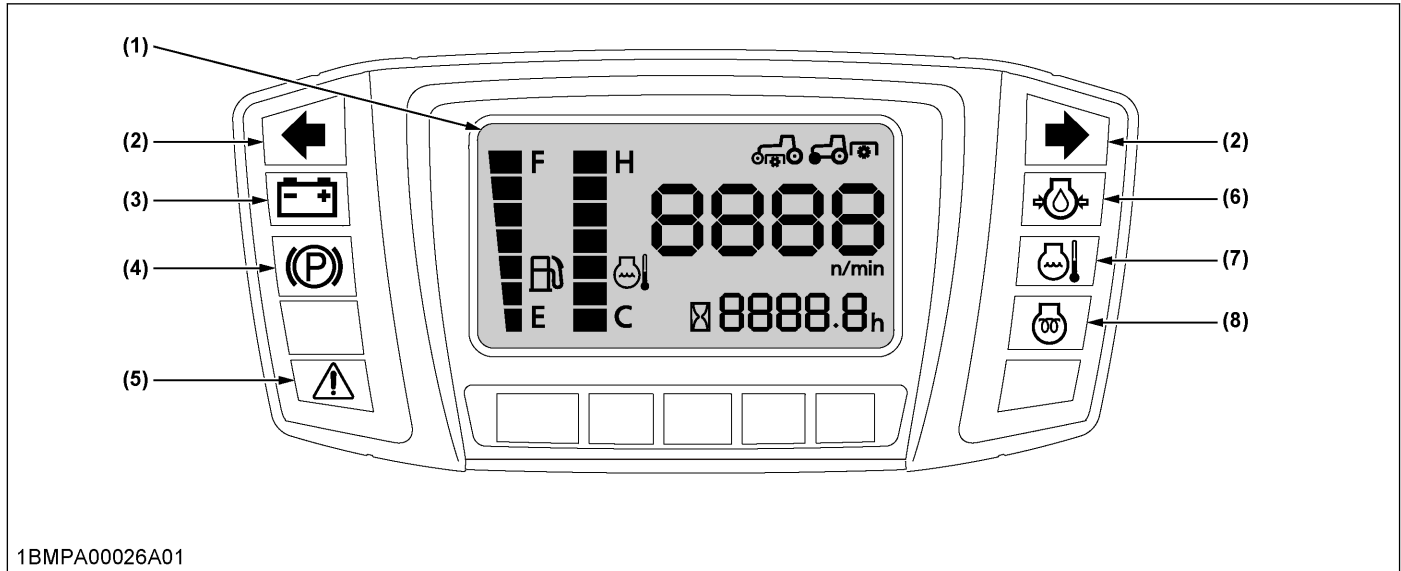

- | | | |
|--|--|----|
| (1) Liquid crystal display | (5) Master system warning indicator | 57 |
| (2) Turn signal indicator..... | (6) Engine oil pressure warning indicator..... | 57 |
| Hazard light indicator..... | (7) Engine overheat warning indicator | 57 |
| (3) Electrical charge warning indicator..... | (8) Glow plug indicator | 40 |
| (4) Parking brake warning indicator | | 40 |

FOOT AND HAND CONTROLS


[ROPS model]

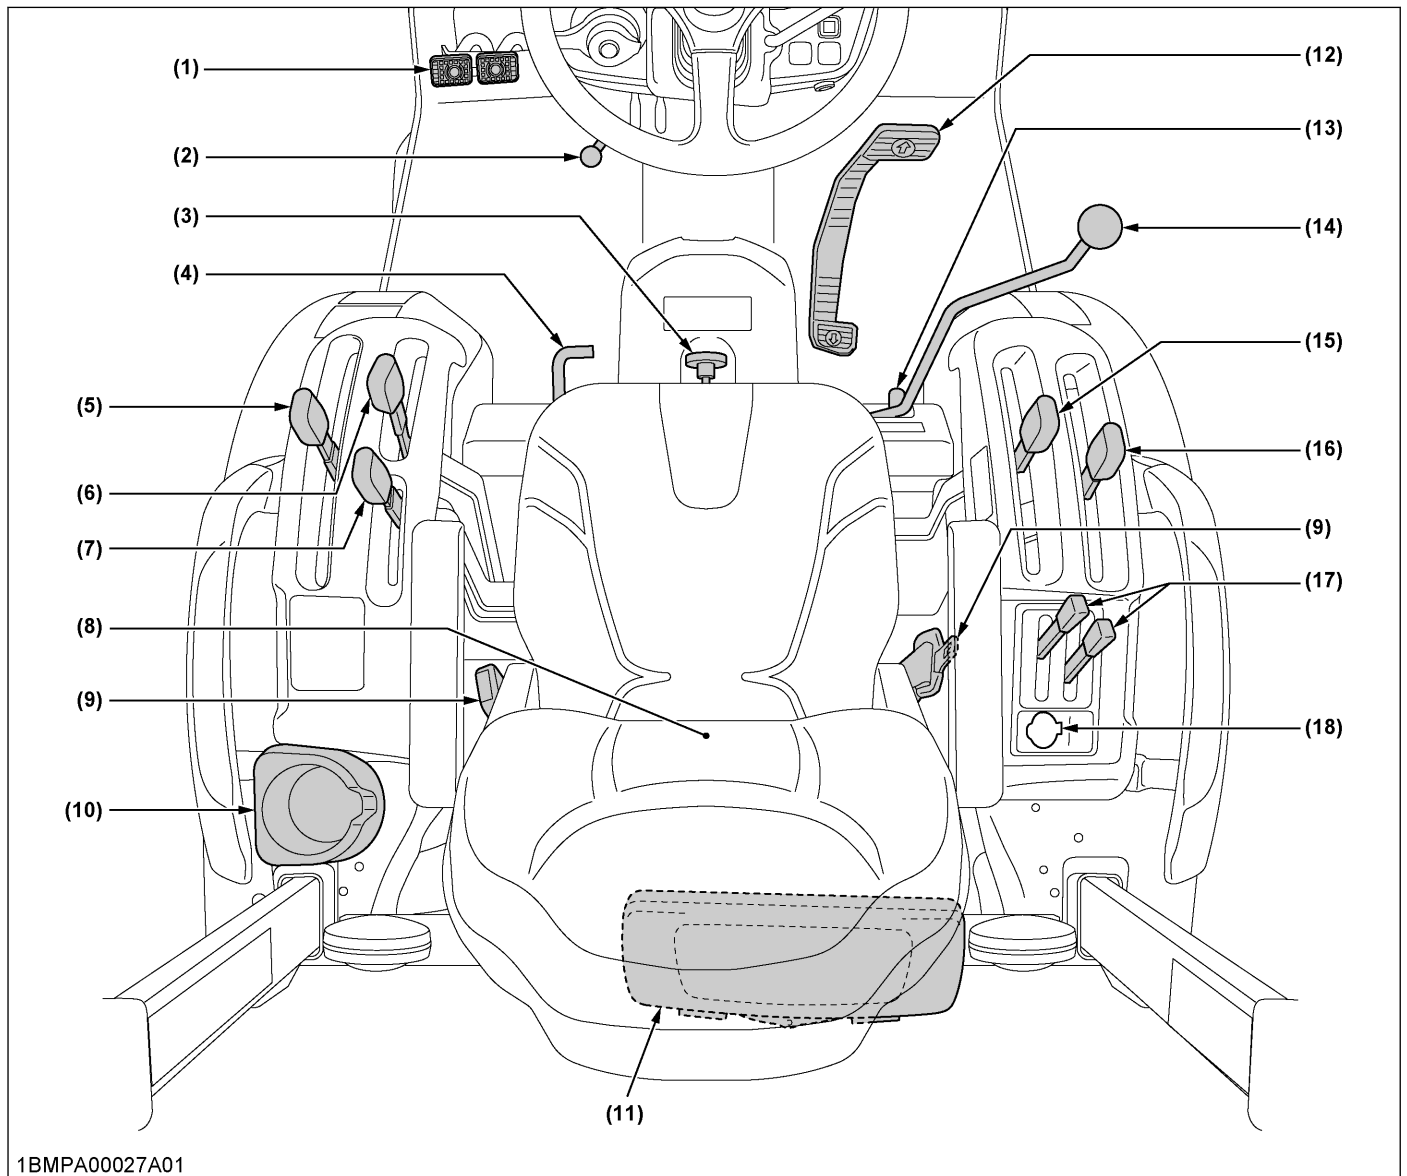

1BMPA00027A01

(1) Brake pedal.....	52	(10) Cup holder	
(2) Steering wheel tilt pedal [except LX2620SU].....	50	(11) Tool-box	
(3) 3-point hitch lowering speed knob	73	(12) Speed control pedal	55
(4) Differential lock pedal	60	(13) Loader lock lever	76
(5) Range gear shift lever.....	53	(14) Loader control lever	75
(6) PTO clutch lever	65	(15) Front wheel drive lever	54
(7) PTO select lever [except LX2620SU]	64	(16) Position control lever	73
(8) Operator's seat	48	(17) Remote control valve lever (if equipped)	77
(9) Seat belt.....	50	(18) Electrical outlet	62

[CAB model]

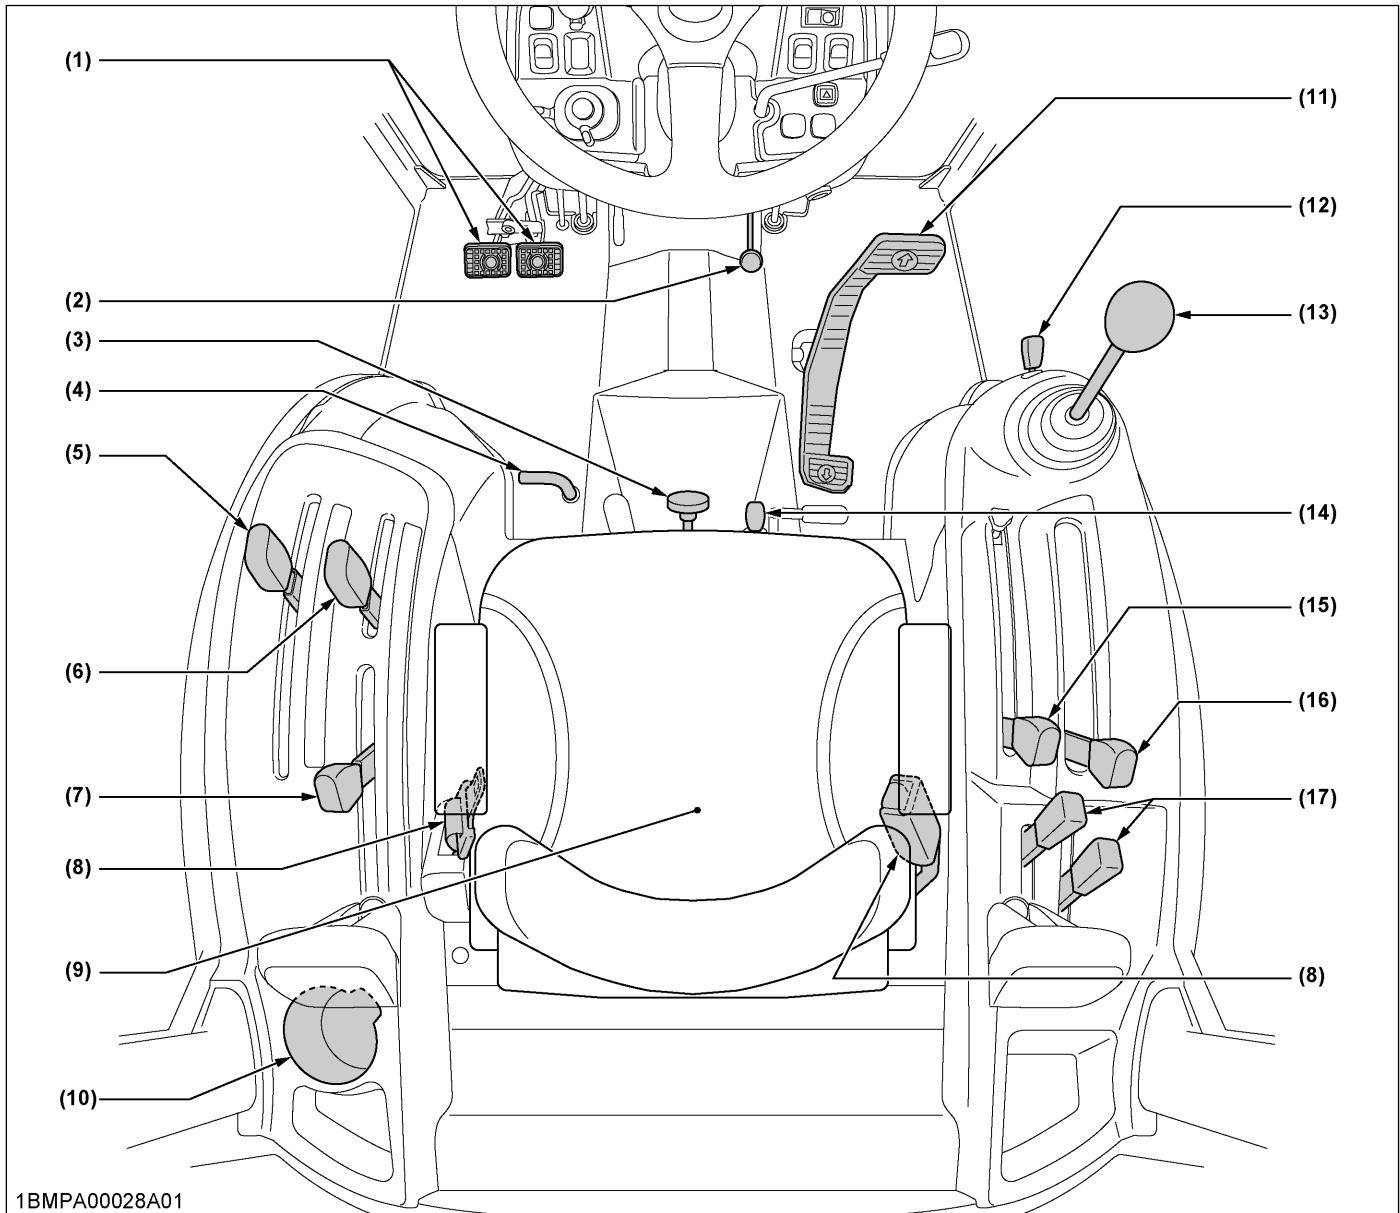

1BMPA00028A01

(1) Brake pedal.....	52	(10) Cup holder.....	
(2) Steering wheel tilt pedal.....	50	(11) Speed control pedal.....	55
(3) 3-point hitch lowering speed knob.....	73	(12) Loader lock lever.....	76
(4) Differential lock pedal.....	60	(13) Loader control lever.....	75
(5) Range gear shift lever.....	53	(14) Front wheel drive lever.....	54
(6) PTO clutch lever.....	65	(15) Position control lever.....	73
(7) PTO select lever.....	64	(16) Cruise control lever.....	56
(8) Seat belt.....	50	(17) Remote control valve lever (if equipped).....	77
(9) Operator's seat.....	48		

PRE-OPERATION CHECK

DAILY CHECK



WARNING

To avoid personal injury or death:

- Check and service the tractor on a level surface with the engine shut off, the parking brake “ON” and the implement lowered to the ground.

Before operating the tractor, check the following items to prevent malfunctions or accidents from occurring.

Check item

- Walk around inspection
- Check engine oil level
- Check transmission oil level
- Check coolant level
- Check washer liquid level
- Clean grill and radiator screen
- Clean air conditioner condenser screen [CAB model only]
- Check air cleaner evacuator valve (when used in a dusty place)
- Check parking brake lever
- Check brake pedal
- Check indicators, gauges and meter
- Check lights
- Check wire harness
- Check seat belt
- Check ROPS and CAB
- Check movable parts
- Refuel
(See Checking and refueling on page 100.)
- Care of the safety labels
(See SAFETY LABELS on page 18.)

OPERATING THE ENGINE

WARNING

To avoid personal injury or death:

- Read and understand the safe operation section. (See SAFE OPERATION on page 11.)
- Read and understand the safety labels located on the tractor.
- To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.
- Never start the engine while standing on the ground. Start the engine only from operator's seat.
- Make it a rule to set all shift levers to the "NEUTRAL" positions and to place the PTO clutch lever in "OFF" position before starting the engine.

IMPORTANT :

- Do not use starting fluid or ether.
- To protect the battery and the starter, make sure that the starter is not continuously turned for more than 10 seconds.


STARTING THE ENGINE

1. Make sure the parking brake is set.
 - a. Interlock the brake pedals.
 - b. Depress the brake pedals.
 - c. Latch the brake pedals with the parking brake lever.

NOTE :


- When the parking brake is set while the key switch is "ON", the parking brake warning indicator light on the Easy Checker will turn on.

[ROPS model]

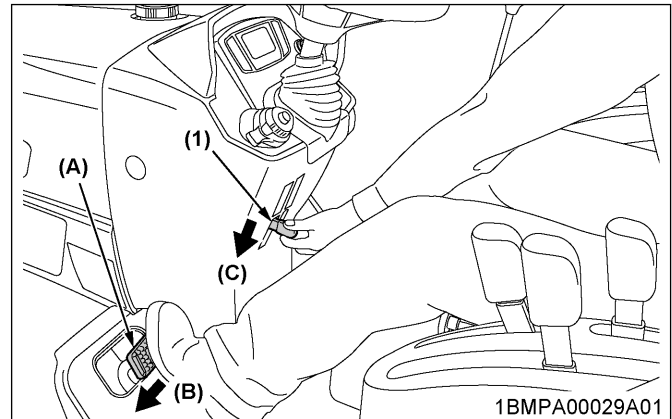


- (1) Parking brake lever
- (A) Interlock the brake pedals
- (B) Depress
- (C) Pull down

[CAB model]

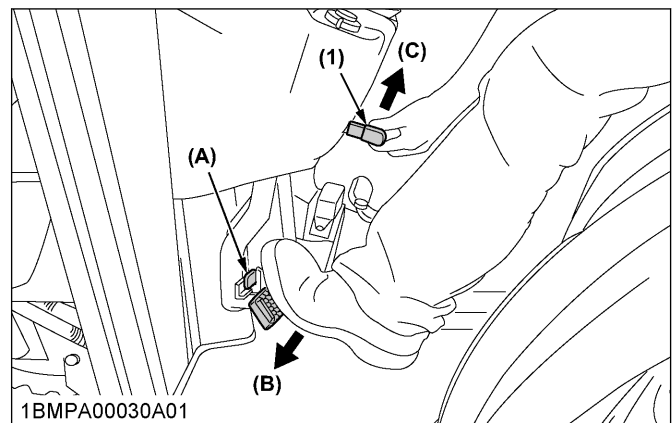

- (1) Parking brake lever
- (A) Interlock the brake pedals
- (B) Depress
- (C) Pull up

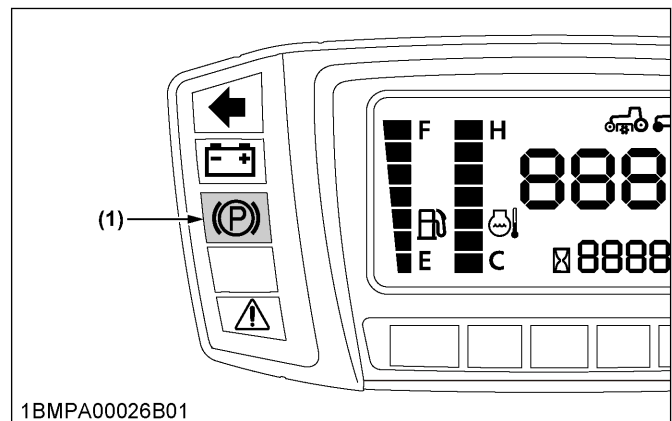


- (1) Parking brake warning indicator

IMPORTANT :

- It is recommended that the operator practices engaging and disengaging the parking brake on a flat surface without the engine running before operating the tractor for the first time.


2. Place the PTO clutch lever in the "OFF" position.

[ROPS model]

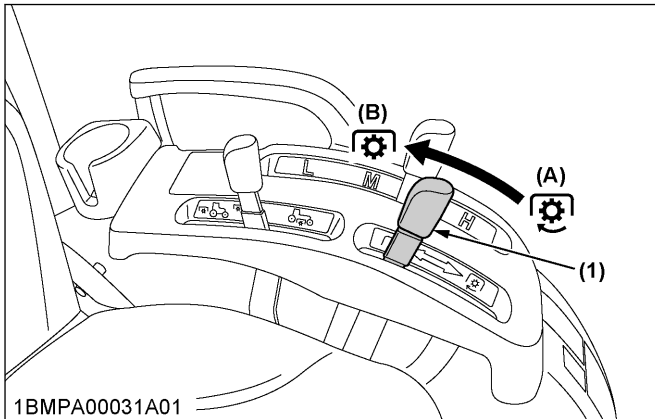

(1) PTO clutch lever
 (A) "ON" "ENGAGE"
 (B) "OFF" "DISENGAGE"

[CAB model]

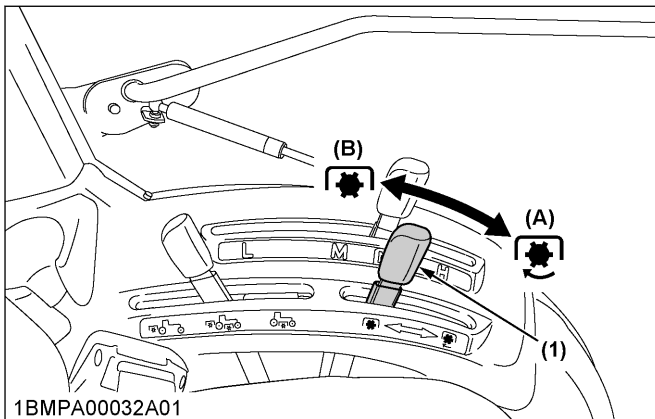


(1) PTO clutch lever
 (A) "ON" "ENGAGE"
 (B) "OFF" "DISENGAGE"

3. Place the travel speed control device in the "OFF" position or the "NEUTRAL" position.

• **[ROPS model]**

- Place the speed set lever in "OFF" position. [except LX2620SU]
- Place the speed control pedal in the "NEUTRAL" position.
- Place the range gear shift lever in the "NEUTRAL" position.

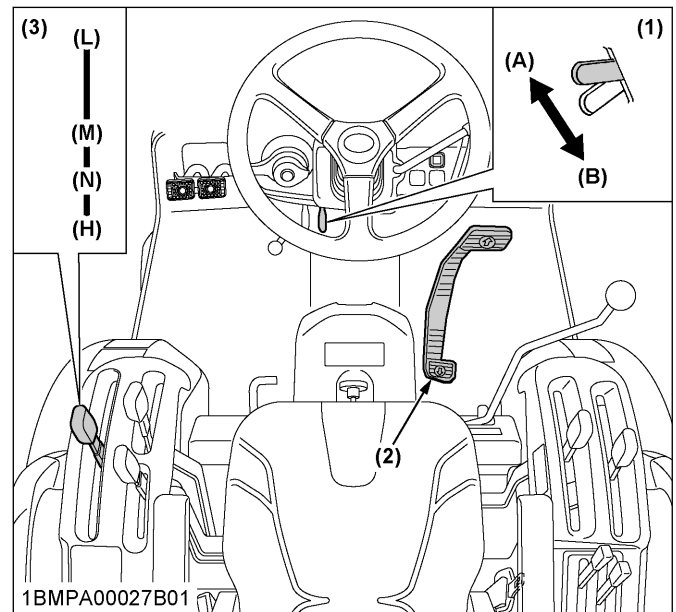


(1) Speed set lever [except LX2620SU]
 (2) Speed control pedal
 (3) Range gear shift lever
 (A) "OFF"
 (B) "ON"
 (L) "LOW"
 (M) "MIDDLE"
 (N) "NEUTRAL" position
 (H) "HIGH"

NOTE :

- Depress the both brake pedals together, doing so the speed set lever automatically returns to the "OFF" position.
- By removing your foot from the speed control pedal, it will allow the pedal to automatically return to the "NEUTRAL" position.

• **[CAB model]**

- Make sure the cruise control lever is in the "NEUTRAL" position.
- Place the speed control pedal in the "NEUTRAL" position.
- Place the range gear shift lever in the "NEUTRAL" position.

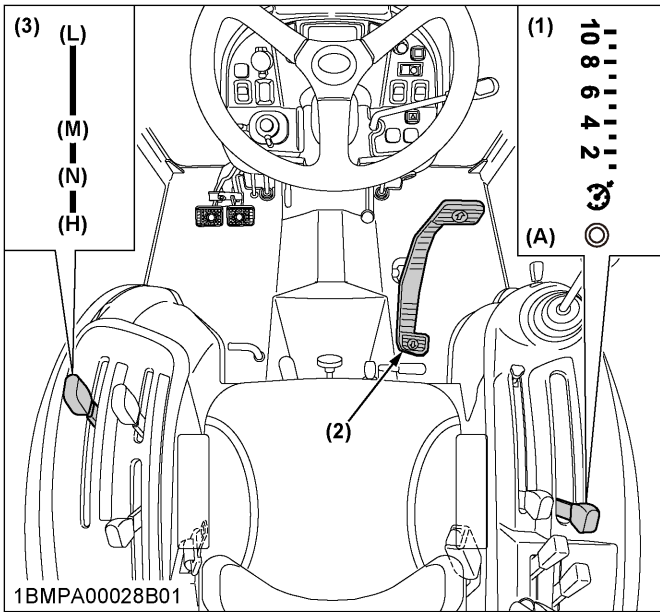


- | | |
|----------------------------|-------------------------------|
| (1) Cruise control lever | (A) Cruise "NEUTRAL" position |
| (2) Speed control pedal | (L) "LOW" |
| (3) Range gear shift lever | (M) "MIDDLE" |
| | (N) "NEUTRAL" position |
| | (H) "HIGH" |

NOTE :

- Depress the both brake pedals together, doing so the cruise control lever automatically returns to the "OFF" position.
- By removing your foot from the speed control pedal, it will allow the pedal to automatically return to the "NEUTRAL" position.


4. Lock the loader control lever in the "LOCK" position.

[ROPS model]

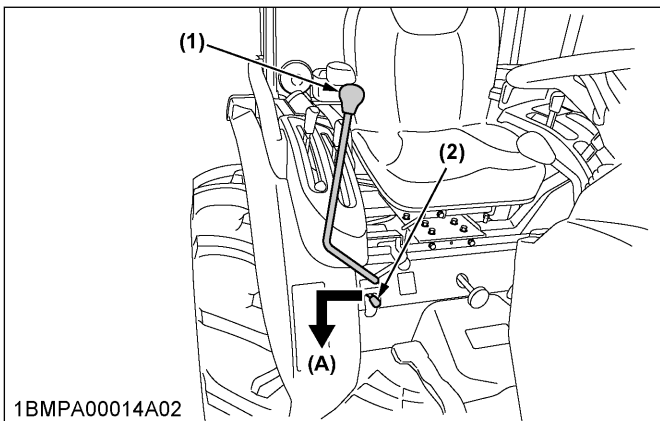

- | | |
|--------------------------|------------|
| (1) Loader control lever | (A) "LOCK" |
| (2) Lock lever | |


[CAB model]

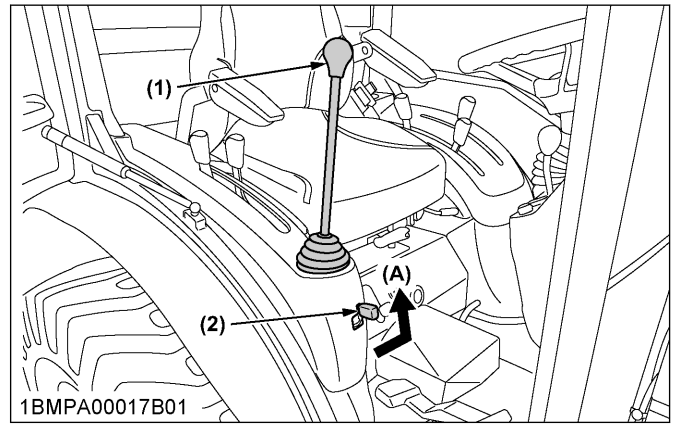

- | | |
|--------------------------|------------|
| (1) Loader control lever | (A) "LOCK" |
| (2) Lock lever | |


5. Place the position control lever in the "LOWEST" position.

[ROPS model]

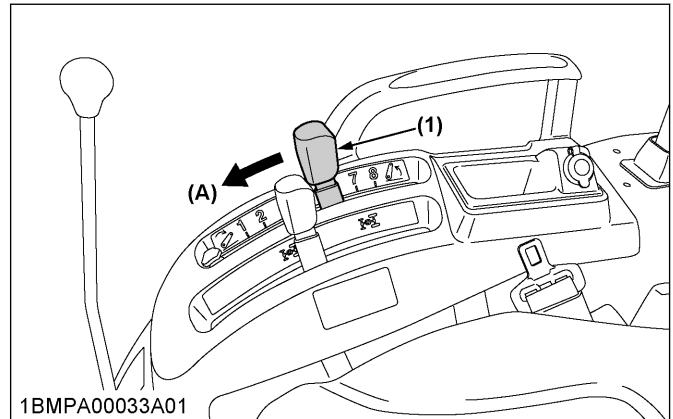

- | | |
|----------------------------|-----------------------|
| (1) Position control lever | (A) "LOWEST" position |
|----------------------------|-----------------------|


[CAB model]

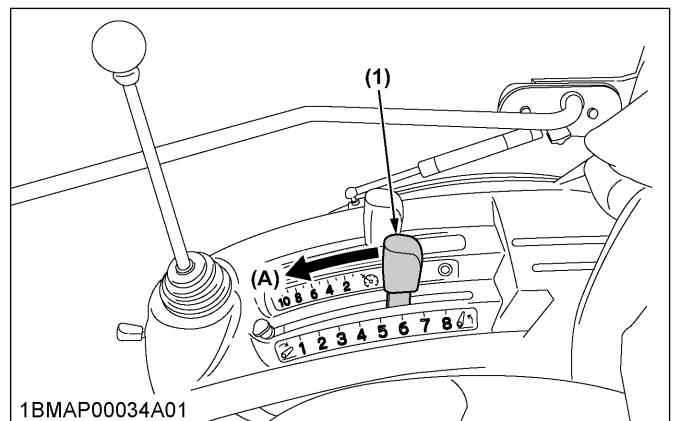

- | | |
|----------------------------|-----------------------|
| (1) Position control lever | (A) "LOWEST" position |
|----------------------------|-----------------------|


6. Set the throttle lever at the minimum speed position.

[ROPS model]

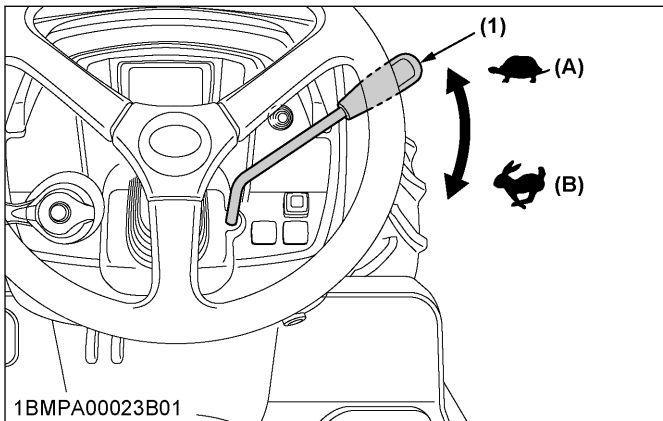

(1) Hand throttle lever (A) Decrease (B) Increase


[CAB model]

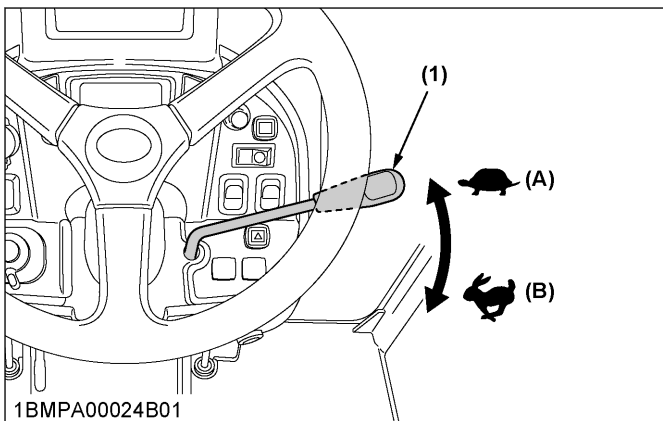

(1) Hand throttle lever (A) Decrease (B) Increase


7. Insert the key into the key switch and turn it "ON".
If the ambient temperature is below 0 °C (32 °F) and the engine is very cold, turn the key to the "PREHEAT" position.
For the appropriate preheating time, see to following table.

Temperature	Preheating time
Over 0 °C (32 °F)	2 to 3 sec.
0 to -5 °C (32 to 23 °F)	5 sec.
-5 to -15 °C (23 to 5 °F)	10 sec.

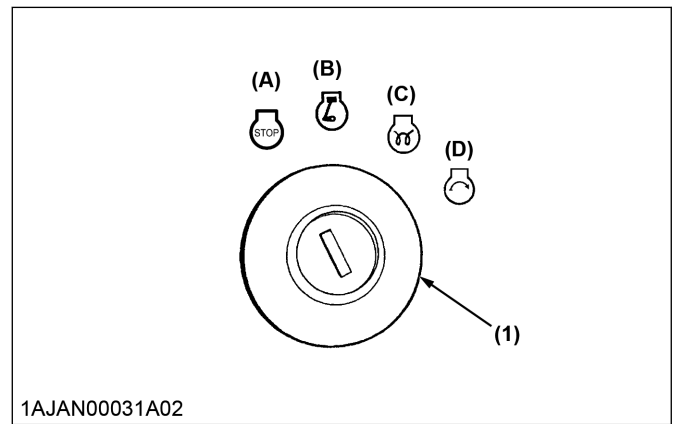

1AJAN00031A02

- (A) "OFF"
- (B) "ON"
- (C) "PREHEAT"
- (D) "START"

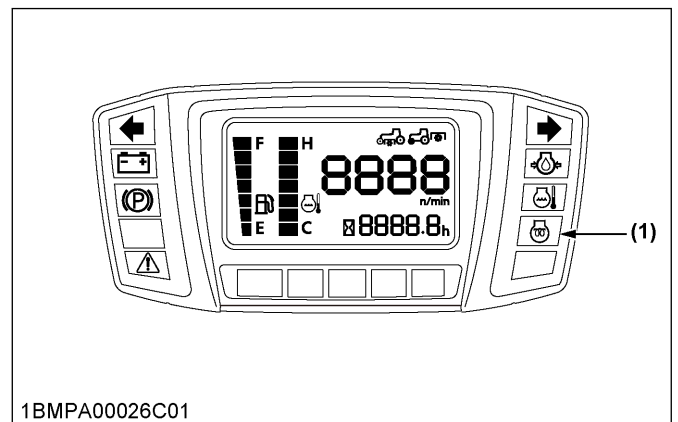


1BMPA00026C01

(1) Glow plug indicator


NOTE :

- Glow plug indicator comes on while engine is being preheated.

8. Check the Easy Checker indicators.
 - a. When the key is turned "ON", engine oil pressure warning indicator and electrical charge warning indicator should come on. If an issue should occur while the engine is running, the indicator lamp corresponding to problem will turn "ON".
 - b. If the parking brake warning indicator does not illuminate, make sure the parking brake is set.

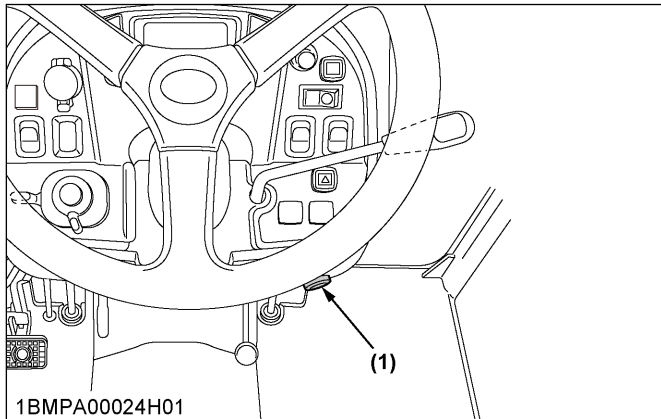

(1) Key switch

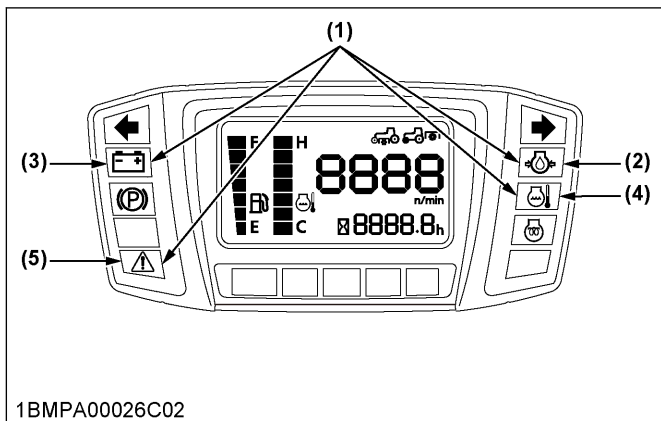

- (1) Easy Checker
- (2) Engine oil pressure warning indicator
- (3) Electrical charge warning indicator
- (4) Engine overheat warning indicator
- (5) Master system warning indicator

9. Turn the key to "START" position and release when the engine starts.

IMPORTANT :

- Because of the safety devices, the engine will not start except when the PTO clutch lever is placed in the "OFF" position.
- If the engine fails to start after 10 seconds, turn off the key for 30 seconds. Then repeat steps 7 through 8. To protect the battery and the starter, make sure that the starter is not continuously turned for more than 10 seconds.

10. Check to see that all the indicators on the Easy Checker are "OFF".

If an indicator is still on, immediately stop the engine and determine the cause.

OPERATING THE ENGINE IN FREEZING CONDITIONS

1. Block heater (if equipped)

A block heater is available as an option from your dealer. It will assist you in starting your tractor when the ambient temperature is below -15 °C (5 °F).

STOPPING THE ENGINE

1. After slowing the engine to idle, turn off the key switch to the "OFF" position.
2. Remove the key.

NOTE :

- If removing the key does not stop the engine, contact your local Kubota dealer.

WARMING UP THE ENGINE

! WARNING

To avoid personal injury or death:

- Set the parking brake during warm-up.
- Set all shift levers to the "NEUTRAL" positions and to place PTO clutch lever in "OFF" position during warm-up.

For 5 minutes after engine start-up, allow the engine to warm up without applying any load; this is to allow oil to reach every engine part. If load should be applied to the engine without this warm-up period, seizure, breakage, or premature wear may develop.

1. Warm-up and transmission fluid at low temperature range

Hydraulic oil serves as transmission fluid. In cold weather, the oil may be cold with increased viscosity. High oil viscosity can cause delayed oil circulation or abnormally low hydraulic pressure for some time after engine start-up. Delayed oil circulation and low hydraulic pressure, in turn, can result in damage to the hydraulic system.

To prevent the above, observe the following instructions:

Warm up the engine at about 50 % of rated rpm according to the following table:

Ambient temperature	Warm-up time requirement
Higher than 0 °C (32 °F)	Approx. 5 minutes
0 °C to -10 °C (32 °F to 14 °F)	5 to 10 minutes
-10 °C to -20 °C (14 °F to -4 °F)	10 to 15 minutes
Below -20 °C (-4 °F)	More than 15 minutes

IMPORTANT :

- Do not operate the tractor under full load condition until it is sufficiently warmed up.

JUMP STARTING

⚠ WARNING

To avoid personal injury or death:

- Battery gases can explode. Keep cigarettes, sparks, and flames away from the battery.
- If the tractor battery is frozen, do not jump start engine.
- Do not connect the other end of the negative (-) jumper cable to the negative (-) terminal of the tractor battery.
- When taking out the dead battery, putting in the battery or fixing the battery, do not allow the positive (+) terminal of the battery to touch other parts.

When jump starting the engine, follow the instructions below to safely start the engine.


1. Bring the helper vehicle with a battery of the same voltage as the disabled tractor within easy cable reach.

IMPORTANT :

- The vehicles must not touch.

2. Engage the parking brakes of both vehicles and put the shift levers in neutral. Shut both engines off.
3. Wear eye protection and rubber gloves.
4. Attach the red clamp to the positive (red, (+) or positive) terminal of the dead battery and clamp the other end of the same cable to the positive (red, (+) or positive) terminal of the helper battery.
5. Clamp the other cable to the negative (black, (-) or negative) terminal of the helper battery.
6. Clamp the other end to the engine block or frame of the disabled tractor as far from the dead battery as possible.
7. Start the helper vehicle and let its engine run for a few moments. Start the disabled tractor.
8. Disconnect the jumper cables in the exact reverse order of attachment (steps 6, 5 and 4).

Connect cables in numerical order.
Disconnect in reverse order after use.

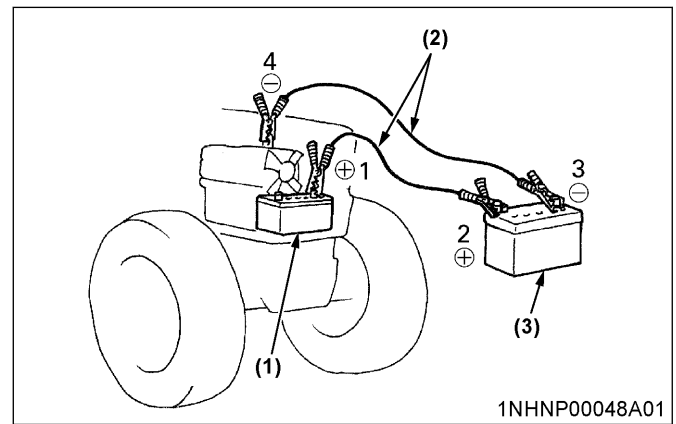

- (1) Dead battery
- (2) Jumper cables
- (3) Helper battery

IMPORTANT :

- This tractor has a 12 volt negative (-) ground starting system.
- Use only the same voltage for jump starting.
- Use of a higher voltage source on tractor's electrical system could result in severe damage to tractor's electrical system. Use only matching voltage source when "Jump starting" a low or dead battery condition.
- Do not operate the tractor with the battery cable disconnected from the battery.
- Do not operate the tractor without the battery mounted.
- Do not operate the tractor with the battery dead. Charge the battery fully before operating the tractor. Otherwise, the tractor might malfunction.

OPERATING THE TRACTOR

OPERATING NEW TRACTOR

How a new tractor is handled and maintained determines the life of the tractor.

A new tractor just off the factory production line has been, of course, tested, but the various parts are not accustomed to each other, so care should be taken to operate the tractor for the first 50 hours at a slower speed and avoid excessive work or operation until the various parts become *"broken-in"*. The manner in which the tractor is handled during the *"breaking-in"* period greatly affects the life of your tractor.

Therefore, to obtain the maximum performance and the longest life of the tractor, it is very important to properly break-in your tractor. In handling a new tractor, the following precautions should be observed.

1. Do not operate the tractor at full speed for the first 50 hours

- Do not start quickly nor apply the brakes suddenly.
- In winter, operate the tractor after fully warming up the engine.
- Do not run the engine at speeds faster than necessary.
- On rough roads, slow down to suitable speeds. Do not operate the tractor at high speed.

The above precautions are not limited only to new tractors, but to all tractors. However, they should be especially observed in the case of new tractors.

2. Changing lubricating oil for new tractors

The lubricating oil is especially important in the case of a new tractor. The various parts are not *"broken-in"* and are not accustomed to each other. Small metal grit may develop during the operation of the tractor, and this may wear out or damage the parts. Therefore, you should change the lubricating oil on a new tractor a little earlier than would ordinarily be required.

For more details, read the maintenance section of this manual.


(See MAINTENANCE on page 93.)

BOARDING AND LEAVING THE TRACTOR

WARNING

To avoid personal injury or death:

- Never try to get on or off a moving tractor or jump off the tractor to exit.
- Face the tractor when getting into or out of the tractor. Do not use the controls as handholds to prevent inadvertent machine movements.
- Always keep steps and floor clean to avoid slippery conditions.

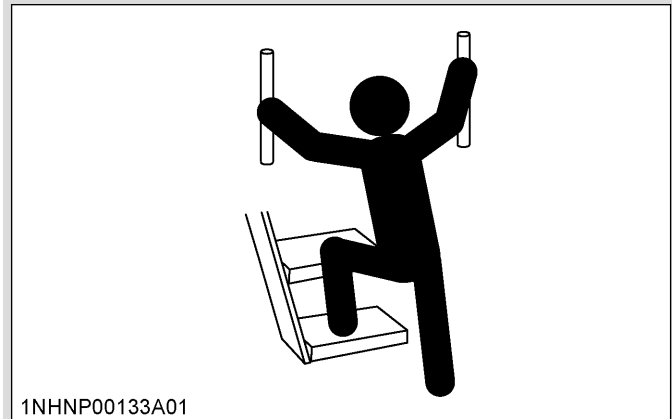

OPERATING FOLDABLE ROPS (IF EQUIPPED)


WARNING

To avoid personal injury or death:

- When raising or folding the ROPS, apply the parking brake, stop the engine and remove the key.
Always perform function from a stable position at the rear of the tractor.
- Fold the ROPS down only when absolutely necessary and fold it up and lock it again as soon as possible.
- Before proceeding to fold the ROPS, check for any possible interference with installed implements and attachments.
If interference occurs, contact your Kubota dealer.

1. Folding the ROPS

1. Remove both set bolts, maintain a hold on the ROPS.

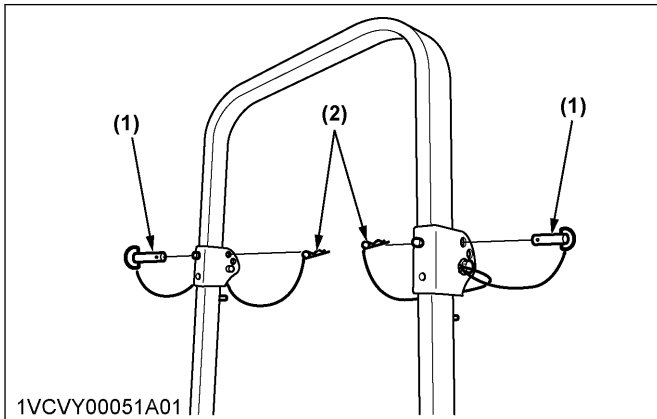


- (1) Set bolt
- (2) Hair pin

2. Fold the ROPS.

WARNING

To avoid personal injury or death:

- Hold the ROPS tightly with both hands and fold the ROPS slowly and carefully.

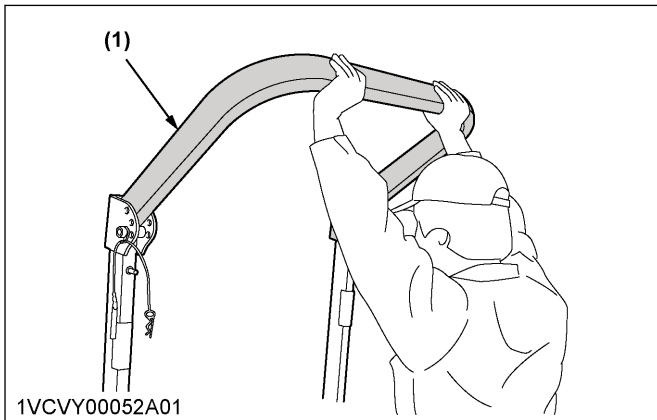


- (1) ROPS

3. Insert both set bolts and secure them with the hair pins.

WARNING

To avoid personal injury or death:


- Make sure that both set bolts are properly installed and secured with the hair pins.

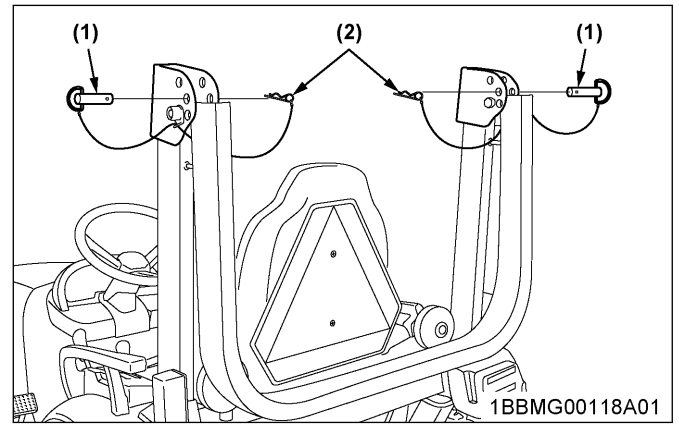

- (1) Set bolt
- (2) Hair pin

2. Raising the ROPS to upright position

1. Remove both hair pins and set bolts.

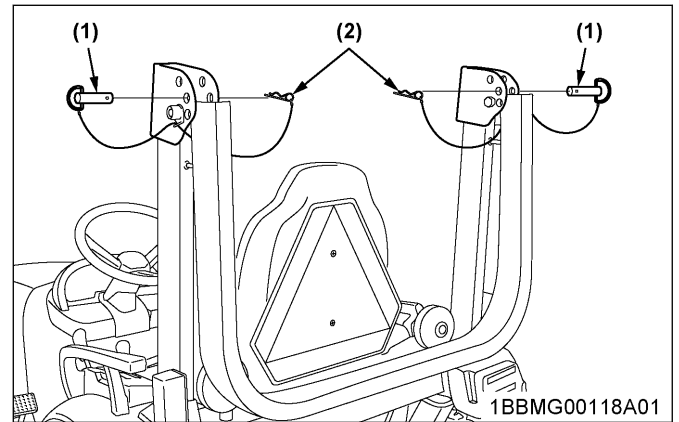

- (1) Set bolt
- (2) Hair pin

2. Raise ROPS to the upright position, maintain a hold on the ROPS.

WARNING

To avoid personal injury or death:


- Raise the ROPS slowly and carefully.

3. Insert both set bolts and secure them with the hair pins.

WARNING

To avoid personal injury or death:


- Make sure that both set bolts are properly installed as soon as the ROPS is in the upright position and secured with the hair pins.

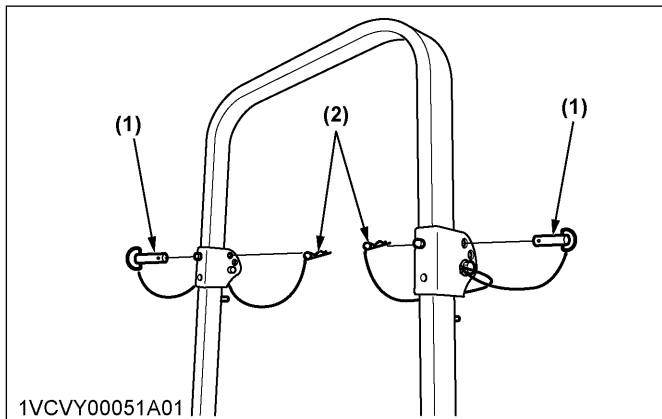

- (1) Set bolt
(2) Hair pin

3. Adjustment of foldable ROPS

1. Adjust free fall of the ROPS upper frame regularly.
2. If you feel less friction in folding the ROPS, tighten the nut (1) until you feel the right friction in the movement.

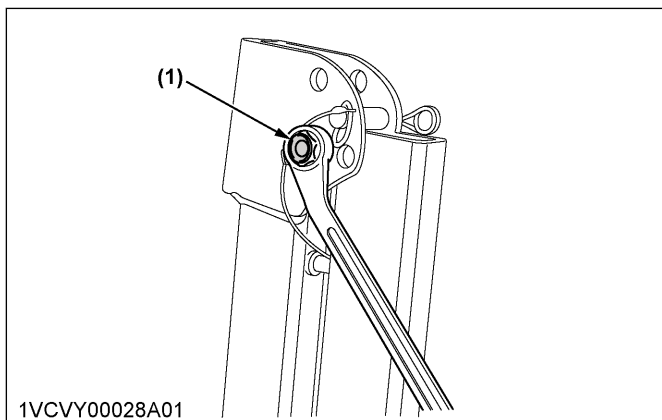

- (1) Nut

STARTING THE TRACTOR

1. Adjusting the operator's position.

NOTE :

- The seat and suspension should be adjusted to ensure that the controls are comfortably at hand for the operator, ensuring that the

operator maintains a good posture and minimizes risks from whole body vibration.

- Operator's seat on page 48
 - Seat belt on page 50
 - Tilt steering adjustment [except LX2620SU] on page 50
2. Set the parking brake.
 - Parking brake lever on page 52
 3. Starting the engine.
 - STARTING THE ENGINE on page 40
 4. Selecting light switch position.
 - Headlight switch on page 50
 - Turn signal switch and hazard light switch on page 51
 5. Pull the position control lever to raise the implement.
 - Position control on page 73
 6. Selecting the travel speed.
 - Range gear shift lever (L-M-H) on page 53
 - Front wheel drive lever on page 54
 7. Accelerate the engine.
 - Hand throttle lever on page 54
 8. Release the parking brake.
 - Parking brake lever on page 52
 9. Depress the speed control pedal.
 - Speed control pedal on page 55
 - Speed set lever [LX2620 ROPS model only] on page 55
 - Cruise control lever [LX2620 CAB model only] on page 56

1. Operator's seat

WARNING


To avoid personal injury or death:

- Make adjustments to the seat only while the tractor is stopped.
- Make sure that the seat is completely secured after each adjustment.
- Do not allow any person other than the driver to ride on the tractor.


IMPORTANT :

- After adjusting the operator's seat, confirm that the seat is properly locked.

[LX2620 ROPS model]

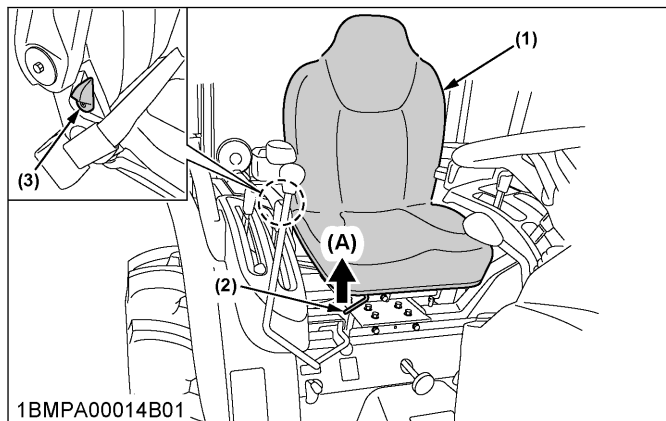

- (1) Seat
- (2) Position adjust lever
- (3) Backrest tilt adjust lever
- (A) Pull up

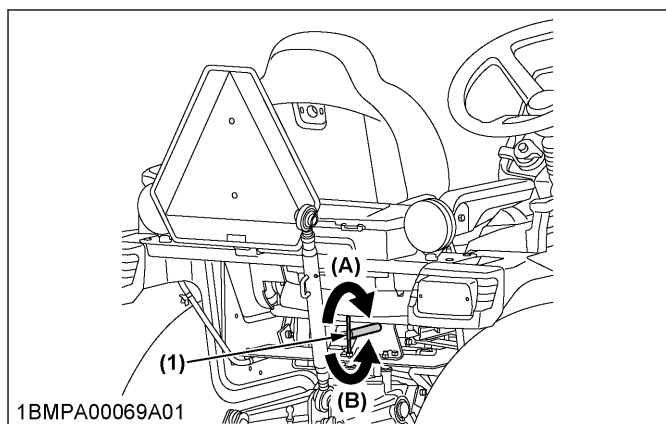

- (1) Suspension adjust knob
- (A) To increase tension
- (B) To decrease tension

Position adjustment

Pull in the position adjust lever and slide the seat backward or forward, as required. The seat will lock in position when the lever is released.

Armrest angle adjustment

Armrest may be set upright position if desired.


Suspension adjustment

Turn the suspension adjust knob to achieve the optimum suspension setting.

Tilt adjustment

Pull the backrest tilt adjust lever and tilt the backrest to the desired position.

[LX2620SU ROPS model]

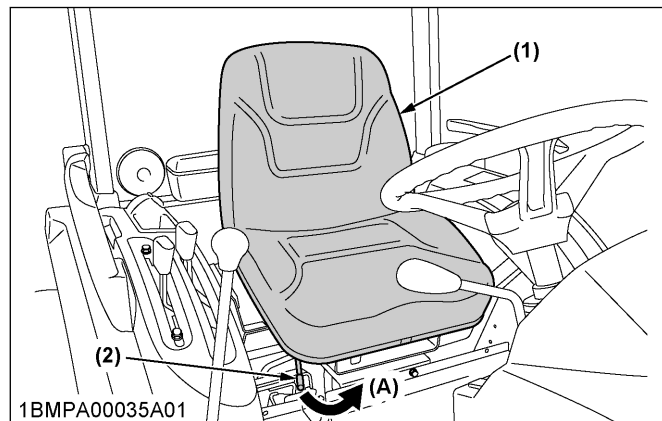


- (1) Seat
- (2) Position adjust lever
- (A) Pull in

Position adjustment

Pull in the position adjust lever and slide the seat backward or forward, as required. The seat will lock in position when the lever is released.

[CAB model]

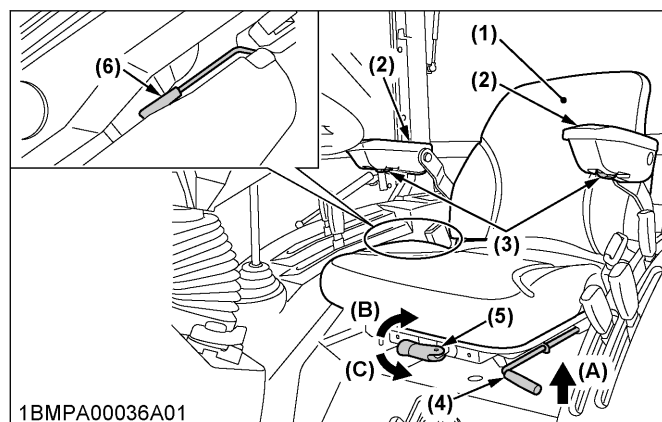

- (1) Seat
- (2) Armrest
- (3) Armrest angle adjust knob
- (4) Travel adjust lever
- (5) Suspension adjust knob
- (6) Backrest tilt adjust lever
- (A) Unlock
- (B) To increase tension
- (C) To decrease tension

Armrest

Armrest may be set at upright position if desired.

Armrest angle adjustment

Turn the armrest angle adjust knob to the desired angle.

Travel adjustment

Unlock the travel adjust lever and slide the seat backward or forward, as required. The seat will lock in position when the lever is released.

Suspension adjustment

Turn the suspension adjust knob to achieve the optimum suspension setting.

Tilt adjustment

Pull the backrest tilt adjust lever and tilt the backrest to the desired position.


2. Seat belt

WARNING

To avoid personal injury or death:

- Always use the seat belt when a ROPS or CAB is installed.
- Do not use the seat belt if the foldable ROPS is down or if there is no ROPS.

Adjust the seat belt for proper fit and connect the buckle. This seat belt is auto-locking retractable type.

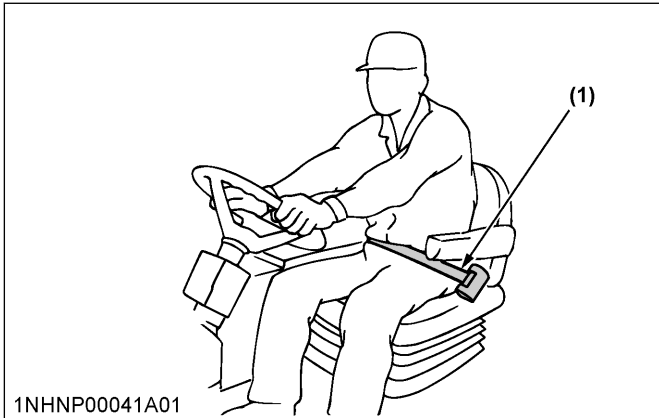

(1) Seat belt

3. Tilt steering adjustment [except LX2620SU]


WARNING

To avoid personal injury or death:

- Do not adjust the steering wheel while the tractor is in motion.


Press down the steering wheel tilt pedal to release the lock, so that the steering wheel can be adjusted to the desired position.

[ROPS model]

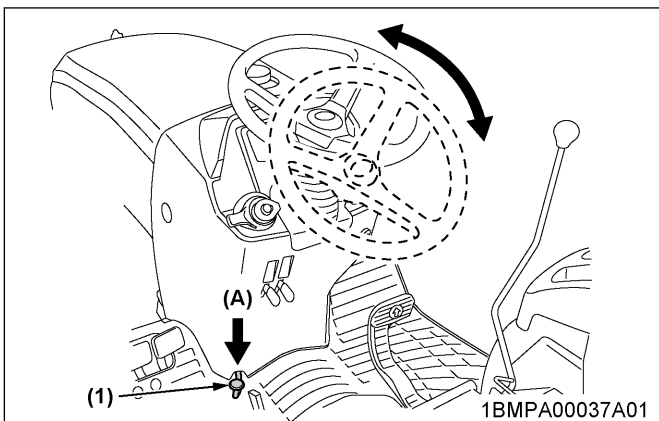

(1) Steering wheel tilt pedal (A) Press down

[CAB model]

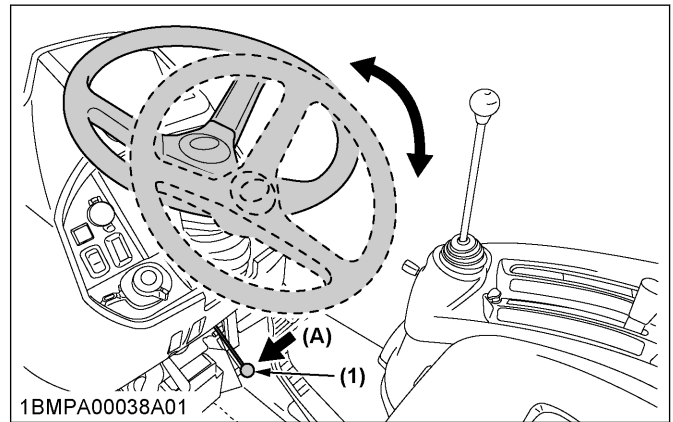


(1) Steering wheel tilt pedal (A) Press down

4. Headlight switch

Turn the headlight switch clockwise, and the following lights are activated on the switch position.


[ROPS model]

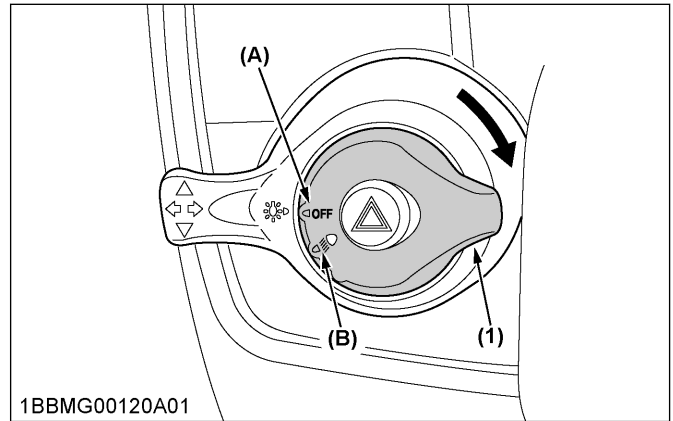

(1) Headlight switch


(A) "OFF"
(B) "ON"

[CAB model]

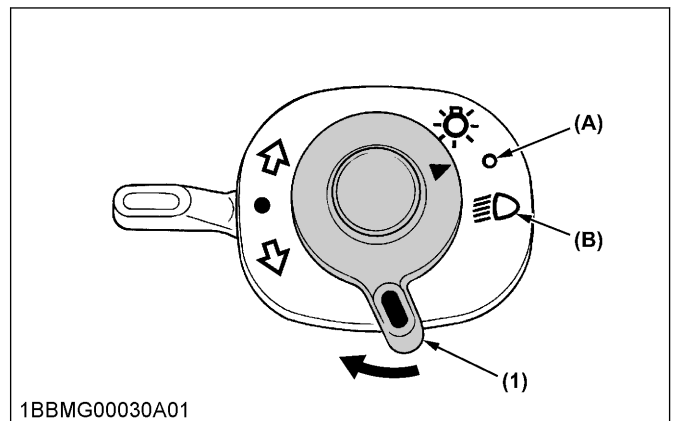

(1) Headlight switch

(A) "OFF"
(B) "ON"

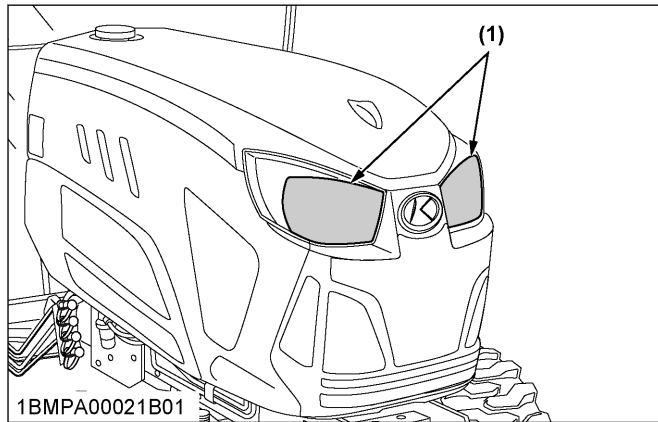All models

(1) Headlight

5. Turn signal switch and hazard light switch

Hazard light

1. When the hazard light switch is pushed, the hazard lights flash, along with the LH and RH indicators on the instrument panel.
2. Push the hazard light switch again to turn off the hazard lights.

Turn signal with hazard light switch on


1. To indicate a right turn with the hazard lights already flashing (hazard switch on), turn the turn signal switch clockwise.
2. To indicate a left turn with the hazard lights already flashing, turn the turn signal switch counterclockwise.
3. When the left or right turn signal is activated in combination with the hazard lights, the indicated turning light will flash and the other will stay on.

Turn signal with hazard light switch off


1. To indicate a right turn without hazard lights (hazard switch off), turn the turn signal switch clockwise.
2. To indicate a left turn without hazard lights, turn the turn signal switch counterclockwise.
3. When the left or right turn signal is activated without the hazard lights, the indicated turning light will flash.

NOTE :


- The hazard light switch is operative when the key switch is in either the "ON" or "OFF" position.
- The turn signal light switch is only operative when the key switch is in the "ON" position.
- The indicator in the hazard light switch will light up when the head light switch is turned on.
- Return the turn signal switch to its center position after turning.

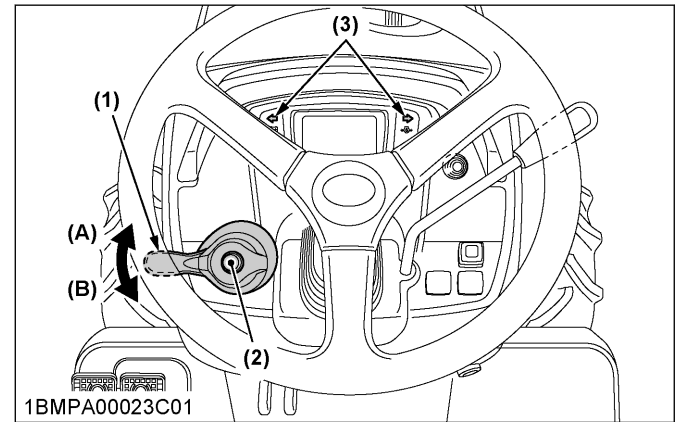[ROPS model]

(1) Turn signal light switch (A) To indicate a right turn
 (2) Hazard light switch (B) To indicate a left turn
 (3) Hazard and turn signal indicator

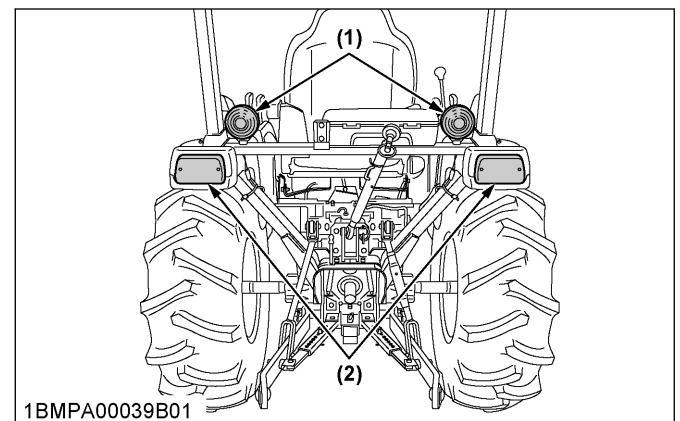
[ROPS model]

(1) Turn signal and hazard light
 (2) Tail light and turn signal light and hazard light

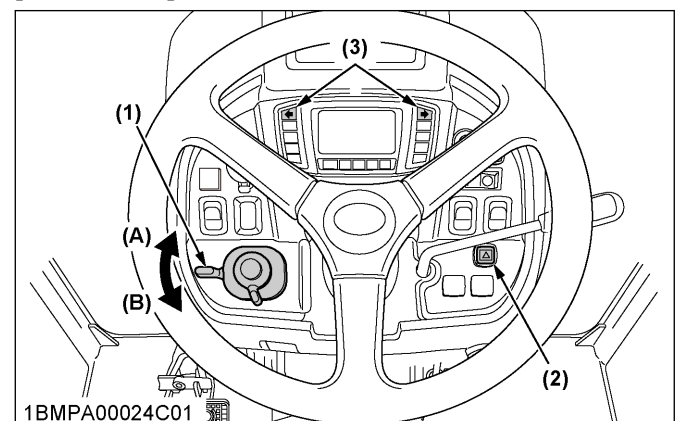[CAB model]

(1) Turn signal light switch (A) To indicate a right turn
 (2) Hazard light switch (B) To indicate a left turn
 (3) Hazard and turn signal indicator


[CAB model]

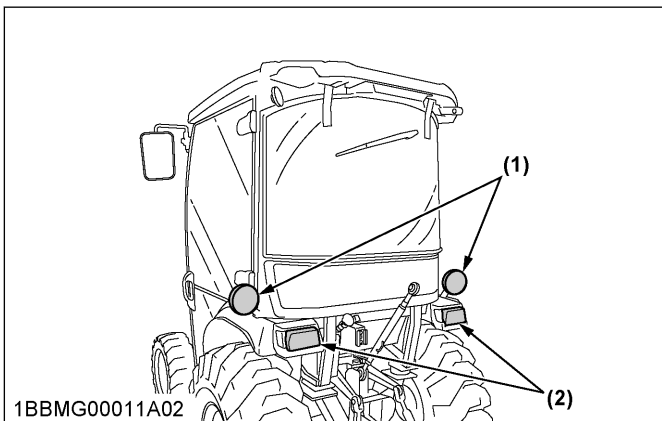

- (1) Turn signal and hazard light
- (2) Tail light and turn signal light and hazard light

6. Horn button [CAB only]

The horn will sound when the key switch is in "ON" position and horn button is pushed.

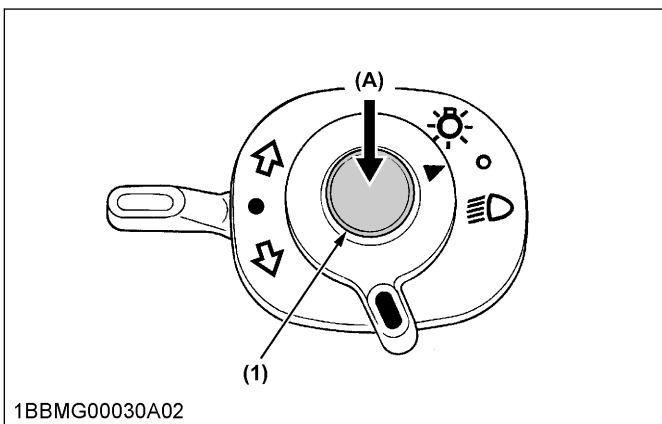

- (1) Horn button
- (A) "Push to sound horn"

7. Brake pedals (right and left)


WARNING

To avoid personal injury or death:

- Interlock the right and left pedals. Applying only one rear wheel brake at high speeds could cause the tractor to swerve or roll-over.
- Do not brake suddenly.
An accident may occur as a result of a heavy towed load shifting forward or loss of control.
- To avoid skidding and loss of steering control when driving on icy, wet, or loose surfaces, make sure the tractor is correctly ballasted, operated at reduced speed and operated with the front-wheel drive engaged (if equipped).
- The braking characteristics are different between 2 and 4-wheel drive. Be aware of the difference and use carefully.


1. Before operating the tractor on the road or before applying the parking brake, interlock the right and left pedals as in the following illustration.
2. Use individual brakes to assist in making sharp turns at low speeds (field operation only). Disengage the brake pedal lock and depress only one brake pedal.
3. Be sure brake pedals have equal adjustment when being used locked together.

[ROPS model]

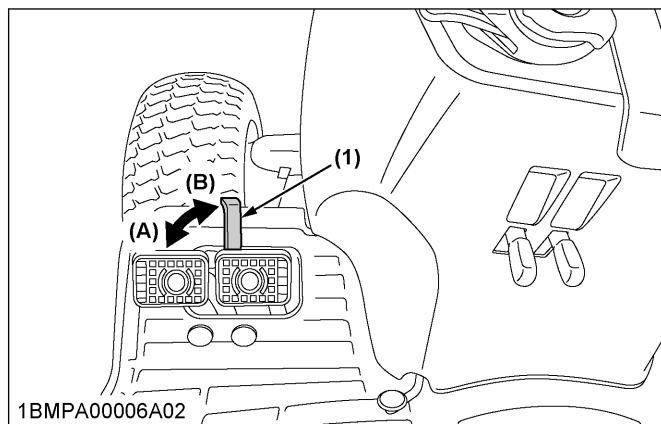

- (1) Brake pedal lock
- (A) "INTERLOCK"
- (B) "RELEASE"

[CAB model]

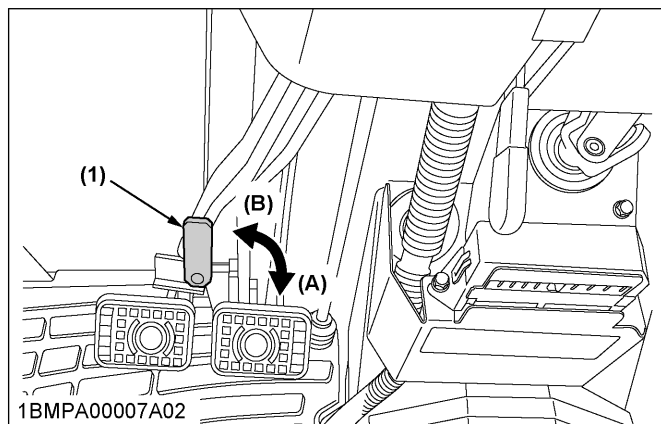


- (1) Brake pedal lock
- (A) "INTERLOCK"
- (B) "RELEASE"

8. Parking brake lever

1. To set the parking brake;
 - a. Interlock the brake pedals.
 - b. Depress the brake pedals.
 - c. Latch the brake pedals with the parking brake lever.


- To release the parking brake, depress the brake pedals again.

[ROPS model]

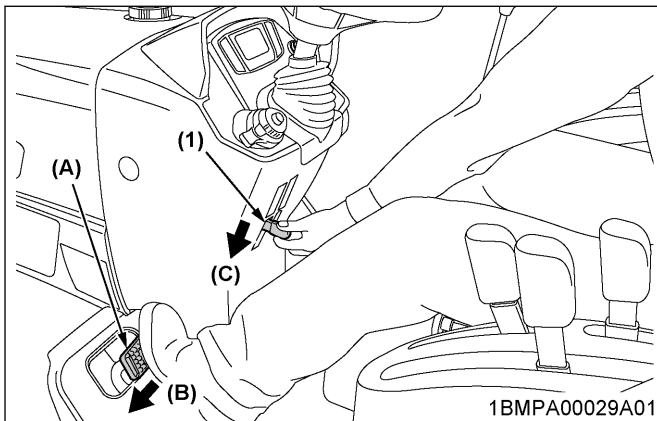


(1) Parking brake lever
 (A) Interlock the brake pedals
 (B) Depress
 (C) Pull down

[CAB model]

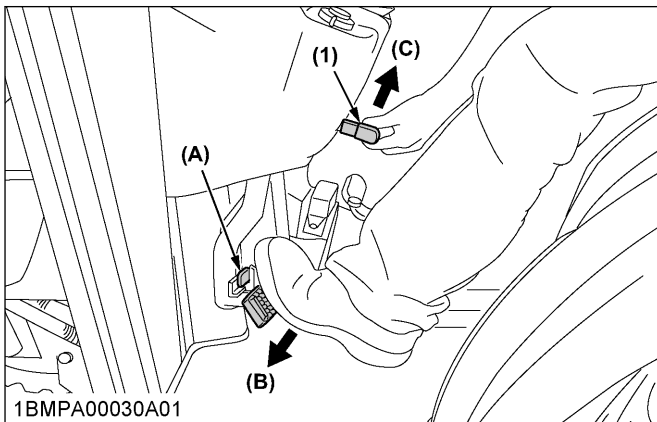

(1) Parking brake lever
 (A) Interlock the brake pedals
 (B) Depress
 (C) Pull up

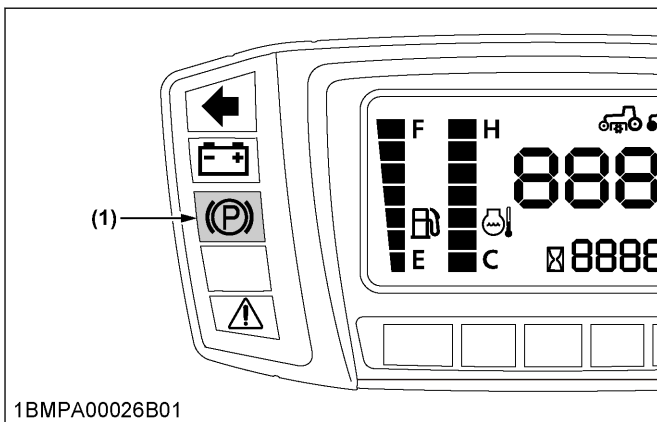

(1) Parking brake warning indicator

9. Range gear shift lever (L-M-H)


The range gear shift can only be shifted when the tractor is completely stopped.

IMPORTANT :

Do not force the range gear shift lever.


- If it is difficult to shift the range gear shift lever into the neutral position;
 - Depress the brake pedal firmly for several seconds.
 - Without reducing the brake pedal force, shift the range gear shift lever.
- If it is difficult to shift the range gear shift lever into "L", "M" or "H" from neutral position;
 - Slightly depress the speed control pedal to rotate the gears inside of transmission.
 - Release the speed control pedal to neutral position.
 - Shift the range gear shift lever.
- To avoid damage of transmission, stop tractor before shifting between ranges.

[ROPS model]

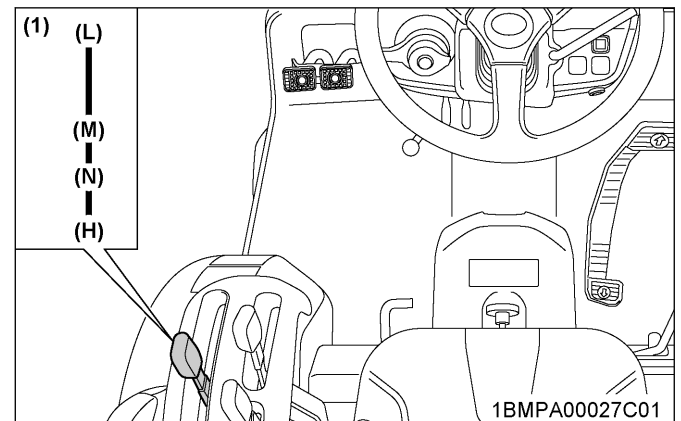

(1) Range gear shift lever
 (L) "LOW"
 (M) "MIDDLE"
 (N) "NEUTRAL" position
 (H) "HIGH"

[CAB model]

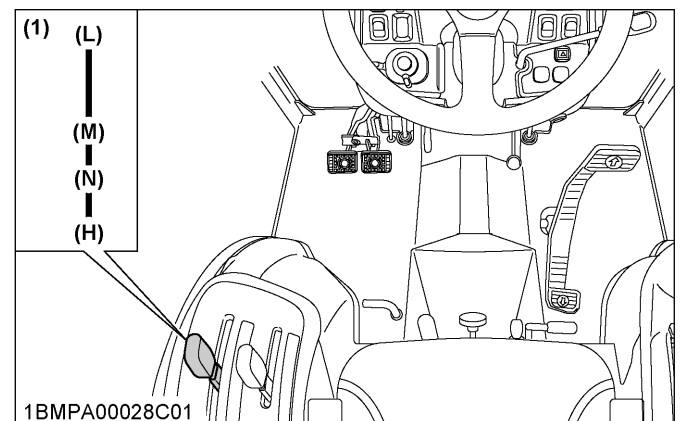

(1) Range gear shift lever
 (L) "LOW"
 (M) "MIDDLE"
 (N) "NEUTRAL" position
 (H) "HIGH"

10. Front wheel drive lever


WARNING

To avoid personal injury or death:

- Do not engage the front-wheel drive when traveling at road speed.
- When driving on icy, wet, or loose surfaces, make sure that the tractor is correctly ballasted to avoid skidding and loss of steering control. Operate at reduced speed and engage front-wheel drive.
- An accident may occur if the tractor is suddenly braked, such as by heavy towed loads shifting forward or loss of control.
- The braking characteristics are different between 2 and 4-wheel drive. Be aware of the difference and use carefully.


Use the lever to engage the front wheels with the tractor stopped. Shift the lever to "ON" to engage the front wheel drive.

[ROPS model]

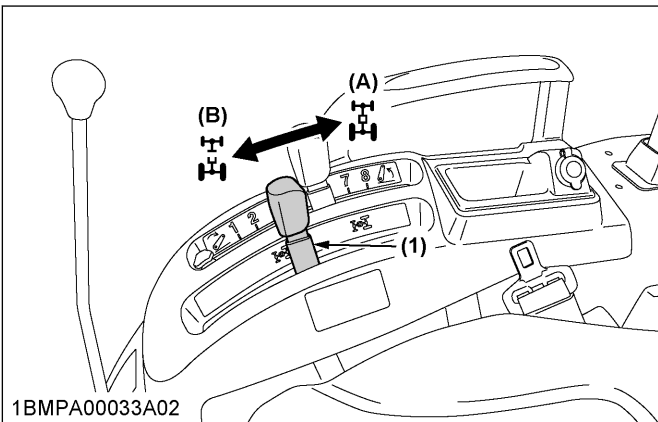

(1) Front wheel drive lever (A) "ON" (B) "OFF"

[CAB model]

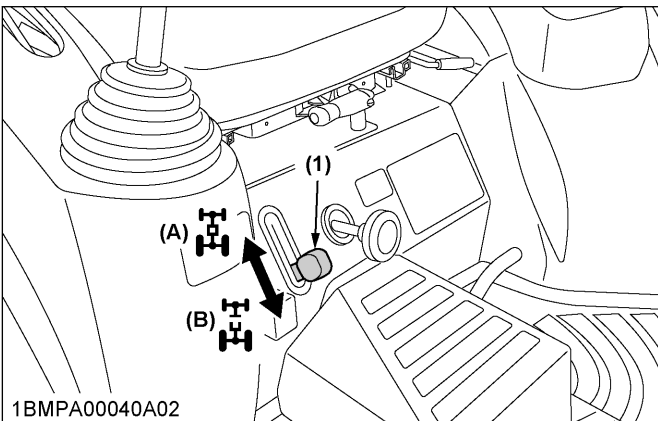

(1) Front wheel drive lever (A) "ON" (B) "OFF"

IMPORTANT :

- To avoid damage of transmission, when front wheel drive lever is not smoothly shifted, slightly step forward or rearward on speed control pedal.
- Tires will wear quickly if front wheel drive is engaged on paved roads.

10.1 Front-wheel drive (4WD) usage


Front-wheel drive is effective for the following jobs:

1. When greater pulling force is needed, such as working in a wet field, when pulling a trailer, or when working with a front-end loader.
2. When working in sandy soil.
3. When working on a hard soil where a rotary tiller might push the tractor forward.
4. Additional braking at reduced speeds.


11. Hand throttle lever

Pulling the throttle lever back increases engine speed, and pushing the throttle lever forward decreases engine speed.

[ROPS model]

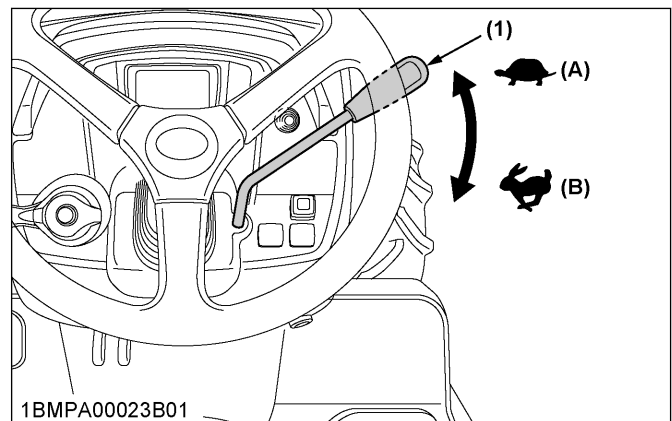

(1) Hand throttle lever (A) Decrease (B) Increase

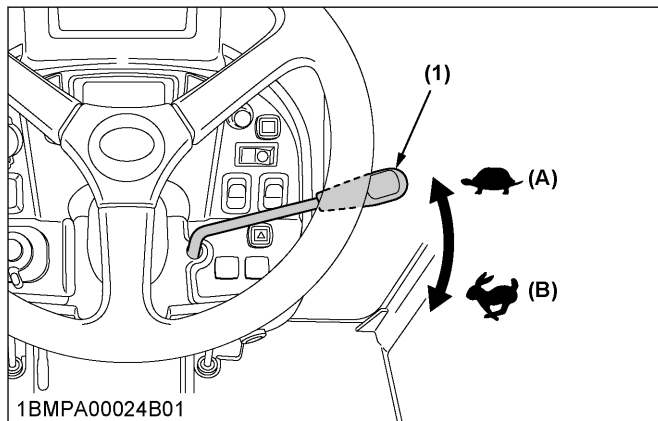[CAB model]

(1) Hand throttle lever
(A) Decrease
(B) Increase

12. Speed control pedal**⚠ WARNING**

To avoid personal injury or death:


- Do not operate if the tractor moves on level ground with the operators foot off of the speed control pedal.
- Contact your local Kubota dealer.

Forward pedal


Depress the speed control pedal with the toe of your right foot to move forward.

Reverse pedal

Depress the speed control pedal with the heel or toe of your right foot to move backward.

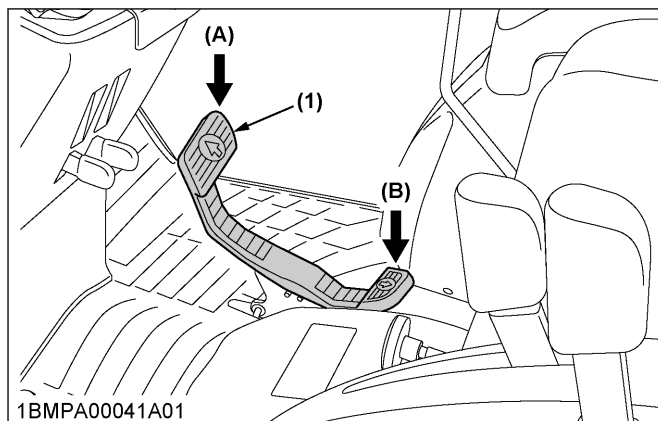[ROPS model]

(1) Speed control pedal
(A) "FORWARD"
(B) "REVERSE"

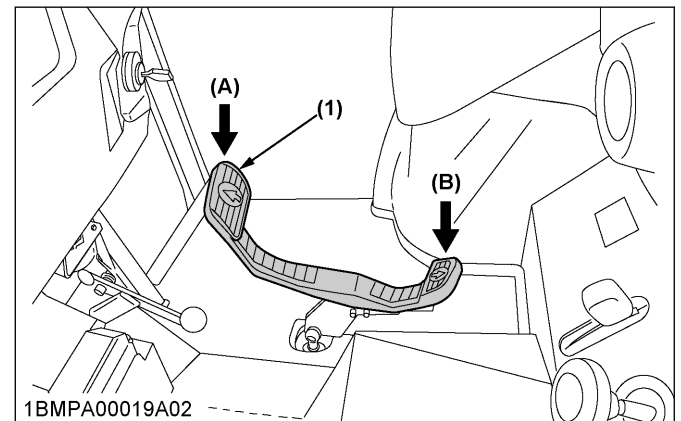[CAB model]

(1) Speed control pedal
(A) "FORWARD"
(B) "REVERSE"

IMPORTANT :

- To prevent serious damage to the HST, do not adjust the stopper bolts.

NOTE :

When you stand up from the seat with either:

- the speed control pedal stepped on
 - the speed set lever engaged (ON) [LX2620 ROPS model only]
 - the cruise control lever engaged (ON) [LX2620 CAB model only]
- the engine will stop regardless of whether the tractor is moving or not.

This is because the tractor is equipped with an operator presence control (OPC) system.

13. Speed set lever [LX2620 ROPS model only]**⚠ WARNING**

To avoid personal injury or death:

- Pull the speed set lever completely to the up position before starting the engine.
- Do not use the speed set lever when driving on the road.
- Connect both the left and the right brakes to release the speed set lever. The speed set lever won't be released with single brake activation.


The speed set lever is designed for tractor operating efficiency and operator comfort. This device will provide a constant forward operating speed by mechanically holding the speed control pedal at a selected position.

To engage speed set lever

1. Accelerate speed to desired level using speed control pedal, and push the speed set lever down to the "ON" position.
2. Release speed control pedal and desired speed will be maintained.

To disengage speed set lever

- Depress both brake pedals.

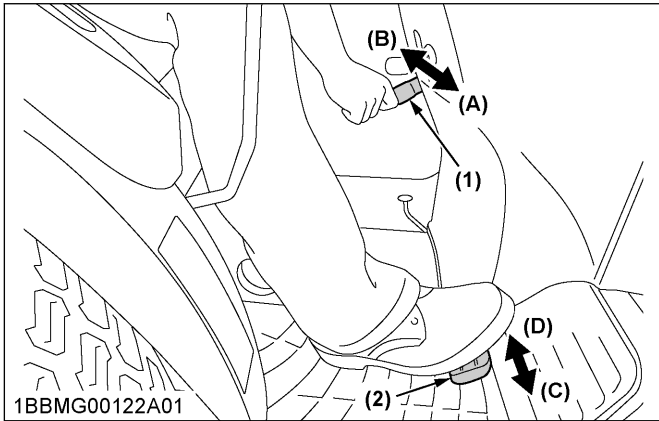

(1) Speed set lever

(2) Speed control pedal

(A) "ON"

(B) "OFF"

(C) Increase

(D) Decrease

NOTE :

- If you depress the pedal on the forward acceleration side, the speed set device will disengage.
- The speed set lever does not disengage when the individual right or left brake is applied.
- Speed set lever will not operate in reverse.
- When you stand up from the seat with the speed control pedal stepped on or the speed set lever engaged (ON), the engine will stop regardless of whether the machine is moving or not. This is because the tractor is equipped with an operator presence control (OPC) system.

IMPORTANT :

- To prevent the damage of speed set lever, do not depress the reverse pedal when the speed set lever is engaged.

14. Cruise control lever [LX2620 CAB model only]**WARNING**

To avoid personal injury or death:

- Pull the cruise control lever completely to the rear before starting the engine.
- Do not use the cruise control when driving on the road.
- Connect both the left and the right brakes to release the cruise control. The speed-cruise-control will not be released with single brake activation.

IMPORTANT :

- Do not depress the speed control pedal backward to disengage the cruise control.

Cruise control is designed for tractor operating efficiency and operator comfort.


This device will provide a constant forward operating speed by mechanically holding the cruise control lever at the selected position.

To engage cruise control device

1. The proper forward speed will be maintained if you apply the cruise control lever at any position.
2. To operate faster than the set speed, depress the speed control pedal further down in this condition. The set speed will be resumed if you release the pedal.

To disengage cruise control device

- Tilt the lever toward the seat, move the lever all the way back and then to the "NEUTRAL" position to release the cruise control.
- Depress both brake pedals.

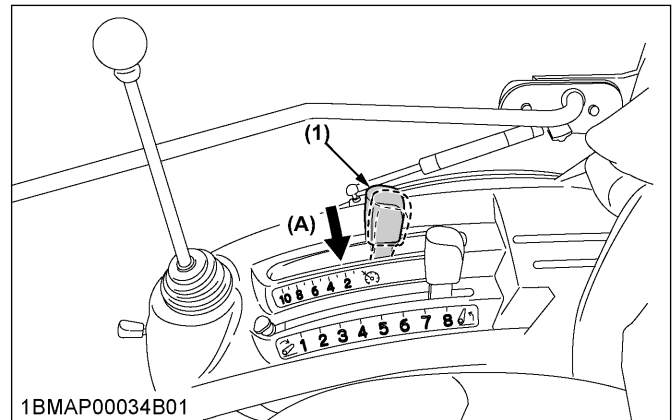


(1) Cruise control lever

(A) Tilt

NOTE :

- The cruise control device does not disengage when the individual right or left brake is applied.
- Cruise control device will not operate in reverse.
- Preferably set the cruise control lever, while holding down the speed control pedal. This makes the setting smoother.
- When releasing the cruise mode, return the cruise control lever fully backward.

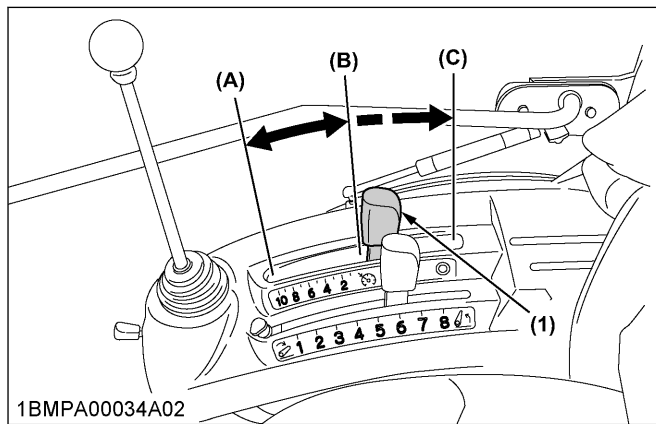

(1) Cruise control lever

- (A) "INCREASE"
 (B) "DECREASE"
 (C) "NEUTRAL"

NOTE :

- When you stand up from the seat with the speed control pedal depressed or the cruise control lever engaged ("ON"), the engine will stop regardless of whether the machine is moving or not. This is because the tractor is equipped with an operator presence control (OPC) system.

STOPPING THE TRACTOR

1. Slow down the engine.
2. Depress the brake pedal.
3. Wait for the tractor to stop.
4. Disengage the PTO.
5. Lower the implement to the ground.
6. Shift the transmission to neutral.
7. Set the parking brake.

CHECK DURING DRIVING

IMPORTANT :


Immediately stop the engine if:

- The engine suddenly slows down or accelerates.
- Unusual noises are suddenly heard.
- Exhaust fumes suddenly become very dark.

1. Easy Checker

If the indicators on the Easy Checker come on during operation, immediately stop the engine and find the cause as follows.

Never operate the tractor while an Easy Checker indicator is on.

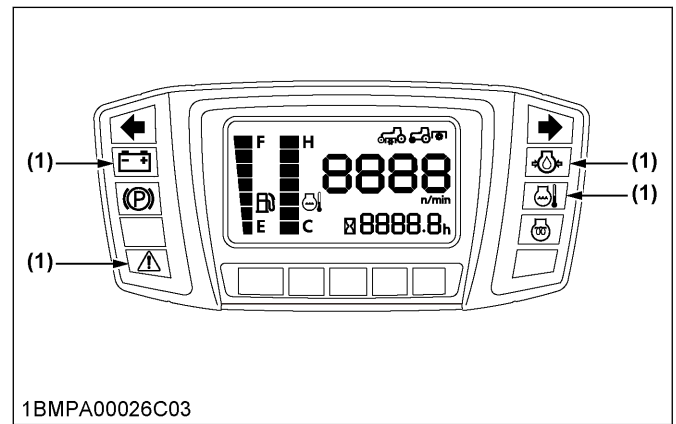

(1) Easy Checker

Engine overheat

If the water temperature gauge reads an unusual level and the indicator on the Easy Checker comes on, the engine may have overheated. Check the tractor by reading the troubleshooting section of this manual.

(See TROUBLESHOOTING on page 128.)

Engine oil pressure

If the oil pressure in the engine drops below the prescribed level, the indicator on the Easy Checker will come on.

If this should happen during operation, and it does not go off when the engine is accelerated to more than 1000 rpm, check the engine oil level.

(See Checking engine oil level on page 101.)

Electrical charge

If the alternator is not charging the battery, the indicator on the Easy Checker will come on.

If this should happen during operation, check the electrical charging system or contact your local Kubota dealer.

Master system warning

If the issue is not corrected by restarting the tractor, contact your local Kubota dealer.

NOTE :

- For checking and servicing of your tractor, contact your local Kubota dealer for instructions.


2. Fuel gauge

When the key switch is on, the fuel gauge indicates the fuel level.

Be careful not to empty the fuel tank. Otherwise air may enter the fuel system.

Should this happen, the system should be bled.

(See Bleeding fuel system on page 121.)

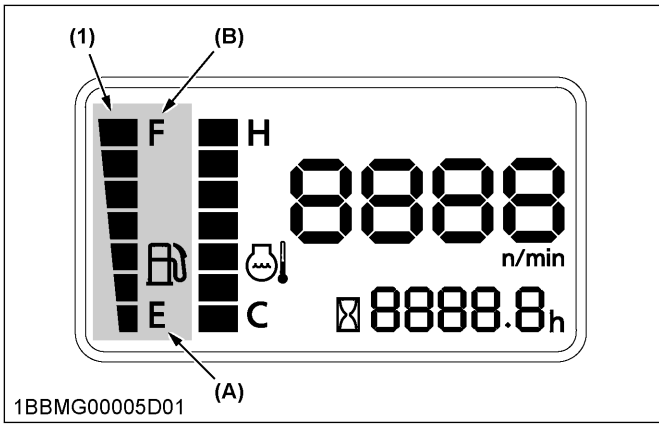

(1) Fuel gauge

(A) "EMPTY"
(B) "FULL"


3. Coolant temperature gauge

WARNING

To avoid personal injury or death:

- Do not remove the radiator cap until coolant temperature is well below its boiling point. Then, loosen the cap slightly to the first stop to relieve any pressure before removing the cap completely.

- With the key switch at "ON", this gauge indicates the temperature of the coolant. [C] is for cold and [H] is for hot.
- If the indicator reaches the [H] position (red zone), the engine coolant is overheated. Check the tractor by reading the troubleshooting section of this manual.
(See TROUBLESHOOTING on page 128.)

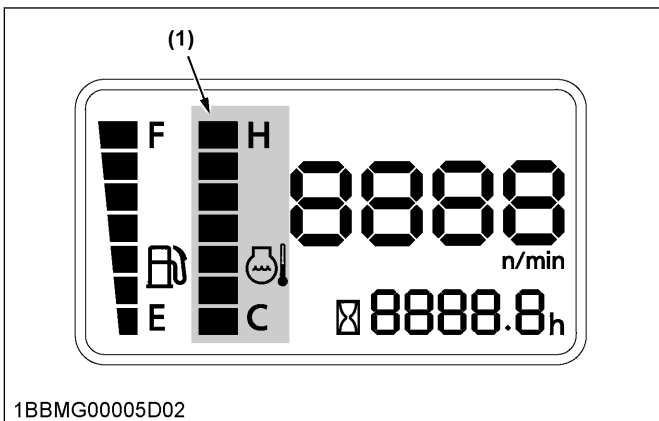

(1) Coolant temperature gauge

3.1 Overheating countermeasures

Take the following actions in the event the coolant temperature is nearly at or over the boiling point, also called "overheating".


- Park the tractor in a safe place and keep the engine idling unloaded.

- Don't stop the engine suddenly, but stop it after about 5 minutes of unloaded idling.
- Keep yourself well away from the machine for further 10 minutes or while the steam blows out.
- Check that there are no dangers such as burns. Get rid of the causes of overheating according to the troubleshooting section of this manual.
(See TROUBLESHOOTING on page 128.)
Afterward, restart the engine.

4. Hourmeter and tachometer

This meter gives readings for engine speed, PTO shaft speed and the hours the tractor has been operated.

- The tachometer indicates the engine speed and the PTO shaft speed location on the dial.
- The hourmeter indicates in 5 digits the hours the tractor has been used; the last digit indicates 1/10 of an hour.

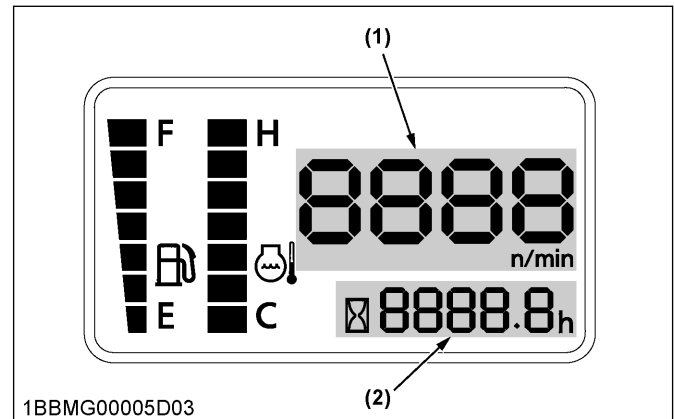

(1) Engine revolution
(2) Hours used

5. Changing display mode


- The LCD monitor give several different displays.
- The LCD monitor displays "Engine rpm" normally.

3. The display switch is pressed, the display is switched to “Rear PTO speed”, “Mid PTO speed”, “Engine rpm”.

NOTE :


- Models that are not equipped with the “Mid PTO” also display “Mid PTO speed”.

[ROPS model]

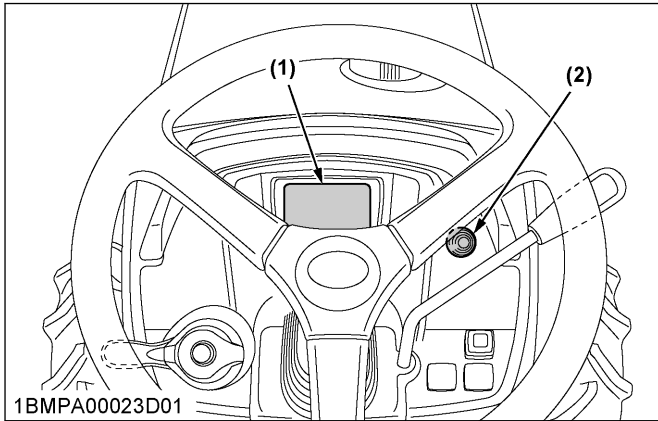


- (1) LCD monitor
- (2) Display switch

[CAB model]

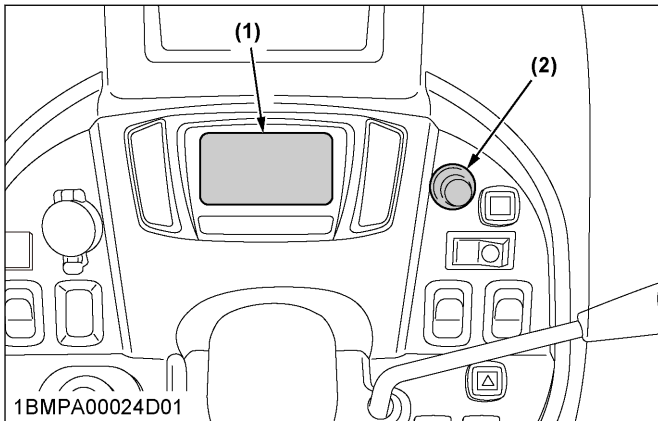


- (1) LCD monitor
- (2) Display switch

Engine rpm displayed

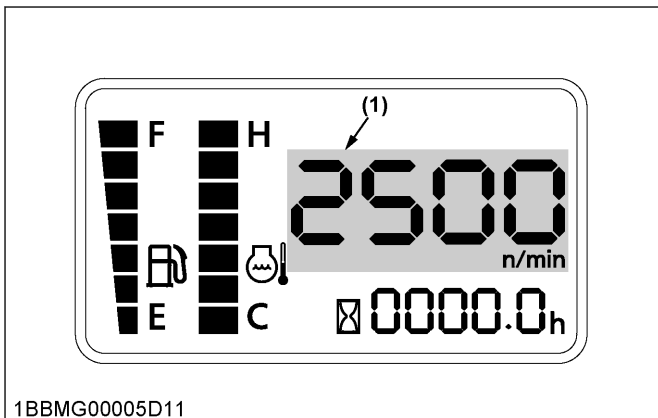


- (1) Engine rpm

Rear PTO speed displayed

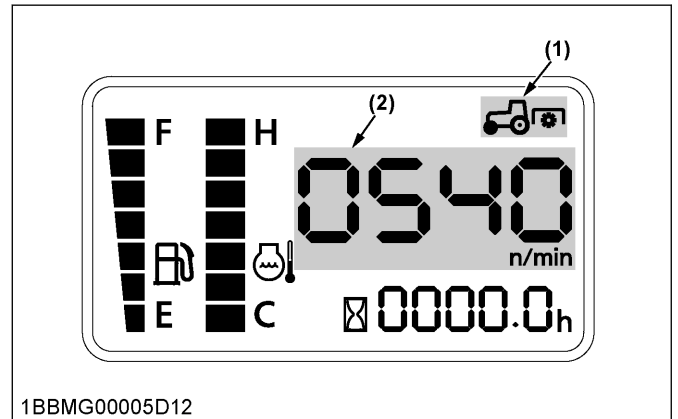

- (1) Rear PTO speed indicator
- (2) Rear PTO rpm

Mid PTO speed displayed

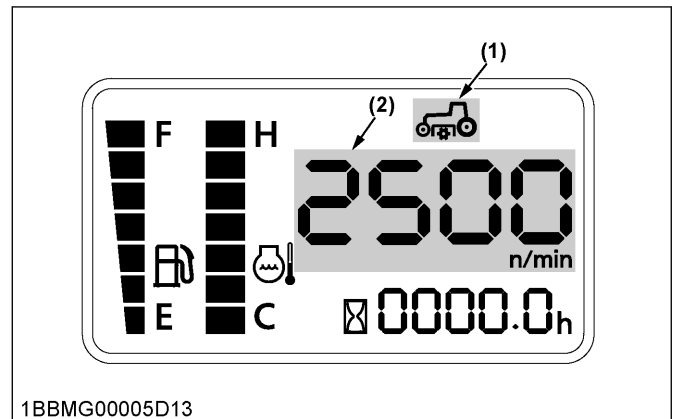

- (1) Mid PTO speed indicator
- (2) Mid PTO rpm

PARKING THE TRACTOR


⚠ WARNING

To avoid personal injury or death:

- Always set the parking brake, stop the engine and remove the key before leaving the tractor seat.


1. When parking, always set the parking brake. To set the parking brake:
 - a. Interlock the brake pedals.
 - b. Depress the brake pedals.
 - c. Latch the brake pedals with the parking brake lever.

[ROPS model]

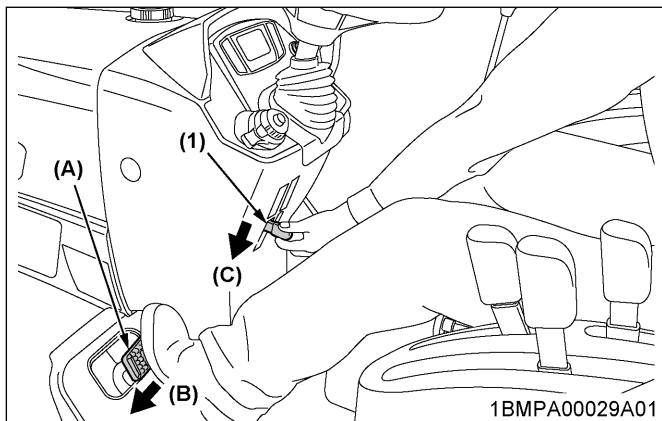

(1) Parking brake lever
 (A) Interlock the brake pedals
 (B) Depress
 (C) Pull down

[CAB model]

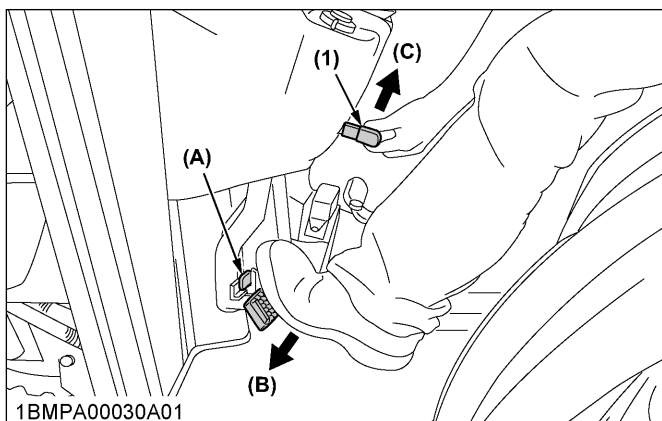

(1) Parking brake lever
 (A) Interlock the brake pedals
 (B) Depress
 (C) Pull up

2. Before getting off the tractor, disengage the PTO, lower all implements to the ground, place all control levers in their neutral positions, set the parking brake, stop the engine and remove the key.
3. If it is necessary to park on an incline, chock the wheels to prevent accidental rolling of the machine.

OPERATING TECHNIQUES

1. Differential lock

WARNING


To avoid personal injury or death due to loss of steering control:

- Do not operate the tractor at high speed with differential lock engaged.
- Do not attempt to turn with the differential lock engaged.
- Release the differential lock before making a turn in field conditions.

If one of the rear wheels should slip, depress the differential lock pedal. Both wheels will turn together, then reduce slippage.


Differential lock is maintained only while the pedal is depressed.

[ROPS model]

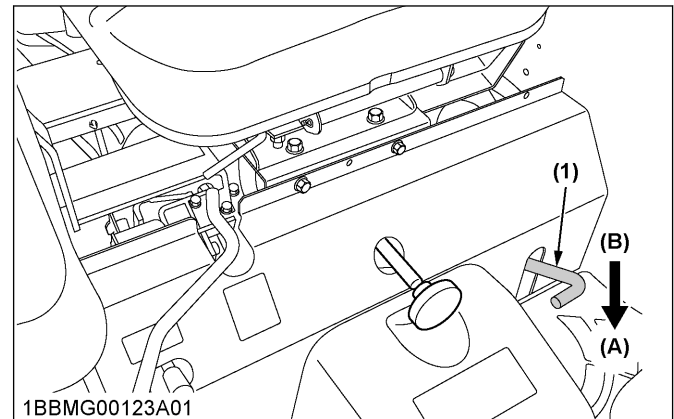

(1) Differential lock pedal
 (A) Press to engage
 (B) Release to disengage

[CAB model]

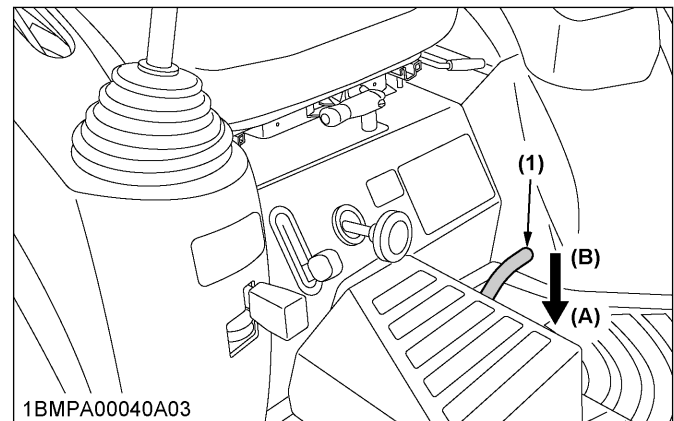

(1) Differential lock pedal
 (A) Press to engage
 (B) Release to disengage

IMPORTANT :

- When using the differential lock, always slow the engine down.
- To prevent damage to the powertrain, do not engage the differential lock when one wheel is spinning and the other is completely stopped.
- If the differential lock cannot be released, lightly depress the brake pedals alternately.

2. Operating the tractor on a road

! WARNING

To avoid personal injury or death:


- To help assure straight line stops when driving at transport speeds, lock the brake pedals together. Uneven braking at road speeds could cause the tractor to roll-over.
- When traveling on the road with a 3-point hitch mounted implement attached, ensure that there is sufficient front weight on the tractor to maintain steering ability.
(See Front ballast on page 83, Rear ballast on page 83.)
- Towed equipment (without brake) must not exceed 1.5 times the tractor weight when traveling on roads or at high speeds.

Be sure the SMV emblem and hazard lights are clean and visible. If towed or rear-mounted equipment obstructs these safety devices, install the SMV emblem and hazard lights on the equipment.

If towed or rear-mounted agricultural equipment obstructs these safety devices, do not travel on public road.


Contact your local Kubota dealer for further details.

[ROPS model]

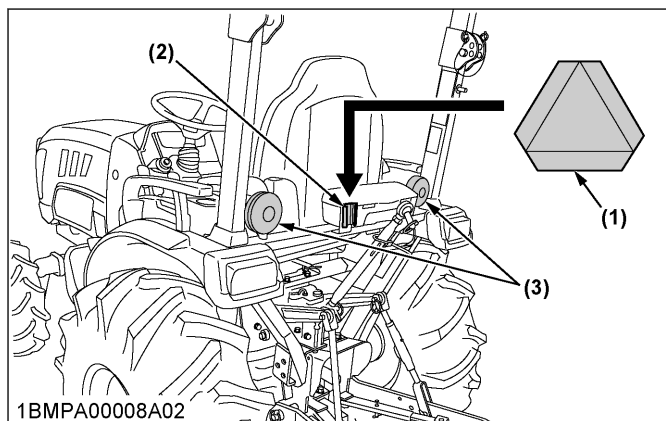

- (1) SMV emblem
(2) Bracket
(3) Hazard light

[CAB model]

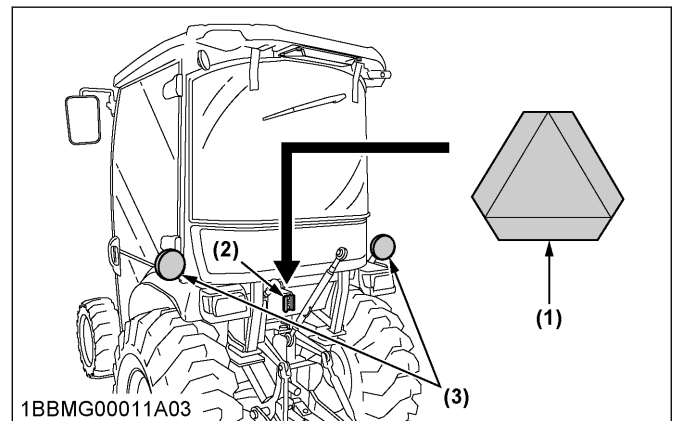

- (1) SMV emblem
(2) Bracket
(3) Hazard light

3. Operating on slopes and rough terrain

! WARNING

To avoid personal injury or death:


- Always back up when going up a steep slope. Driving forward could cause the tractor to tip over backward. Stay off hills and slopes too steep for safe operation.
- Avoid changing gears when climbing or descending a slope.
- If operating on a slope, never disengage the shift levers to neutral. Doing so could cause loss of control.
- Do not drive the tractor close to the edges of ditches or banks which may collapse under the weight of the tractor, especially when the ground is loose or wet.

IMPORTANT :

- To avoid failure of tractor parts, keep the front loader bucket position less than hood height when transporting on rough terrain.
1. Be sure wheel tread is adjusted to provide maximum stability.
(See WHEEL ADJUSTMENT on page 80.)
 2. Slow down for slopes, rough ground, and sharp turns, especially when transporting heavy, rear mounted equipment.
 3. Before descending a slope, shift to a gear low enough to control the speed without using brakes.

4. Transporting the tractor safely

1. The tractor, if damaged, must be carried on a truck. Secure the tractor tightly with ropes. Use the hooks to secure the tractor. Use the hole in position (A) as shown in the following figure.

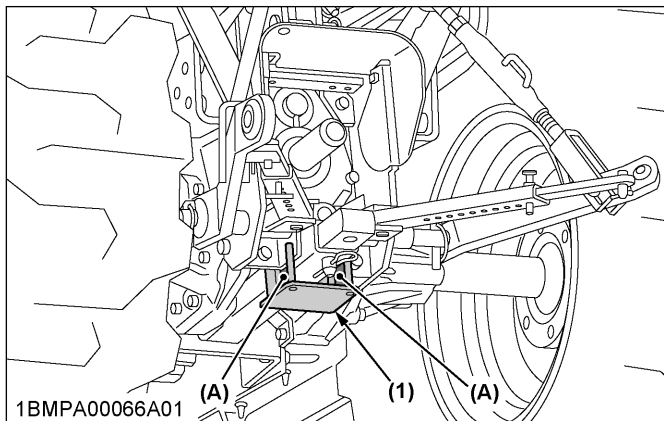

(1) Hook (A) Hole position

2. Follow the instructions below when towing the tractor. Otherwise, the tractor's powertrain may be damaged.
 - Set all the shift levers to "NEUTRAL" position.
 - If possible, start the engine and select 2WD; if creep speed is fitted ensure that it is disengaged.
 - Tow the tractor using its front hitch or drawbar.
 - Never tow faster than 10 km/h (6.2 mph).


5. Directions for the use of power steering

- Power steering is activated only while the engine is running. While the engine is stopped, tractors with power steering function in the same manner as tractors without power steering.
- When the steering wheel is turned all the way to the stop, the relief valve is activated. Do not hold the steering wheel in this position for a long period of time.
- Avoid turning the steering wheel while the tractor is stopped, or tires may wear out sooner.
- The power steering mechanism makes the steering easier. Be careful when driving on the road at high speeds.

6. Electrical outlet


An electrical outlet is supplied for use with implement and electrical equipment.

[ROPS model]

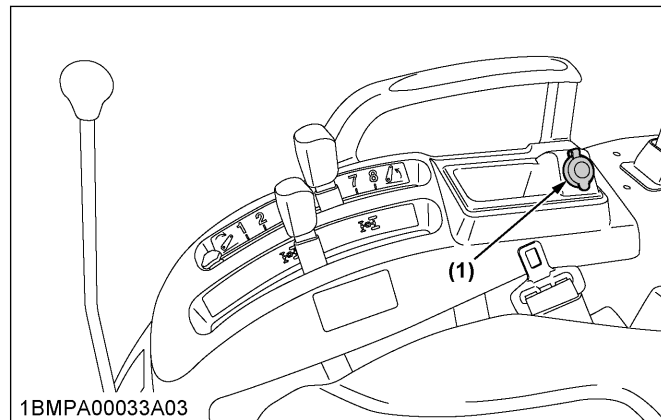


(1) Accessory electrical outlet (DC 12 V, MAX 120 W)

[ROPS model]

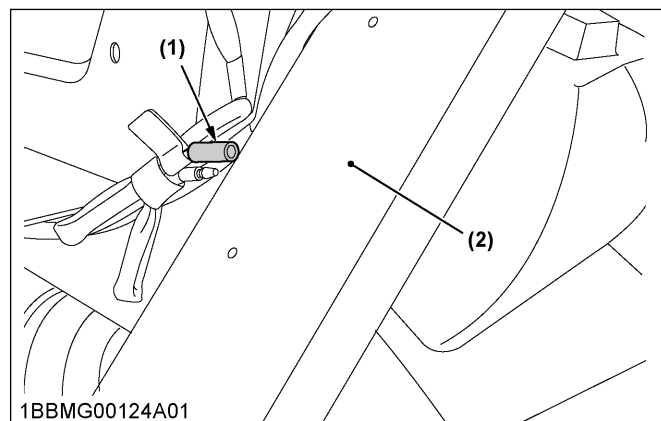


(1) Accessory electrical outlet (DC 12 V, MAX 120 W)
(2) ROPS (Right side)

[CAB model]

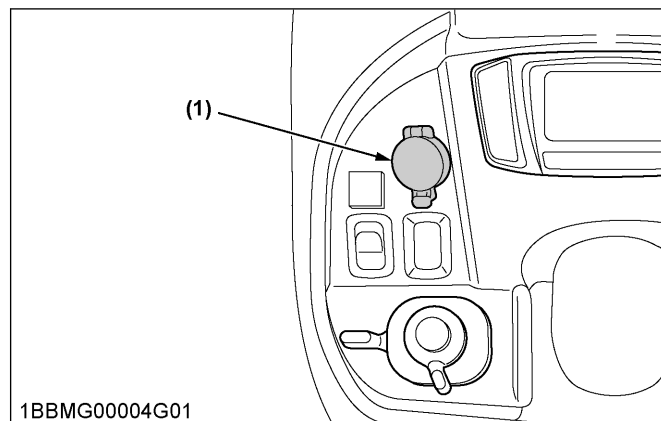

(1) Accessory electrical outlet (DC 12 V, MAX 120 W)

[CAB model]

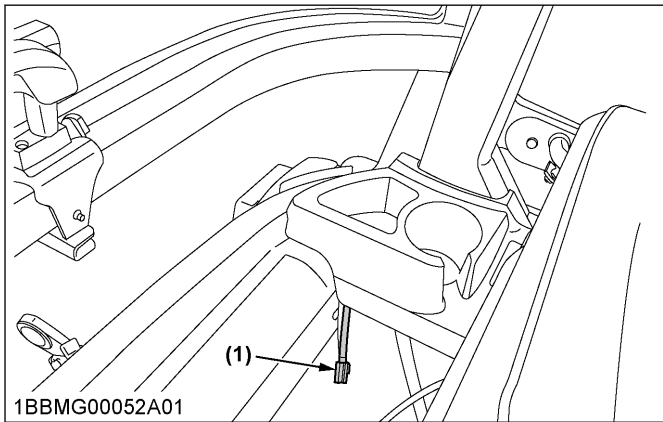

(1) Accessory electrical outlet (DC 12 V, MAX 120 W)

PTO

PTO OPERATION

WARNING


To avoid personal injury or death:

- Before operation, select the correct PTO lever (mid, mid/rear, rear).
- Disengage the PTO, stop the engine, and allow all rotating components to come to a complete stop before connecting, disconnecting, adjusting, or cleaning any PTO driven equipment.

1. PTO select lever [except LX2620SU]


The tractor has a 540 rpm rear PTO speed and a 2500 rpm mid-PTO speed.

[ROPS model]

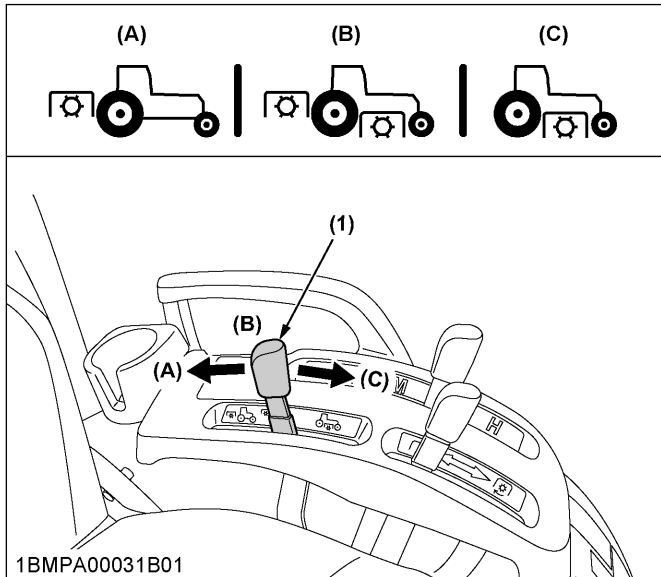

(1) PTO select lever
 (A) Rear-PTO position
 (B) Mid-rear-PTO position
 (C) Mid-PTO position


[CAB model]

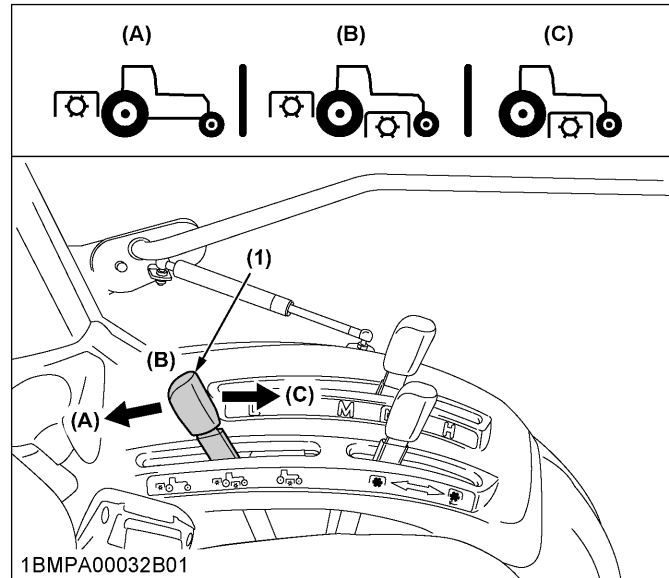

(1) PTO select lever
 (A) Rear-PTO position
 (B) Mid-rear-PTO position
 (C) Mid-PTO position

Mid PTO

To use mid PTO, shift the PTO select lever to mid PTO position and the PTO clutch lever to the "ON" position. The mid PTO is available for Kubota approved implements.

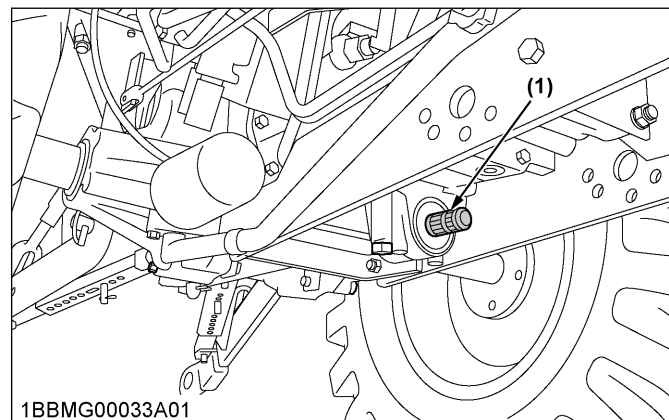

(1) Mid PTO

Mid rear PTO

To use mid and rear PTO at the same time, shift the PTO select lever to mid rear PTO position and the PTO clutch lever to the "ON" position.

Rear PTO

To use rear PTO, shift the PTO select lever to rear PTO position and the PTO clutch lever to the "ON" position.

Mid PTO speed

Engine speed	2500 rpm
PTO speed	2500 rpm


Rear PTO speed

Engine speed	2398 rpm
Shaft	6-spline
PTO speed	540 rpm

2. PTO clutch lever [LX2620]**IMPORTANT :**


- To avoid shock loads to the PTO, reduce engine throttle from high idle to low idle by pushing up on engine throttle when engaging the PTO, then open the throttle to the recommended engine rpm.
- To avoid damage to PTO clutch and implement, shift the PTO clutch lever slowly, when engaging the PTO clutch. Do not keep the PTO clutch lever half way.
- To avoid damage of transmission, when PTO select lever is not smoothly shifted, slightly shift PTO clutch lever.
- To avoid damage of transmission, do not shift PTO select lever until the PTO has stopped completely.

1. The PTO clutch lever engages or disengages the PTO clutch which gives the PTO independent control.
2. Shift the lever to "ON" to engage the PTO clutch. Shift the lever to "OFF" to disengage the PTO clutch.

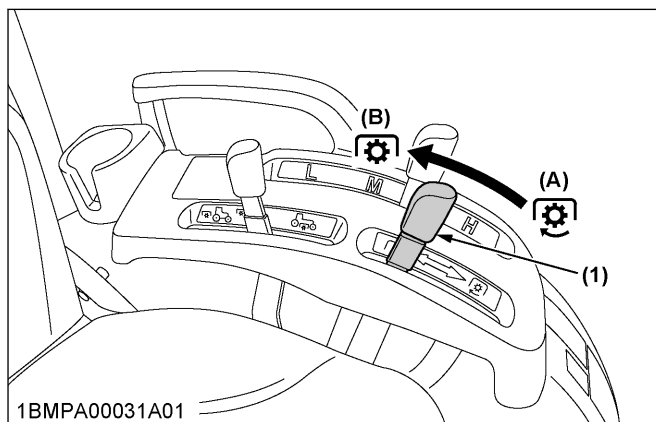[ROPS model]

(1) PTO clutch lever

(A) "ON" "ENGAGE"
 (B) "OFF" "DISENGAGE"

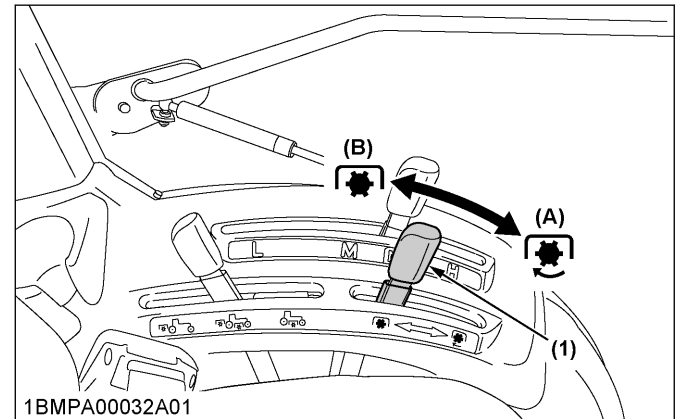[CAB model]

(1) PTO clutch lever

(A) "ON" "ENGAGE"
 (B) "OFF" "DISENGAGE"

NOTE :


- Tractor engine will not start if the PTO clutch lever is in the engaged "ON" position.
- When you stand up from the seat with the PTO clutch lever in the "ON" position, the engine will stop regardless of the position of the PTO select lever.
 This is because the tractor is equipped with an operator presence control (OPC) system.

3. PTO clutch lever [LX2620SU]**IMPORTANT :**

- To avoid shock loads to the PTO, reduce engine throttle from high idle to low idle by pushing up on engine throttle when engaging the PTO, then reengage the engine to high idle.
- To avoid damage to PTO clutch and implement, shift the PTO clutch lever slowly, when engaging the PTO clutch. Do not keep the PTO clutch lever half way.

1. The tractor has a 540 rpm speed position.

- Shift the lever to "ON" to engage the PTO clutch. Shift the lever to "OFF" to disengage the PTO clutch.

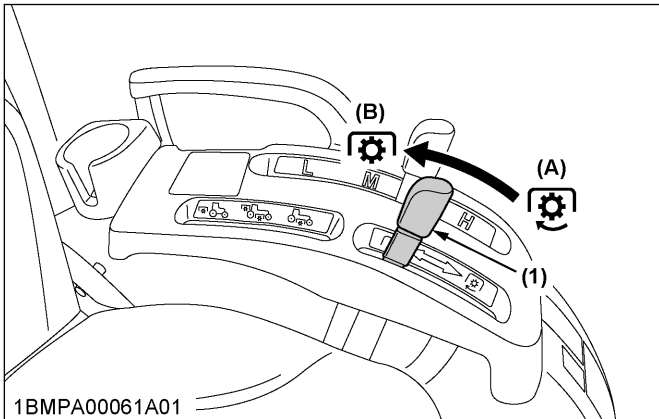

(1) PTO clutch lever (A) "ON" "ENGAGE" (B) "OFF" "DISENGAGE"

Engine speed	2398 rpm
Shaft	6-spline
PTO speed	540 rpm


NOTE :

- Tractor engine will not start if the PTO clutch lever is in the engaged "ON" position.
- When you stand up from the seat with the PTO clutch lever in the "ON" position, the engine will stop regardless of the position of the PTO select lever. This is because the tractor is equipped with an operator presence control (OPC) system.

4. LCD monitor message

- The PTO rpm can be checked in the LCD monitor. (See Changing display mode on page 58.)

Display switch "ON"

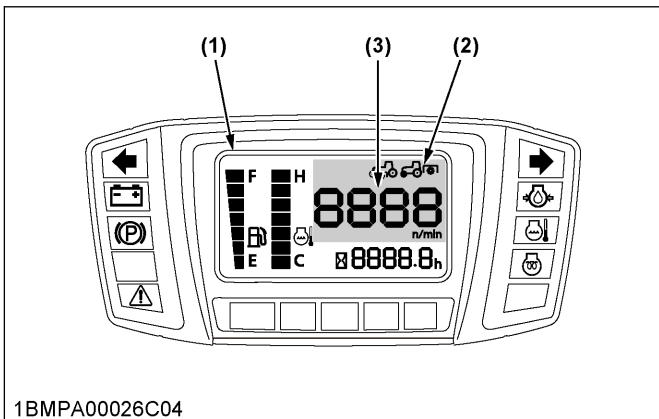

(1) LCD monitor (2) PTO indicator (3) PTO speed

NOTE :


- With the PTO in the "ON" position, a numeric value is displayed on the LCD monitor even if the PTO shaft is not turning.

5. PTO shaft cover and shaft cap

! WARNING

To avoid personal injury or death:

- Keep the PTO shaft cover in place at all times. Put back the PTO shaft cap when the PTO is not in use.
- Before connecting or disconnecting a drive shaft to the PTO shaft, be sure the engine is off. Also, if a raisable PTO shaft cover is equipped, raise the cover up to the raised position. Afterward return the PTO shaft cover to the normal position.

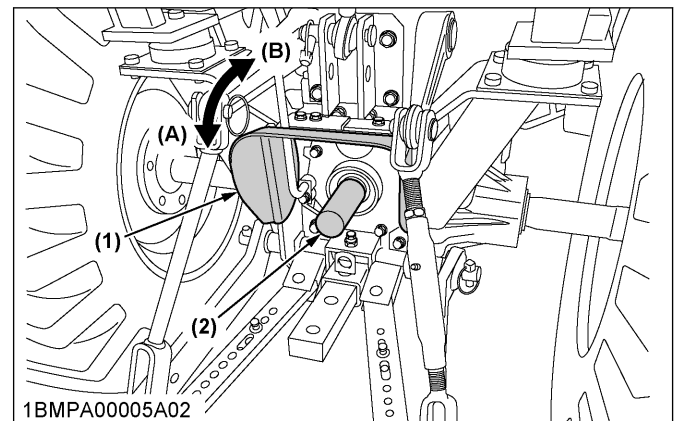

(1) PTO shaft cover (A) "NORMAL" position (2) PTO shaft cap (B) "RAISED" position

IMPORTANT :


- The universal joint of the PTO drive shaft is technically limited in its moving angle. Refer to the PTO drive shaft instructions for proper use.

6. Stationary PTO

To park the tractor and use the PTO system (for chipper or pump, for example), start the PTO system in the following steps.


- Apply the parking brake and place blocks at the tires.
- Make sure the shift levers are at neutral, and start the engine.
- Set the PTO select lever to "rear PTO" position. [except LX2620SU]
- Push and hold the stationary PTO switch for more than 1 second and the switch light will turn on.

[ROPS model]

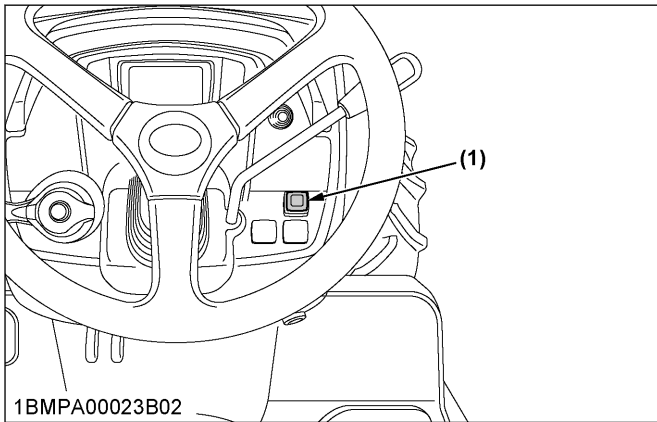

(1) Stationary PTO switch


[CAB model]

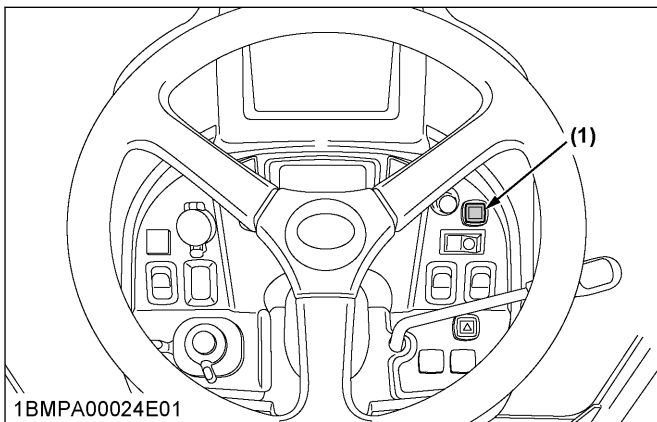

(1) Stationary PTO switch


5. Set the PTO clutch lever to "ON" position.
6. Set the engine speed to provide recommended rear PTO speed.
7. Get off the tractor.

[ROPS model]

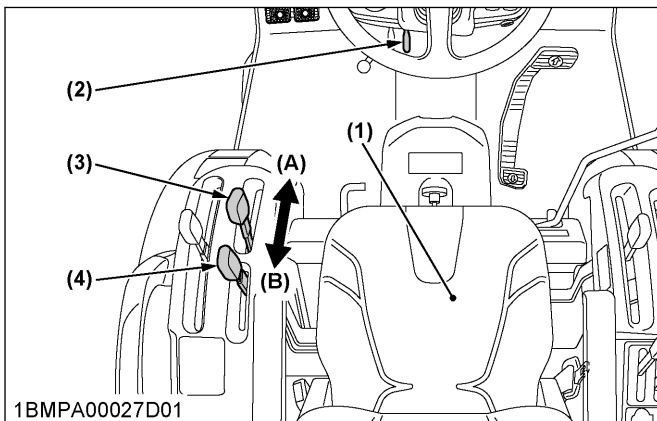

(1) Seat (A) "ON"
 (2) Parking brake lever (B) "OFF"
 (3) PTO clutch lever
 (4) PTO select lever [except LX2620SU]

[CAB model]

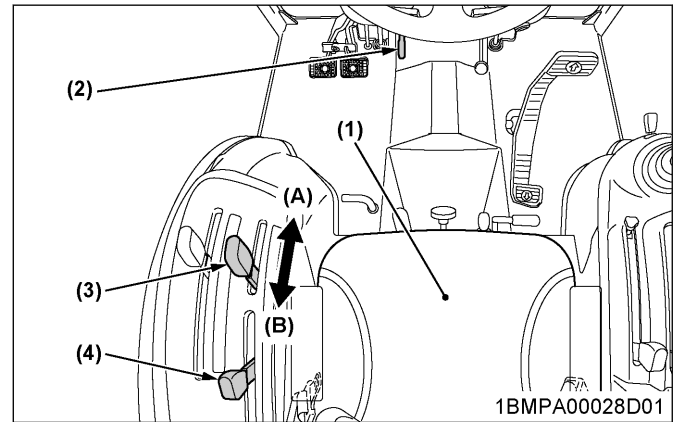


(1) Seat (A) "ON"
 (2) Parking brake lever (B) "OFF"
 (3) PTO clutch lever
 (4) PTO select lever

NOTE :

- If the PTO system is engaged and you stand up from the seat and release the parking brake, the engine stops automatically.

3-POINT HITCH AND DRAWBAR

[ROPS model]

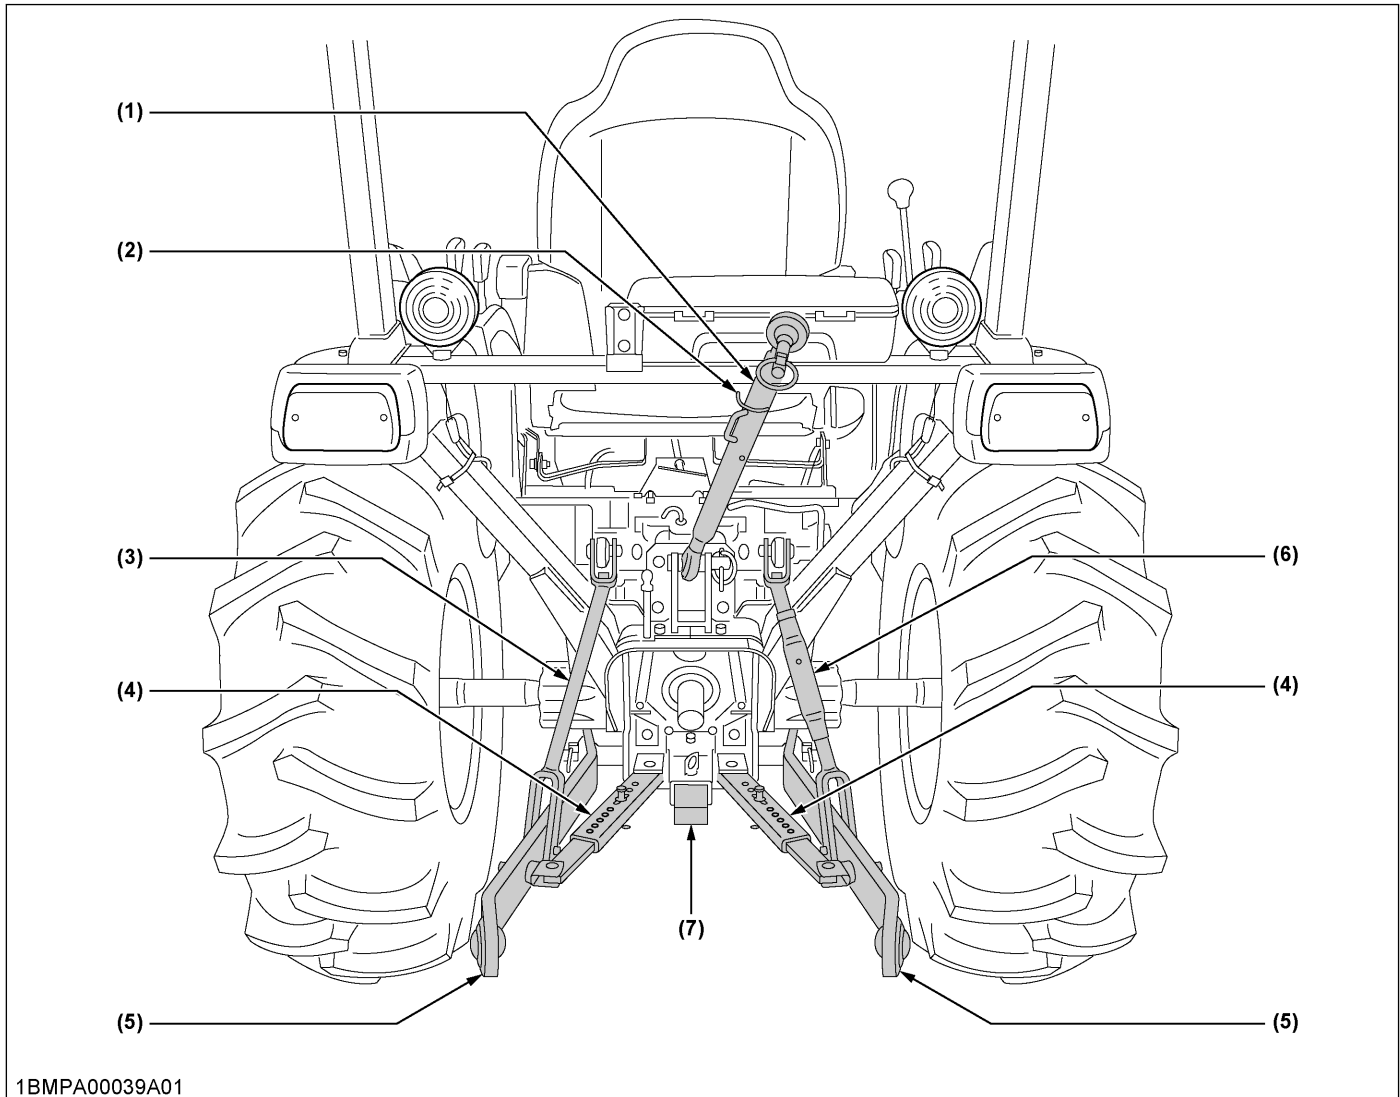


1BMPA00039A01

- (1) Top link
- (2) Top link holder
- (3) Lifting rod (left)
- (4) Telescopic stabilizers

- (5) Lower link
- (6) Lifting rod (right)
- (7) Drawbar

[CAB model]

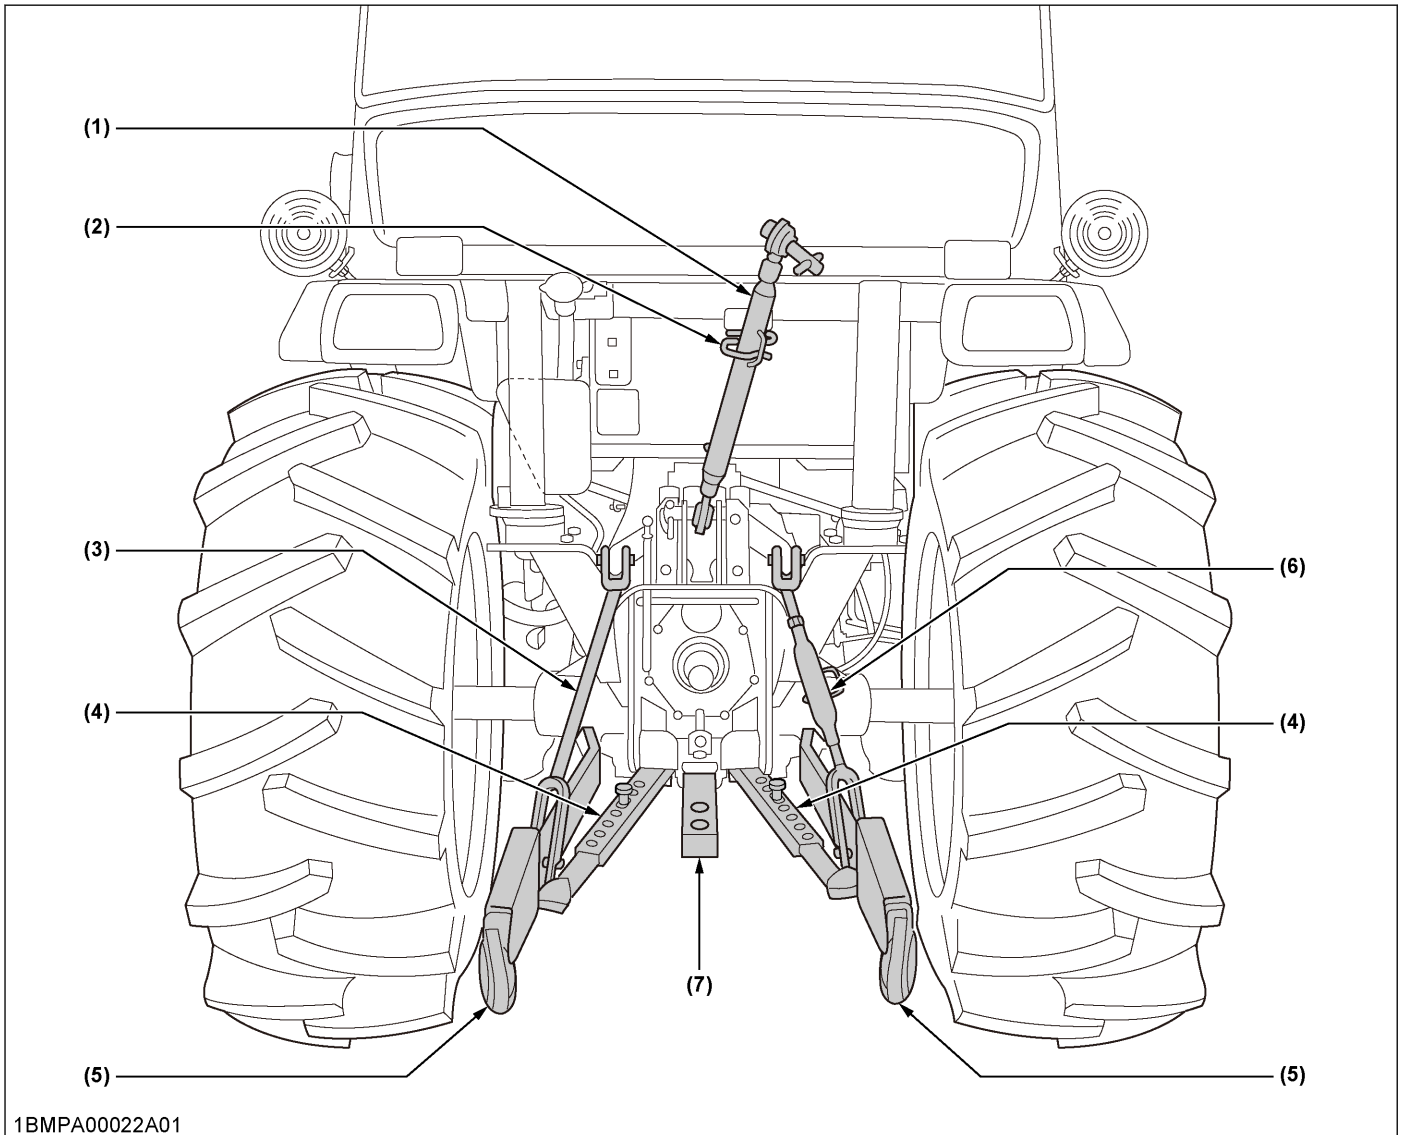

1BMPA00022A01

- | | |
|----------------------------|-------------------------|
| (1) Top link | (5) Lower link |
| (2) Top link holder | (6) Lifting rod (right) |
| (3) Lifting rod (left) | (7) Drawbar |
| (4) Telescopic stabilizers | |

THE 3-POINT HITCH SETUP

1. Make preparations for attaching implement.
 - Selecting the holes of lower links on page 70
 - Selecting the top link mounting holes on page 70
 - Drawbar on page 71
2. Attaching and detaching implements

WARNING

To avoid personal injury or death:


- Stop the engine and remove the key.
- Do not stand between the tractor and implement unless the parking brake is applied.
- Before attaching or detaching the implement, locate the tractor and implement on a firm level surface.
- Whenever an implement or other attachment is connected to the tractor 3-point hitch, check the full range of operation for interference, binding or PTO separation.

- Lifting rod (right) on page 71
- Top link on page 71
- Telescopic stabilizers on page 71
- Telescopic lower links [CAB model] on page 72

1. Selecting the holes of lower links


There are 2 holes in the lower links. For most operations, the lifting rods should be attached to the (A) hole.

[ROPS model]

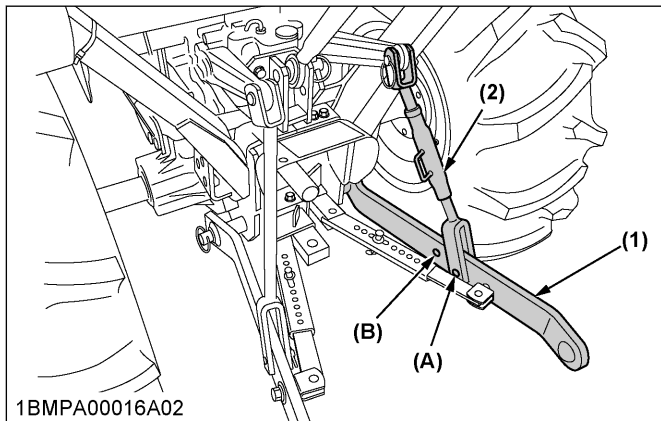

- (1) Lower link (A) Hole
 (2) Lifting rod (B) Hole

[CAB model]

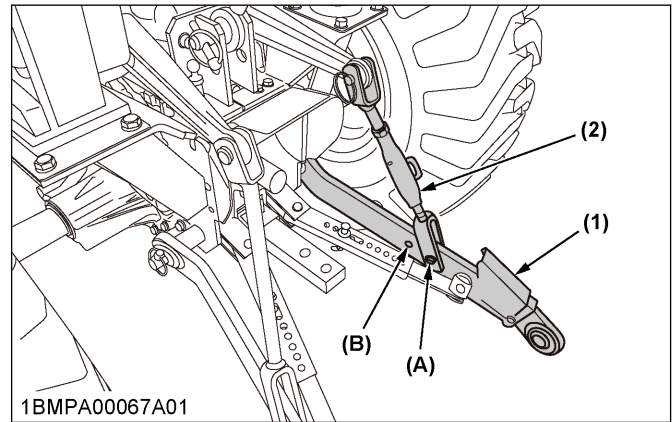

- (1) Lower link (A) Hole
 (2) Lifting rod (B) Hole


NOTE :

- The lifting rods may be attached to (B) hole for greater lifting height.

2. Selecting the top link mounting holes

Select the proper set of holes.


(See Hydraulic control unit reference chart on page 79.)

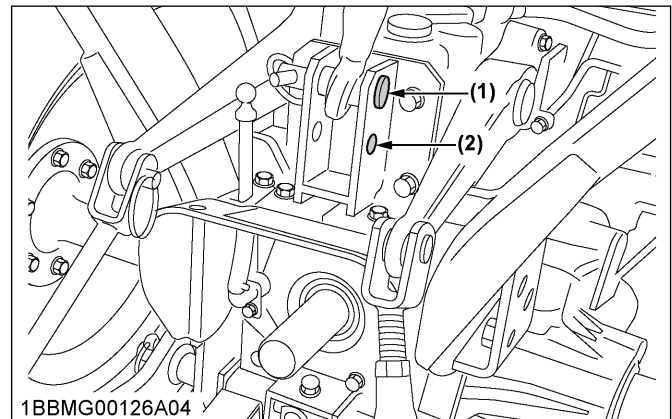

- (1) Top link mounting hole 1
 (2) Top link mounting hole 2

IMPORTANT :

- When storing the top link in its bracket, the top link pin may damage the rear glass of the CAB. Remove the pin from the hole at the end of the top link and insert it in the unused top link mounting hole.

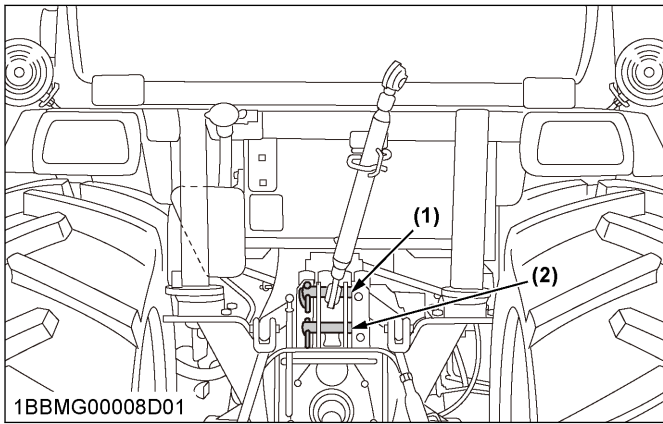

- (1) Top link mounting hole 1
- (2) Top link mounting hole 2


3. Drawbar

Remove the drawbar if a close-mounted implement is attached.

4. Lifting rod (right)


1. Loosen the lock nut.

[ROPS model]

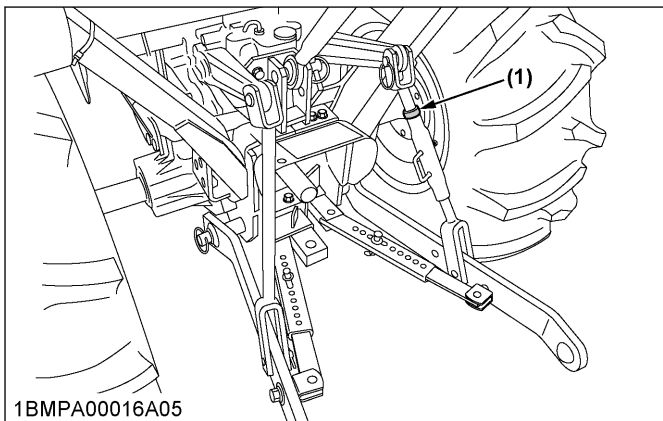

- (1) Lock nut

[CAB model]

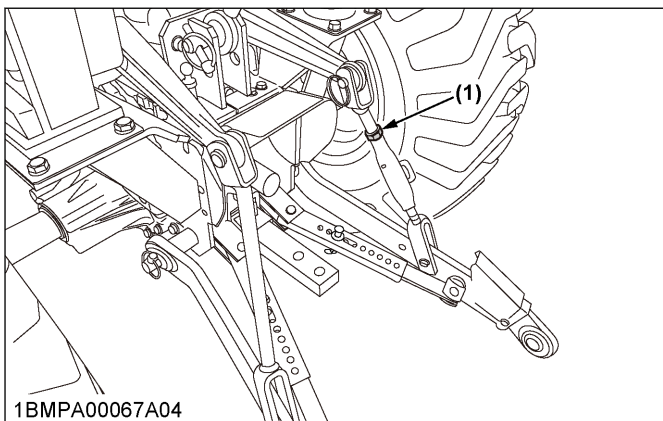


- (1) Lock nut

2. Put the 3-point mounted implement on the ground.


3. Adjust the height of the lifting rod by turning it with the adjusting handle until the 3-point mounted implement is level.

[ROPS model]

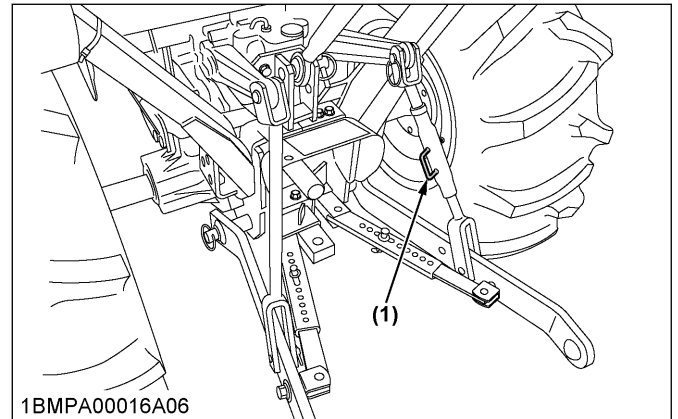

- (1) Adjusting handle

[CAB model]

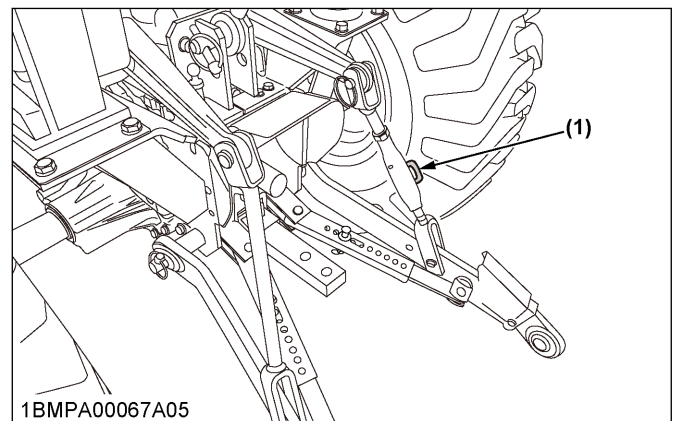

- (1) Adjusting handle

4. Shorten or lengthen the adjustable lifting rod.
5. After adjustment, tighten the lock nut securely.


5. Top link

1. Adjust the angle of the implement to the desired position by shortening or lengthening the top link.
2. The proper length of the top link varies according to the type of implement being used.

6. Telescopic stabilizers

1. Adjust the telescopic stabilizers to control horizontal sway of the implement.
Select the proper set of holes.
(See Hydraulic control unit reference chart on page 79.)

- After aligning satisfactorily, insert the set-pin through any one of the holes on the outer tube that align with one of the holes on the inner bar and both stabilizers will be locked. If the set-pin is inserted through the slot to engage one of the holes on the inner bar, a limited degree of sway will be permitted.

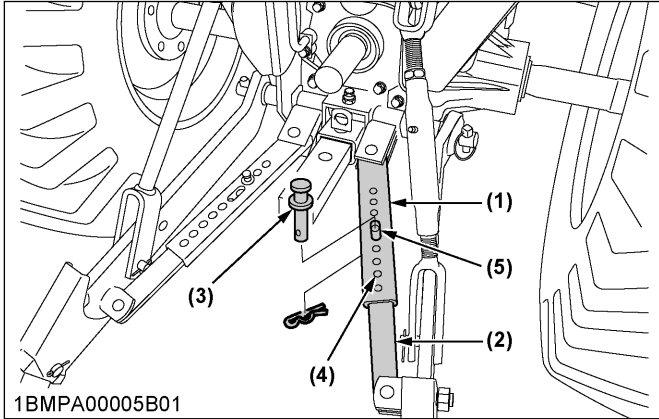


- (1) Outer tube
- (2) Inner bar
- (3) Set-pin
- (4) Hole
- (5) Slot

• **Never pull from the top link, the rear axle or any point above the drawbar. Doing so could cause the tractor to tip over rearward.**

1. Adjusting drawbar length

- When towing an implement, it is recommended that hole (A) in drawbar be utilized.
- For information about the drawbar load, read the implement limitations section of this manual. (See IMPLEMENT LIMITATIONS on page 32.)

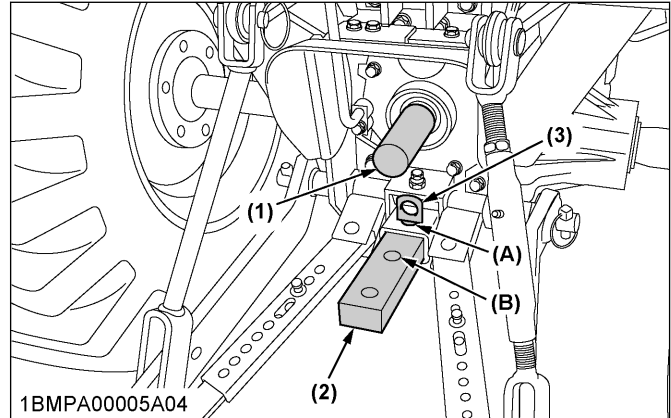


- (1) PTO Shaft cap
- (2) Drawbar
- (3) Drawbar pin
- (A) Hole
- (B) Hole

7. Telescopic lower links [CAB model]

To attach an implement, follow the instructions below:

- Push the levers, pull out the lower link ends, and attach to the implement.
- Back up the tractor slightly to make sure the lower links are pushed in securely.

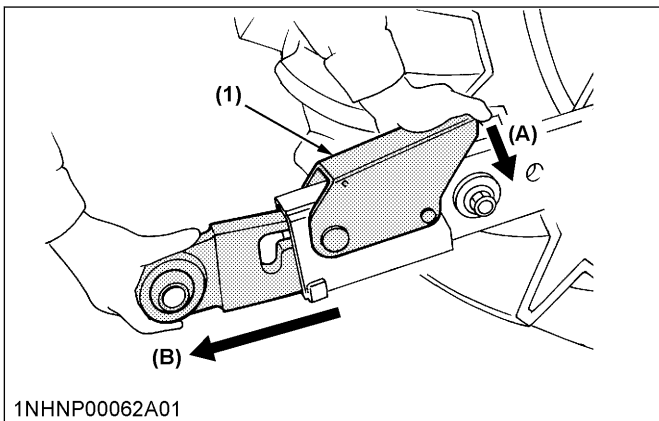

- (1) Lever
- (A) Push
- (B) Pull out

DRAWBAR

WARNING
To avoid personal injury or death:

HYDRAULIC UNIT

3-POINT HITCH CONTROL SYSTEM

⚠ WARNING


To avoid personal injury or death:

- Before using the 3-point hitch controls, ensure that no person or object is in the area surrounding the implement or 3-point hitch. Do not stand on or near the implement or between the implement and tractor when operating the 3-point hitch controls.

1. Position control

This will control the working depth of 3-point hitch mounted implement regardless of the amount of pull required.


[ROPS model]

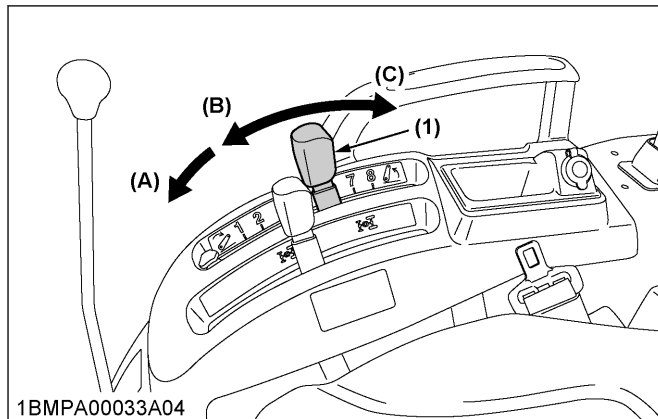

(1) Position control lever

(A) "FLOAT"
(B) "DOWN"
(C) "UP"

[CAB model]

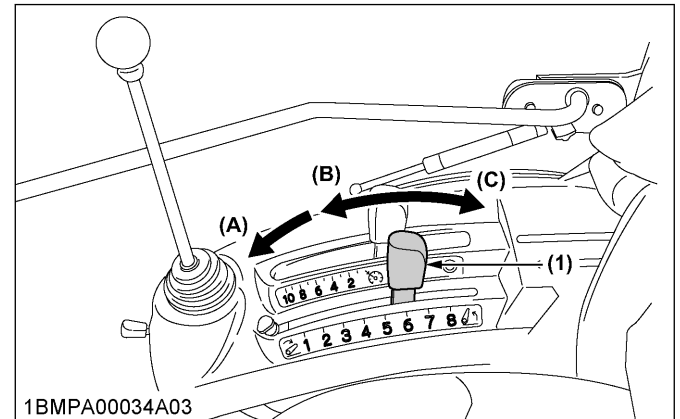

(1) Position control lever

(A) "FLOAT"
(B) "DOWN"
(C) "UP"

IMPORTANT :

- If the 3-point hitch cannot be raised by setting the hydraulic control lever to the "UP" position after long term storage or when changing the transmission oil, turn steering wheel to the right and left several times to bleed air from the system.
- Do not operate until the engine is warmed up. If operation is attempted when the engine is still cold, the hydraulic system may be damaged.
- If noises are heard when implement is lifting after the hydraulic control lever has been activated, the hydraulic mechanism is not adjusted properly. Unless corrected, the unit will be damaged. Contact your Kubota dealer for adjustment.


2. 3-point hitch lowering speed knob

⚠ WARNING

To avoid personal injury or death:

- A fast lowering speed may cause damage or injury. The lowering speed of the implement should be adjusted to 2 or more seconds.


The lowering speed of the 3-point hitch can be controlled by adjusting the 3-point hitch lowering speed knob.

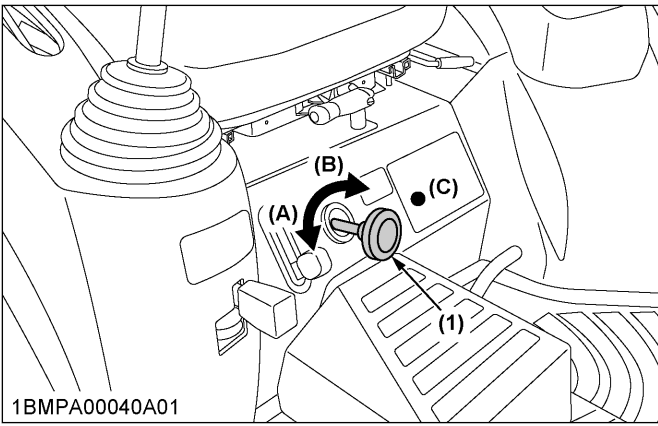

1BMPA00040A01

- (1) 3-point hitch lowering speed knob
- (A) "FAST"
- (B) "SLOW"
- (C) "LOCK"

When implement is attached

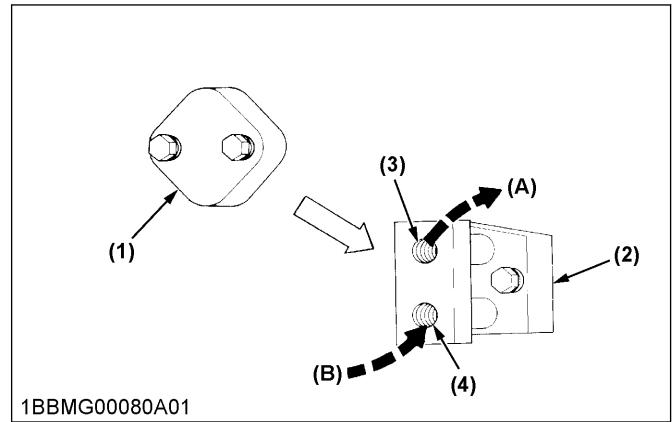

1BBMG00080A01

- (1) Block cover
- (2) Block outlet cover (option)
- (3) Outlet
- (4) Inlet
- (A) To implement inlet
- (B) From implement outlet

Implement inlet

Max. flow	18.9 L/min (5.0 U.S.gals./min)
Max. pressure	15.8 MPa to 16.6 MPa (161 kgf/cm ² to 169 kgf/cm ²) (2292 psi to 2408 psi)

NOTE :

- If the control valve of implement has the relief valve, the tank port flow from implement should be connected to the port (c).

[ROPS model]

AUXILIARY HYDRAULICS

Hydraulic outlet is (rear) provided on the tractor.


1. Hydraulic block type outlet

Hydraulic block type outlet is useful when adding hydraulically operated equipment such as front end loader, front blade, etc.

When an implement is attached


1. Remove the block cover.
2. Attach the block outlet cover (option).

When implement is not attached

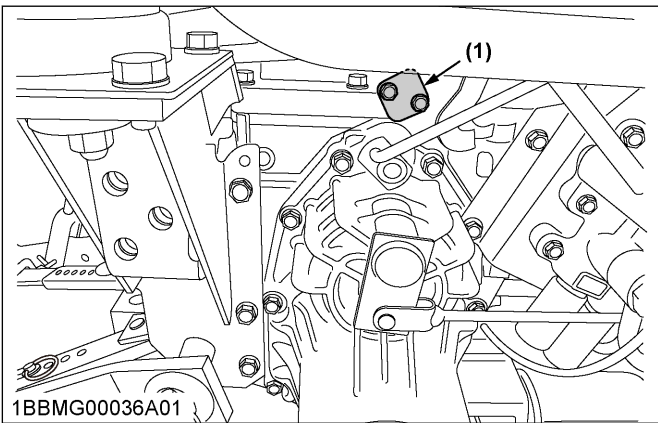

1BBMG00036A01


- (1) Block cover

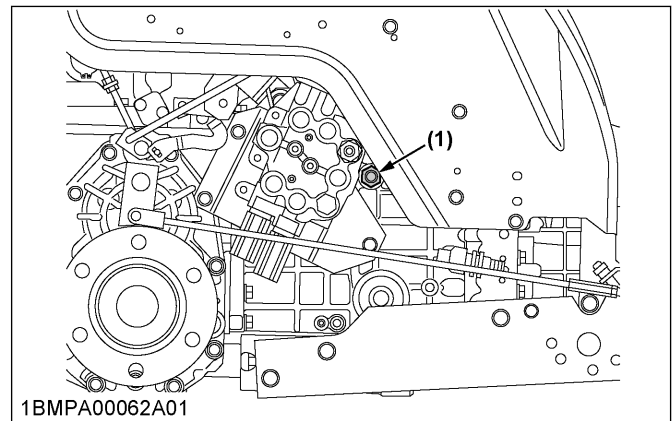

1BMPA00062A01

- (1) Port (c)

[CAB model]

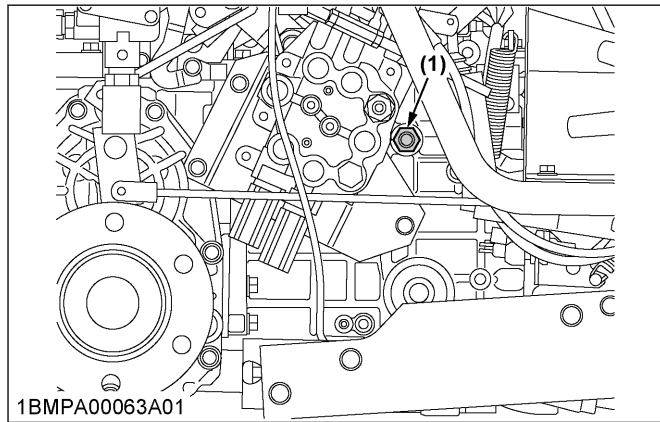

(1) Port (c)


2. Dual remote hydraulic control system

The tractor is equipped with the double-acting 2-segment hydraulic control valve for front loader. To apply the hydraulic power take-off for general attachments, keep the following point in mind.

2.1 Control lever and hydraulic hose connections

Connect the control lever in its specified direction and the hydraulic hoses to their specified ports.


[ROPS model]

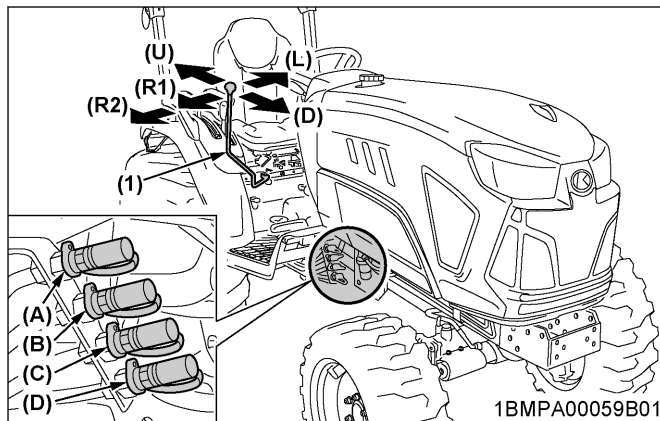

(1) Loader control lever


- (R) Right
- (L) Left
- (U) Up
- (D) Down

[CAB model]

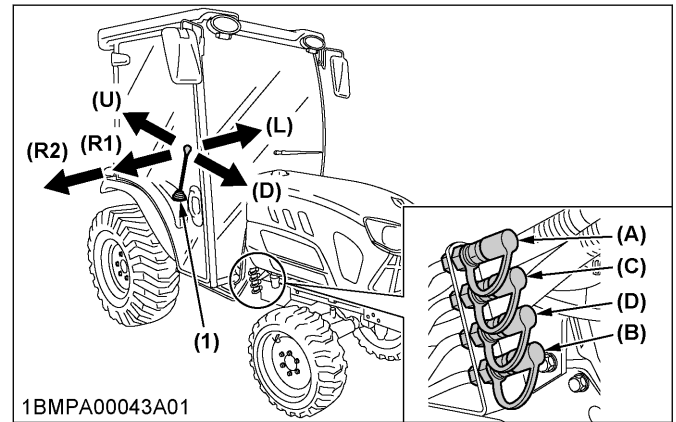

(1) Loader control lever

 - (R) Right
- (L) Left
- (U) Up
- (D) Down



Hydraulic outlet ports of first segment

Lever		UP		DOWN	
Port	(A)	In	←	Out	→
	(B)	Out	→	In	←

Hydraulic outlet ports of second segment

Lever		RIGHT		LEFT	
Port	(C)	In	←	Out	→
	(D)	Out	→	In	←

IMPORTANT :

To avoid damage of the attachments:

- Do not connect attachments through the hydraulic motor to the [C] and [D] ports. If the control lever is moved to the Regeneration position (R1), the seals on the hydraulic motor will be damaged.
- This control valve is provided with the Regeneration position. When the [C] and [D] ports are used to take off hydraulic power for the hydraulic cylinder, connect the [C] port to the "Head-End" side port of the hydraulic cylinder.
- Make the following connections when using this valve to take off hydraulic power for the hydraulic cylinder.


Colored coupler	Hydraulic cylinder port
[B: yellow], [C: blue]	Head-end side
[A: white], [D: red]	Rod-end side

- For the attachment side, the couplers made by Parker Hannifin are recommended.

2.2 Rear hydraulic outlet (if equipped)


With the optional kit in place, oil can be taken out of the back of the tractor.

[ROPS model]

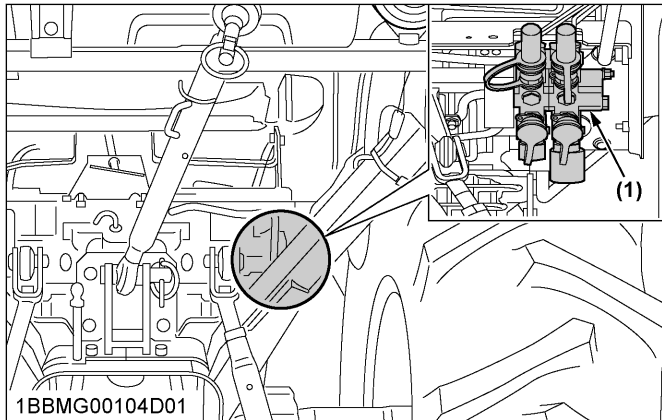

(1) Rear hydraulic outlet

[CAB model]

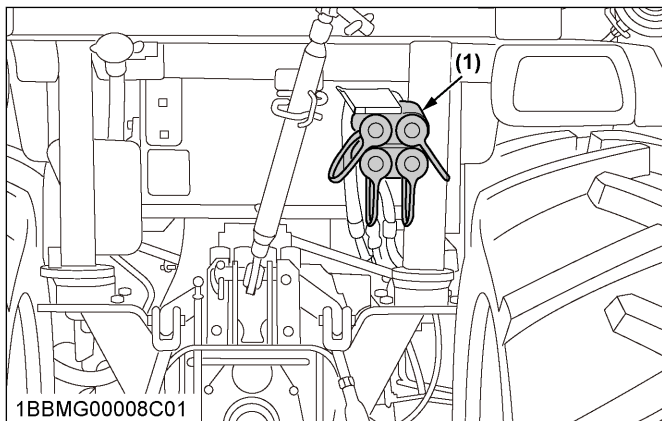


(1) Rear hydraulic outlet

2.3 Loader/remote control valve lever


1. Before moving the lever, make sure that the hydraulic hoses for attachments are connected.
2. Move the lever diagonally ((a), (b), (c) shown in the figure), and the first and second segments can be controlled simultaneously.

[ROPS model]

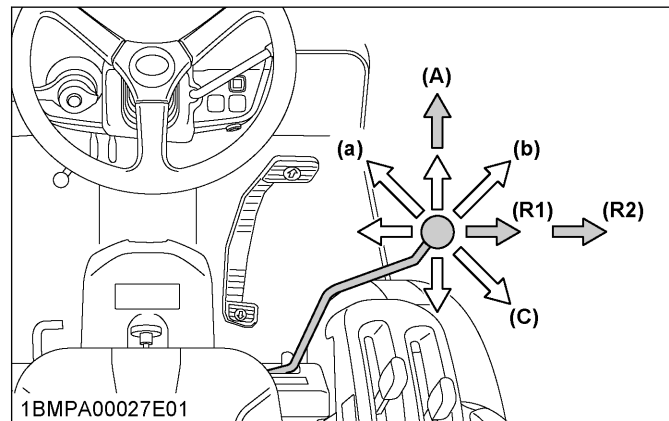

(A) "FLOAT" position

[CAB model]

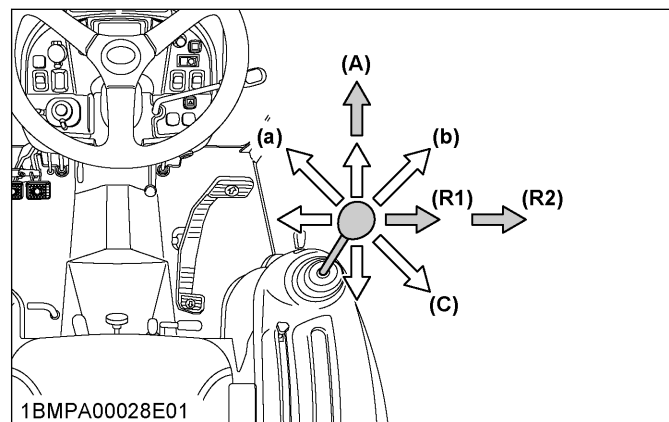

(A) "FLOAT" position

NOTE :

- Move the lever to the "FLOAT" position, and it will be held there by the detent mechanism. To use the valve as a floating valve with detents, connect the hydraulic hoses to ports [A] and [B].
- When taking off hydraulic power from port [D], the flow rate can be adjusted in 2 stages with the lever. The flow rate is high at position (R1) and low at position (R2). Move the lever to position (R1) or (R2) depending on the attachment in use.

2.4 Valve lock


! WARNING

To avoid personal injury or death from crushing:

- Do not utilize the valve lock for machine maintenance or repair.
- The valve lock is to prevent accidental actuation when implement is not in use or during transport.


The control valve is equipped with a valve lock feature. The control valve is locked in the "LOCK" position. The lock is not intended and will not prevent a leak down of the implement during the period of storage.

[ROPS model]

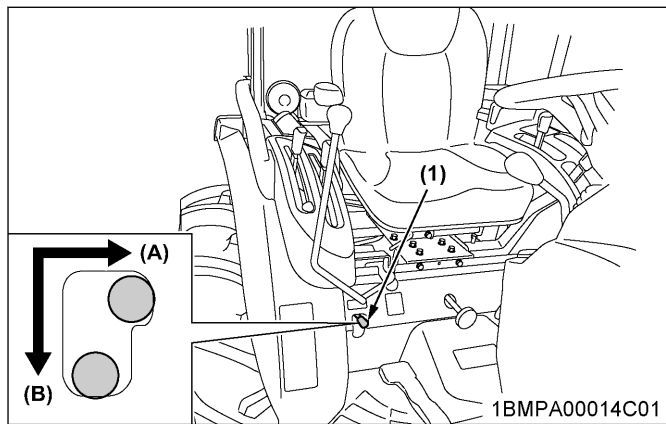

(1) Lock lever
 (A) "UNLOCK" position
 (B) "LOCK" position

[CAB model]

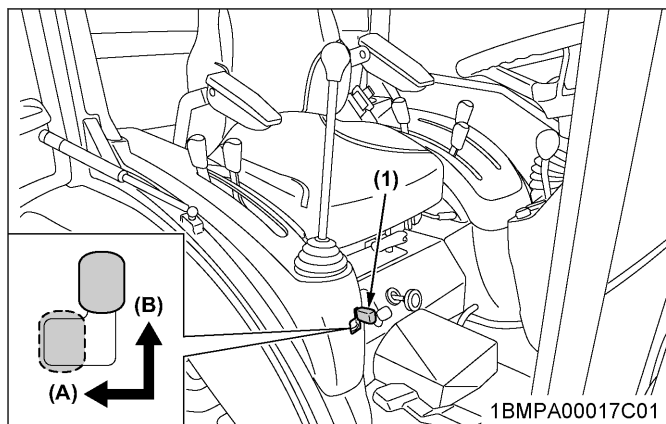

(1) Lock lever
 (A) "UNLOCK" position
 (B) "LOCK" position

REMOTE HYDRAULIC CONTROL SYSTEM (IF EQUIPPED)

The hydraulic auxiliary control valves can be installed with up to 2 segments.

1. Remote control valve

There are 2 types of remote valves available for these models.

- Double acting valve.
- Double acting valve with float position:
 This valve may be placed in the float mode with the control lever all the way forward. The cylinder is free to extend or retract, letting an implement such as a loader bucket follow the ground.

NOTE :

- Double acting valve with float position cannot be attached to the 1st position.


2. Remote control valve lever

The remote control valve lever directs pressurized oil flow to the implement hydraulic system.

Example: Installing double segment valves


1st	Double acting valve
2nd	Double acting valve with float position

[ROPS model]

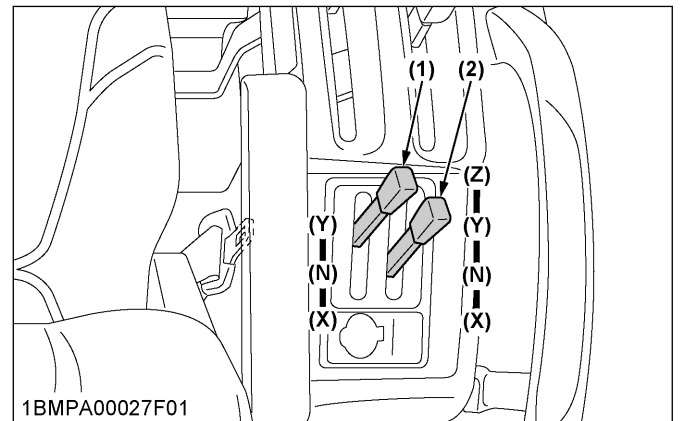


(1) Remote control valve lever 1
 (2) Remote control valve lever 2

[ROPS model]


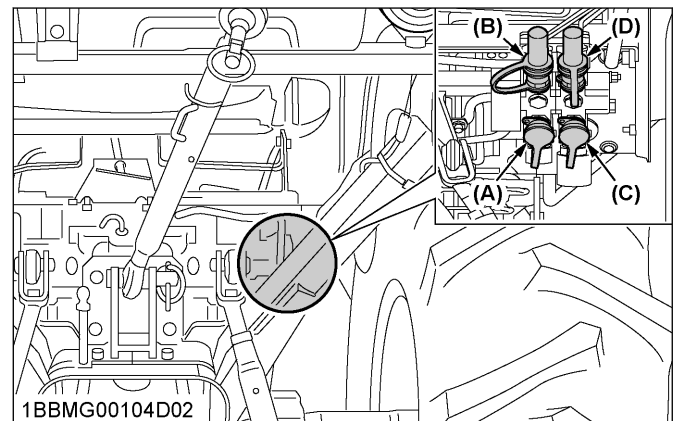


[CAB model]

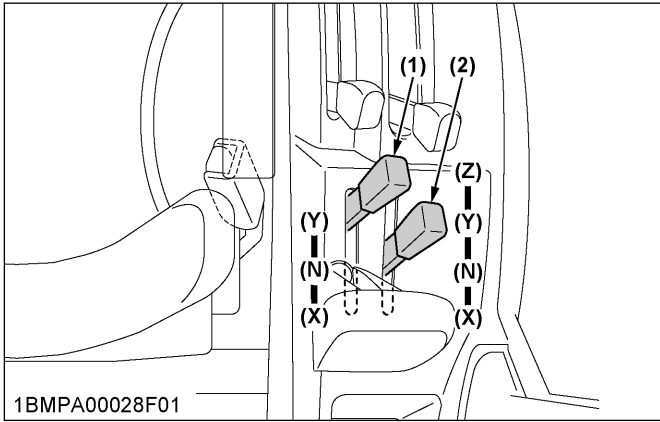

(1) Remote control valve lever 1
(2) Remote control valve lever 2

 [CAB model]

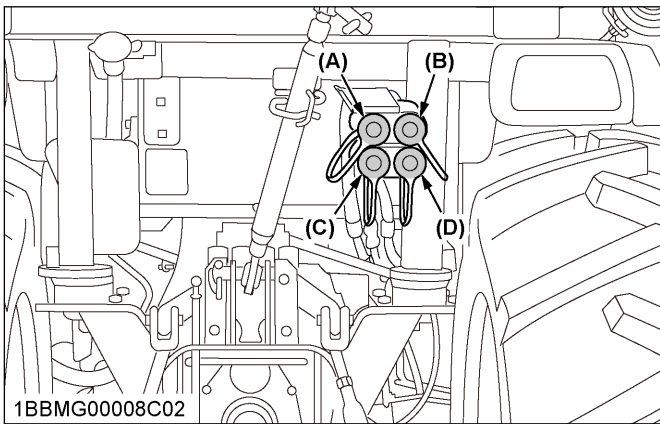

Lever 1		Lever position			
		Y		X	
Port	(A)	In	←	Out	→
	(B)	Out	→	In	←

Lever 2		Lever position					
		Z (detent)	Y		X		
Port	(C)	In	Float	In	←	Out	→
	(D)	Out		Out	→	In	←

Coupler size	
Port (A) (B) (C) (D)	1/4 NPTF

IMPORTANT :

- Do not hold the lever in the "REARWARD" or "FORWARD" position once the remote cylinder has reached the end of the stroke, as this will cause oil to flow through the relief valve.

- Forcing oil through the relief valve for extended periods will overheat the oil.
- When using the tractor hydraulic system to power the front loader, do not operate the boom and bucket cylinders simultaneously.

NOTE :

- To use the single-acting cylinder with the float valve, connect this cylinder to the (C) port. To extend a single-acting cylinder, pull the remote control valve lever rearward. To retract a cylinder, push it fully forward to the "FLOAT" position. Do not hold it in the down position or the transmission fluid may overheat.

3. Remote control valve coupler

! WARNING
To avoid personal injury or death:

- Stop the engine and relieve pressure before connecting or disconnecting lines.
- Do not use your hands to check for leaks.

Connecting

- Clean both couplers.
- Remove dust plugs.
- Insert the implement coupler into the tractor hydraulic coupler.
- Pull the implement coupler slightly to make sure that the couplers are firmly connected.

Disconnecting


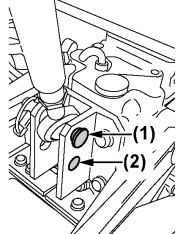
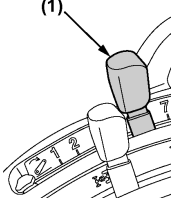
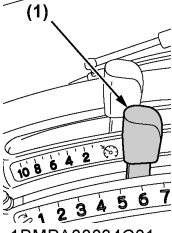
 
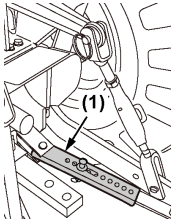
- Lower the implement to the ground to release hydraulic pressure from the hoses.
- Clean the couplers.
- Relieve pressure by moving the hydraulic control levers with the engine shut off. To release the hose, pull it straight from the hydraulic coupler.
- Clean oil and dust from the coupler, then replace the dust plugs.

NOTE :

- Your local Kubota dealer can supply parts for adapting couplers to hydraulic hoses.

4. Hydraulic control unit reference chart

In order to handle the hydraulics properly, the operator must be familiar with the following. Although this information may not be applicable to all types of implements and soil conditions, it is useful for general conditions.

Implement	 1FEHH00035A01 Soil condition	 1BBMG00055B02 Top link mounting holes	[ROPS model]  1BMPA00033B01 [CAB model]  1BMPA00034C01 (1) Position control lever	 1FEHH00093A01 Gauge wheel	 1BMPA00067B01 (1) Telescopic stabilizers	Remarks
Moldboard plow	Light soil Medium soil Heavy soil	Hole set (1): Hole set (2) is used only when there is some obstacle that prevents you from using the hole set (1).	Position control	Yes/No	Loose	Insert the set-pin through the slot on the outer tube that align with one of the holes on the inner bar. For implements with gauge wheels, lower the implements to the ground.
Disc plow	—					
Harrow (spike, spring-tooth, disc type)	—					
Subsoiler and so on.	—					
Weeder, ridger, and so on.	—					
Earth mover, digger, scraper, manure fork, rear carrier, and so on.	—					
Mower (mid-and rear-mount type) Hay rake, tedder, and so on.	—					
		Yes	Tighten	Telescopic stabilizer should be tight enough to prevent excessive implement movement when implement is in raised position. For implements with gauge wheels, lower the implements to the ground.		
		Yes/No				

TIRES, WHEELS, AND BALLAST

TIRES

WARNING

To avoid personal injury or death:

- Do not attempt to mount a tire on a rim. Tires should be mounted by a qualified person with the proper equipment.
- Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure shown in the operator's manual.

IMPORTANT :

- Do not use tires other than those approved by Kubota.

1. Inflation pressure

Although the tire pressure is factory-set to the prescribed level, it naturally drops slowly in the course of time. Thus, check it every day and inflate as necessary.

IMPORTANT :

- When using large diameter industry tire with the mark *, a separate spacer kit is needed.

Rear tire

Tire sizes	Inflation pressure
12.4-16.4, 4PR	110 kPa (1.1 kgf/cm ² , 16 psi.)
13.6-16, 4PR	100 kPa (1.0 kgf/cm ² , 14 psi.)
12.4-16 Industry, 4PR	138 kPa (1.4 kgf/cm ² , 20 psi.)
14-17.5 Industry, 6PR	210 kPa (2.1 kgf/cm ² , 30 psi.)
14-17.5 R14, 6PR	210 kPa (2.1 kgf/cm ² , 30 psi.)
15-19.5 Industry, 4PR*	210 kPa (2.1 kgf/cm ² , 30 psi.)
15-19.5 Industry, 6PR*	210 kPa (2.1 kgf/cm ² , 30 psi.)
15-19.5 R14, 8PR*	210 kPa (2.1 kgf/cm ² , 30 psi.)

Front tire

Tire sizes	Inflation pressure
7-12, 4PR	170 kPa (1.7 kgf/cm ² , 24 psi.)
24×8.50-14, 4PR	150 kPa (1.5 kgf/cm ² , 22 psi.)
23×8.50-14 Industry, 4PR	241 kPa (2.5 kgf/cm ² , 35 psi.)
23×8.50-12 Industry, 6PR	345 kPa (3.5 kgf/cm ² , 50 psi.)
23×8.50-12 R14 6PR	234 kPa (2.4 kgf/cm ² , 34 psi.)
25×8.50-14 Industry, 4PR*	250 kPa (2.5 kgf/cm ² , 35 psi.)
25×8.50-14 Industry, 6PR*	345 kPa (3.5 kgf/cm ² , 50 psi.)
25×8.50-14 R14 6PR*	221 kPa (2.2 kgf/cm ² , 32 psi.)

2. Dual tires

Dual tires are not approved.

WHEEL ADJUSTMENT

WARNING

To avoid personal injury or death:

- When working on slopes or when working with a trailer, set the wheel tread as wide as practical for maximum stability.
- Support the tractor securely on stands before removing a wheel.
- Do not work under any hydraulically supported devices. They can settle, suddenly leak, or be accidentally lowered. If necessary to work under the tractor or any machine elements for servicing or adjustments, securely support them with stands or suitable blocking beforehand.
- Never operate the tractor with a loose rim, wheel or axle.

1. Front wheels

Front tread width cannot be adjusted.

IMPORTANT :

- Do not turn front discs to obtain wider tread. In setting up the front wheels, make sure that the inflation valve stem of the tires face outward.
- When re-fitting or adjusting a wheel, tighten the bolts to the following torques then recheck after driving the tractor 200 m (200 yard) and 10 times of shuttle movement by 5 m (5 yard), and thereafter according to service interval.


(See Checking the wheel bolt torque on page 106.)

1.1 Front jack point


! WARNING

To avoid personal injury or death:

- Before jacking up the tractor, park it on a firm and level ground and chock the rear wheels.
- Fix the front axle to keep it from pivoting.
- Select jacks that withstand the machine weight and set them up as follows.

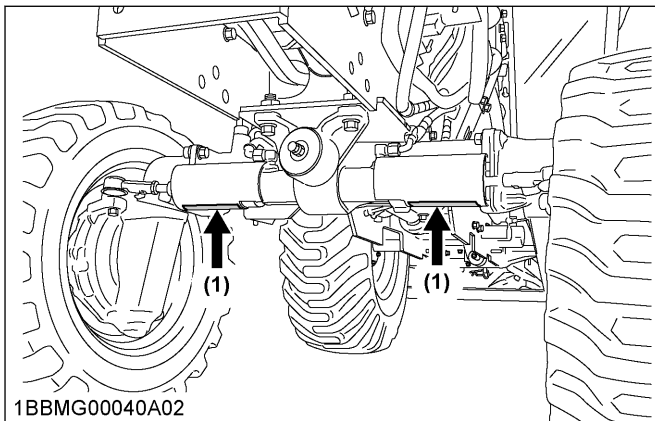

(1) Jack point

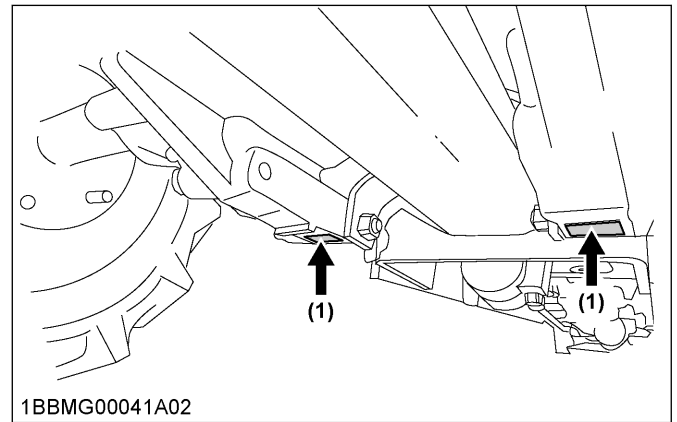

(1) Jack point

2. Rear wheels

Rear tread width cannot be adjusted.

IMPORTANT :

- When re-fitting or adjusting a wheel, tighten the bolts to the following torques then recheck after driving the tractor 200 m (200 yard) and 10 times of shuttle movement by 5 m (5 yards), and thereafter according to service interval.
(See Checking the wheel bolt torque on page 106.)

2.1 Rear jack point

! WARNING





To avoid personal injury or death:




- Before jacking up the tractor, park it on a firm and level ground and chock the front wheels.
- Fix the front axle to keep it from pivoting.
- Select a jack that withstands the machine weight and set it up as follows.

3. Treads





The tread is the distance between the center of the left wheel and the center of the right wheel of a vehicle.




Front

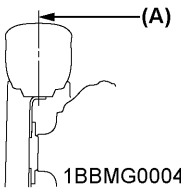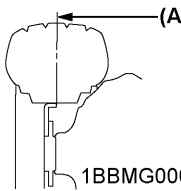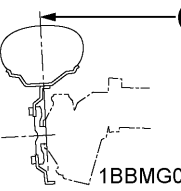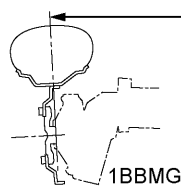Tire	7-12 Farm	24 × 8.50-14 Turf	23 × 8.50-14 Industry	23 × 8.50-12 Industry
Tread	 <p>1BBMG00042B01</p> <p>(A) 935 mm (36.8 in.)</p>	 <p>1BBMG00042B02</p> <p>(A) 930 mm (36.6 in.)</p>	 <p>1BBMG00042B03</p> <p>(A) 905 mm (35.6 in.)</p>	 <p>1BBMG00042B03</p> <p>(A) 970 mm (38.2 in.)</p>

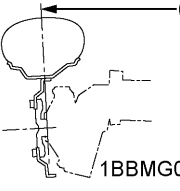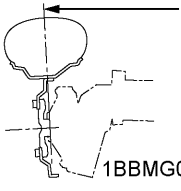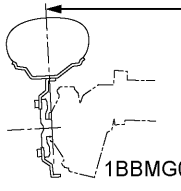Tire	23 × 8.50-12 R14	25 × 8.50-14 Industry	25 × 8.50-14 R14
Tread	 <p>1BBMG00042B03</p> <p>(A) 970 mm (38.2 in.)</p>	 <p>1BBMG00042B03</p> <p>(A) 920 mm (36.2 in.)</p>	 <p>1BBMG00042B03</p> <p>(A) 920 mm (36.2 in.)</p>

Rear

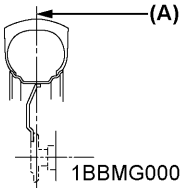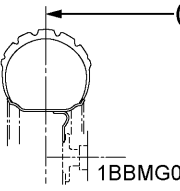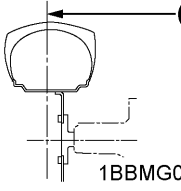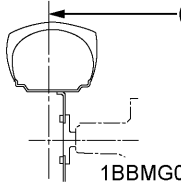Tire	12.4-16 Farm	13.6-16 Turf	12.4-16 Industry	14-17.5 Industry
Tread	 <p>1BBMG00042B04</p> <p>(A) 1050 mm (41.3 in.)</p>	 <p>1BBMG00042B05</p> <p>(A) 1050 mm (41.3 in.)</p>	 <p>1BBMG00042B06</p> <p>(A) 1050 mm (41.3 in.)</p>	 <p>1BBMG00042B06</p> <p>(A) 1050 mm (41.3 in.)</p>

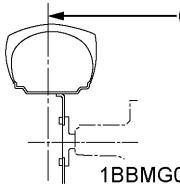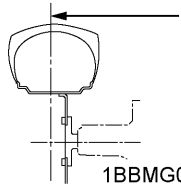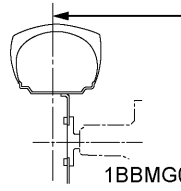Tire	14-17.5 R14	15-19.5 Industry	15-19.5 R14
Tread	 <p>1BBMG00042B06</p> <p>(A) 1050 mm (41.3 in.)</p>	 <p>1BBMG00042B06</p> <p>(A) 1085 mm (42.7 in.)</p>	 <p>1BBMG00042B06</p> <p>(A) 1085 mm (42.7 in.)</p>

BALLAST

WARNING

To avoid personal injury or death:

- Additional ballast will be needed for transporting heavy implements. When the implement is raised, drive slowly over rough ground, regardless of how much ballast is used.
- Do not fill the front wheels with liquid to maintain steering control.

1. Front ballast

Add weights if needed for stability and improved traction.

Heavy pulling and heavy rear mounted implements tend to lift up the front wheels.


Add enough ballast to maintain steering control and to prevent tipping over. Remove the weight when it is no longer needed.

1.1 Front end weights (option)

Front end weights can be attached to the bumper.

See your implement operator's manual for the required number of weights or contact your local Kubota dealer about their usage.

- [For installation of up to 3 weights] (Except ROPS model)
Besides the weight, mounting bolt kit(s) are required for mounting the weight.
- [For installation of up to 5 weights]
Besides the weight, a front weight bracket and mounting bolt kit(s) are required for mounting the weight.

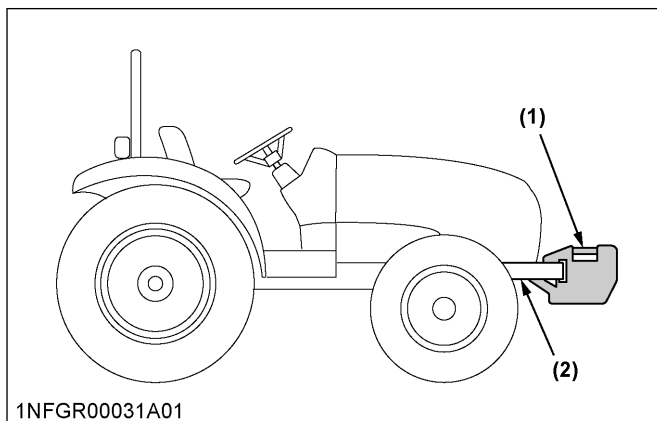

1NFGR00031A01
(1) Front end weights
(2) Front weight bracket (option)

IMPORTANT :

- Do not overload tires.
- Add no more weight than indicated in the following table.

Maximum weight	25 kg × 5 pieces (125 kg (275 lbs.))
----------------	---

2. Rear ballast

Add weight to rear wheels if needed to improve traction or for stability.

The amount of rear ballast should be matched to job and the ballast should be removed when it is not needed.

The weight should be added to the tractor in the form of liquid ballast.

2.1 Liquid ballast in rear tires

A water and calcium chloride solution provides safe and economical ballast. Used properly, it will not damage tires, tubes or rims. The addition of calcium chloride is recommended to prevent the water from freezing.

Use of this method of weighting the wheels has the full approval of the tire companies.


See your tire dealer for this service.

Liquid weight per tire (75 % filled)

Tire sizes	12.4-16
Slush free at -10 °C (14 °F) Solid at -30 °C (-22 °F) Approx. 1 kg (2 lbs.) CaCl ₂ per 4 L (1 gal.) of water	85 kg (187 lbs.)
Slush free at -24 °C (-11 °F) Solid at -47 °C (-53 °F) Approx. 1.5 kg (3.5 lbs.) CaCl ₂ per 4 L (1 gal.) of water	89 kg (196 lbs.)
Slush free at -47 °C (-53 °F) Solid at -52 °C (-62 °F) Approx. 2.25 kg (5 lbs.) CaCl ₂ per 4 L (1 gal.) of water	94 kg (207 lbs.)

IMPORTANT :

- Do not fill tires with water or solution to more than 75 % of full capacity (to the valve stem level at 12 o'clock position).

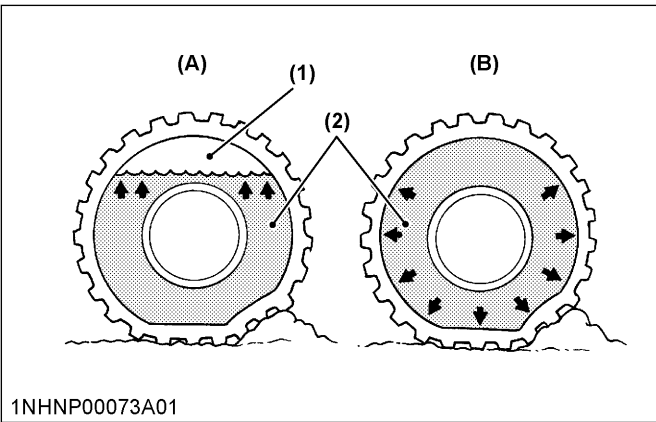

- (1) Air
 (2) Water
- (A) Correct - 75 % full, air compresses like a cushion
 (B) Incorrect - 100 % full, water cannot be compressed

- When mounting a heavy rear implement, liquid in the tires may not be necessary.
- Do not add liquid ballast or any other weights to the front tires.
- While the backhoe is installed on the tractor, the liquid ballast in the rear tires should be removed.
- While the loader is installed on the CAB tractor, the liquid ballast in the rear tires should be removed.
- While the 15-19.5 R4 or 15-19.5 R14 tire is installed on CAB tractor, the liquid ballast in the rear tire should be removed.

CAB OPERATION

DOORS AND WINDOWS

1. Locking and unlocking the door

From the outside:

Insert the key into the door lock. Turn the key clockwise to unlock the door. To lock the door, turn the key in the opposite direction.

The key can be removed when it is in the vertical position.

From the inside:


Push down the lock knob to lock the door.

Pull up the lock knob to unlock the door.

2. Opening the door

From the outside:

Unlock the door, and pull the outer door handle.

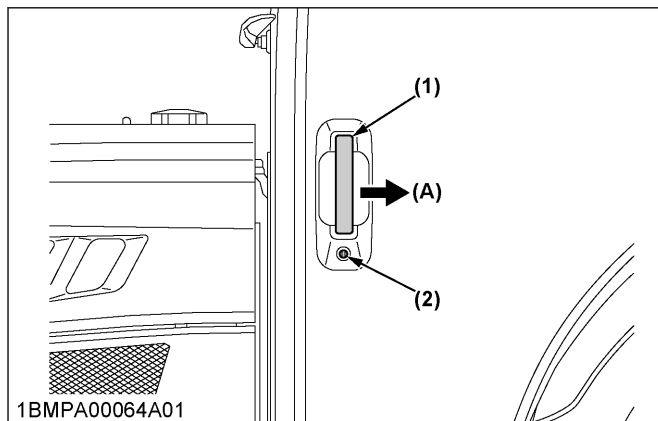


- (1) Outer door handle
(2) Door lock

(A) Pull

From the inside:

Unlock the door and pull the inner door handle.

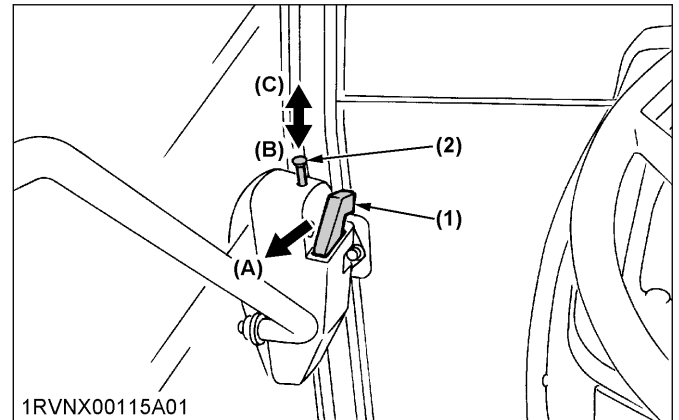


- (1) Inner door handle
(2) Lock knob

(A) Pull
(B) Push (Lock)
(C) Pull (Unlock)

3. Rear window

Turn the rear window handle clockwise to the vertical position and push the handle. The rear window is opened by the gas spring cylinder.

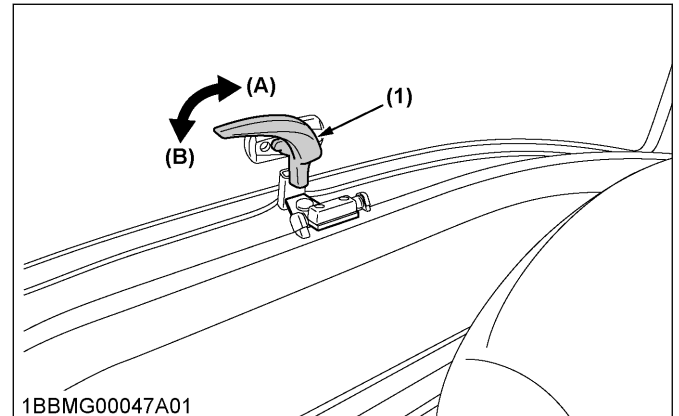


- (1) Rear window handle

(A) Open
(B) Close

4. Rear window half-lock

1. Grip the rear window handle (2) and slightly open the rear window (1).
2. Adjust the half-lock bracket to the set position (B).

3. Move back the rear window (1) a little and get the rear window handle (2) locked.

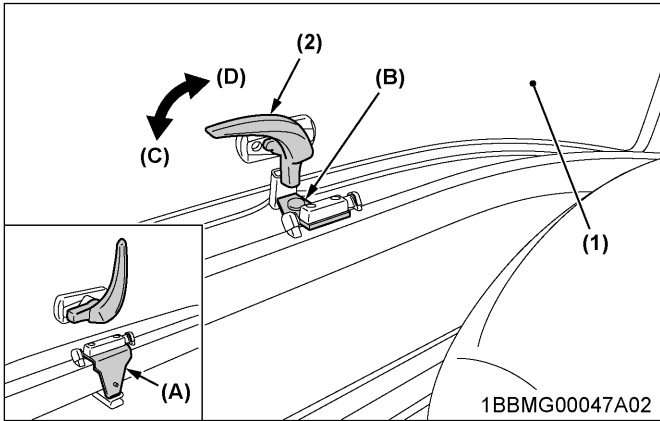

- (1) Rear window
- (2) Rear window handle
- (A) Half-lock bracket (storage position)
- (B) Half-lock bracket (set position)
- (C) Lock
- (D) Unlock

IMPORTANT :

- When handling the half-lock mechanism, hold up the window just before being positioned and then slowly get it in position.
- Be careful not to travel the machine in the half-lock mode on rough roads.

5. Emergency exit

1. In an emergency situation, open the right door of the CAB if the left door is blocked and vice versa.
2. Exit through the rear window if the CAB doors are blocked.


LIGHT

1. Dome light

Sliding the dome light switch will give the following light condition:

[OFF]
The light does not turn on.

[ON]
The light remains on.

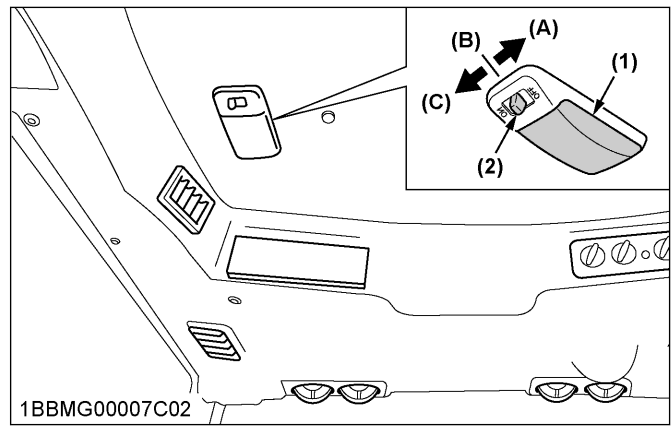


- (1) Dome light
- (2) Dome light switch
- (A) "OFF"
- (B) "OFF"
- (C) "ON"


2. Work light switch

Turn on the key switch and press the top half of the work light switch.

The work light and the switch's indicator light up. Press the bottom half of the work light switch to turn off the light and indicator.

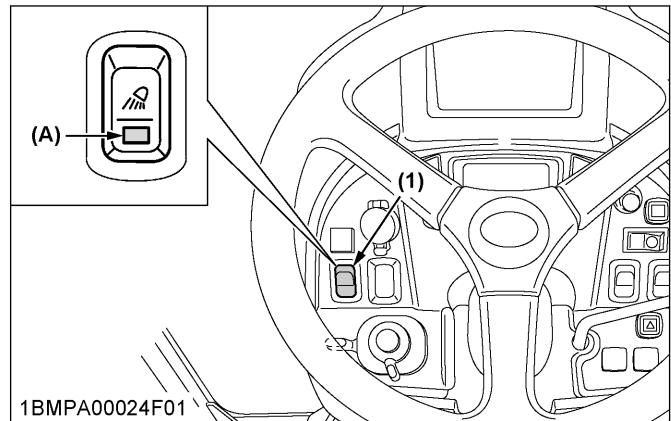


- (1) Front work light switch
- (A) Indicator for work lights

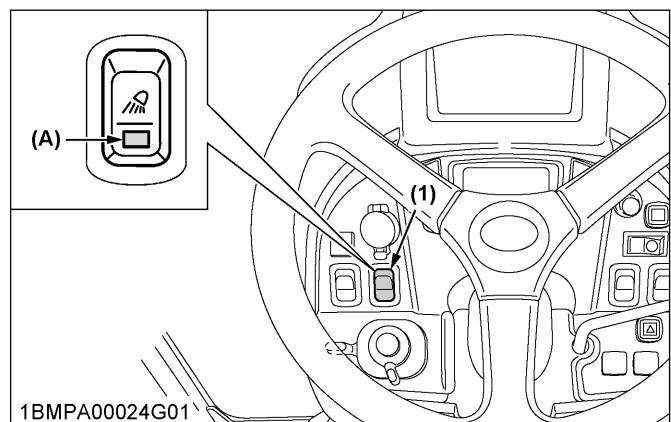


- (1) Rear work light switch (if equipped)
- (A) Indicator for work lights

3. Front work light

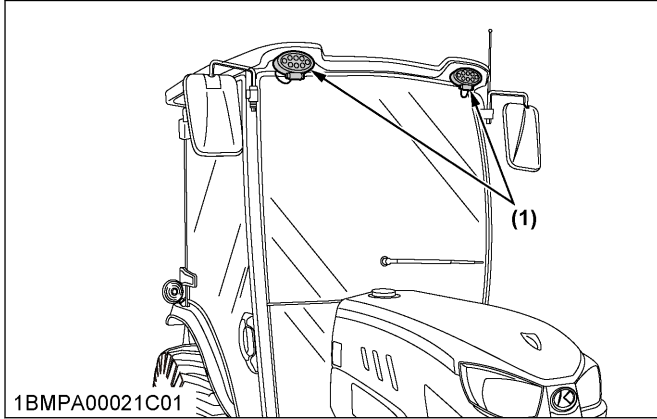

(1) Front work light

4. Rear work light (if equipped)

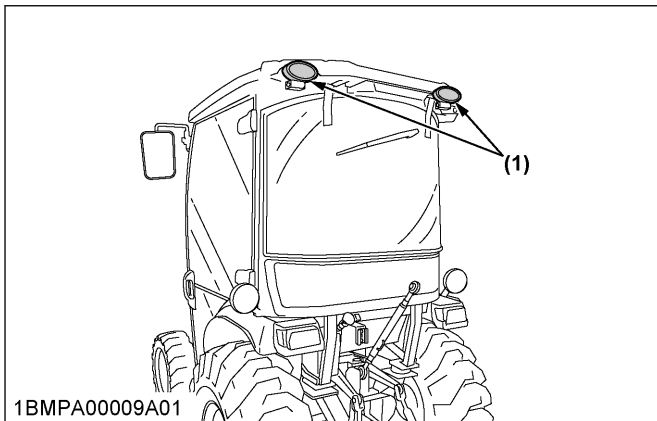

(1) Rear work light

WIPER

1. Front wiper and washer switch


When the button is pressed to the first step, the wiper only is activated.

When the button is pressed further to the second step, washer fluid jets out.

The washing continues while the button is pressed and wiper is activated continuously. (Washer fluid jets out to the rear window also.)

Hold down the bottom half of the switch when the front wiper is off, and washer fluid will keep jets out.

To wet the glass before activating the wipers, press the bottom half of the switch. (Washer fluid jets out to the rear window also.)

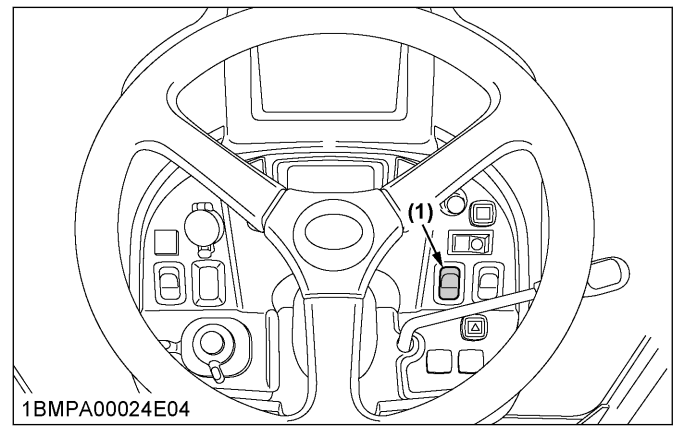


(1) Front wiper and washer switch

2. Rear wiper and washer switch

Press the upper half of the wiper switch, and the wiper is activated. Press the lower half of the wiper switch, and the wiper stops at the initial position.

To jet washer fluid, push the front wiper and washer switch. (Washer fluid jets out to the front window also.)

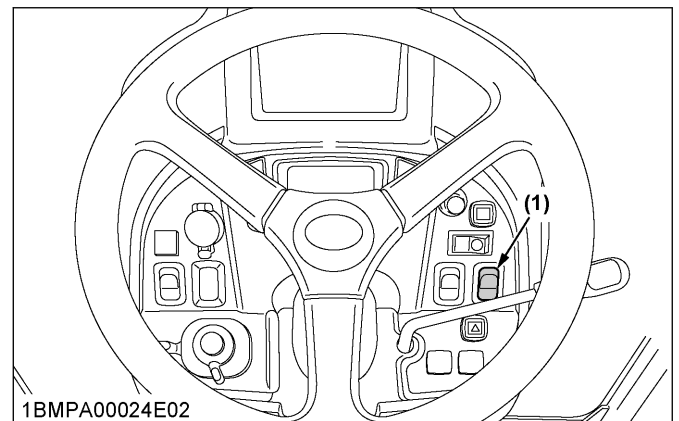

(1) Rear wiper switch

IMPORTANT :

- **Do not activate the wipers when the windows are dry, they may be scratched.**
Jet washer fluid first and then activate the wipers.

3. Using the wipers in cold season

1. While not used in cold season, keep the wiper blades off the windshield to prevent them from being frozen to the windshield.
2. If the windshield is covered with snow, scrape it off the windshield before using the wipers.
3. If the wiper blades are frozen to the windshield and fail to move, turn the main key switch to the "OFF" position and remove the ice from the blades. Then place the main key switch back to the "ON" position.

- When commercially available cold-season wiper blades are used, make sure that their size is the same as or smaller than that of the standard ones.

IMPORTANT :

- In the cold season, the wiper blades and the wiper motor may become overloaded, and cause damage. To avoid this problem, take the previously mentioned precautions.

AIR CONDITIONER


CAUTION

To avoid personal injury:


- If the window fails to defrost in extreme conditions or becomes cloudy when dehumidifying the CAB, wipe off moisture with a soft cloth.
- Do not block all the air outlets of the air conditioner. A problem could occur.

1. Airflow

Air in the CAB and fresh air introduced into the CAB flows as follows. Adjust the air ports to obtain the desired condition.

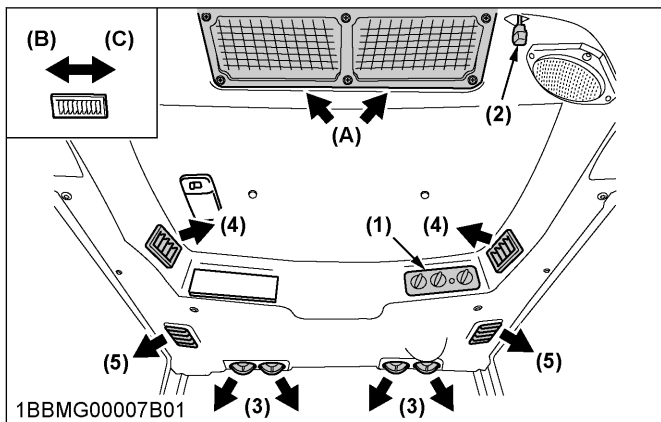

- | | |
|---|-----------------------------|
| (1) Control panel | (A) Inner air recirculation |
| (2) Recirculation or fresh air selection lever | (B) "OPEN" |
| (3) Front air outlet (defrost, windshield, foot area) | (C) "SHUT" |
| (4) Side air outlet (face, back area) | |
| (5) Door air outlet (door area) | |

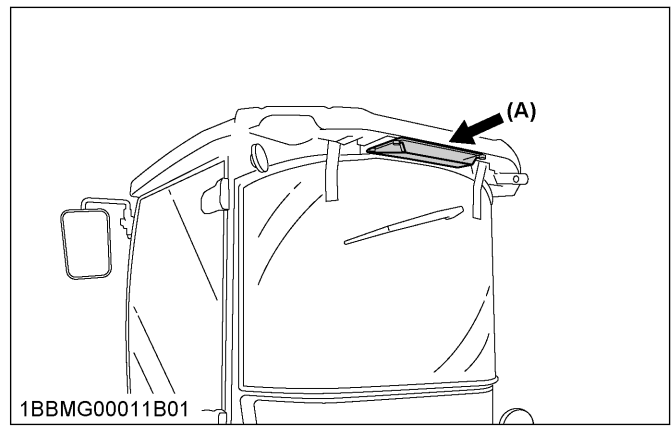

(A) Fresh air inlet


IMPORTANT :

- Do not pour water directly into the fresh air port while washing the tractor.

2. Air control vent

2.1 Front air outlet

The front air outlets can be independently adjusted as required. To defrost the windshield, rotate the outlets toward the windshield.

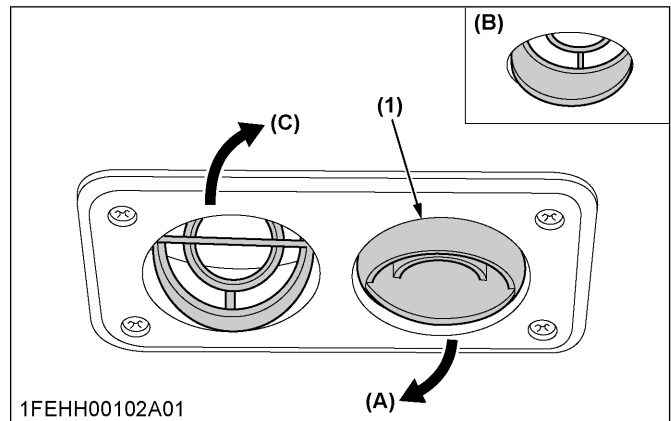


(1) Front air outlet

- (A) "WINDSHIELD"
 (B) "CLOSED"
 (C) "CHEST AREA"

2.2 Side air outlet and door air outlet

The side and door air outlets can be adjusted to direct air on to the operator, door window or the rear of the CAB.

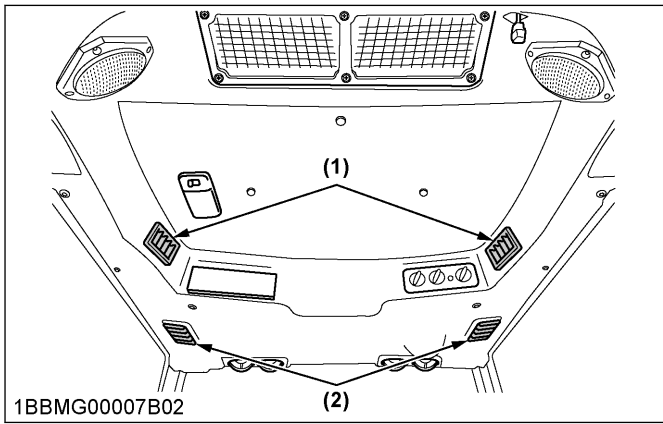

(1) Side air outlet
(2) Door air outlet

NOTE :


- If the airflow rate at the face is too low, close the door air outlet.


2.3 Recirculation or fresh air selection lever

FRESH AIR:

Set the lever to the  position, and fresh air will flow into the CAB. This is helpful when you work in dusty conditions or if the glass windows get foggy.

RECIRCULATION:

Set the lever to the  position, and the in-CAB air will be recirculated. This is useful for cooling or heating the CAB quickly or keeping it extra cool or warm.

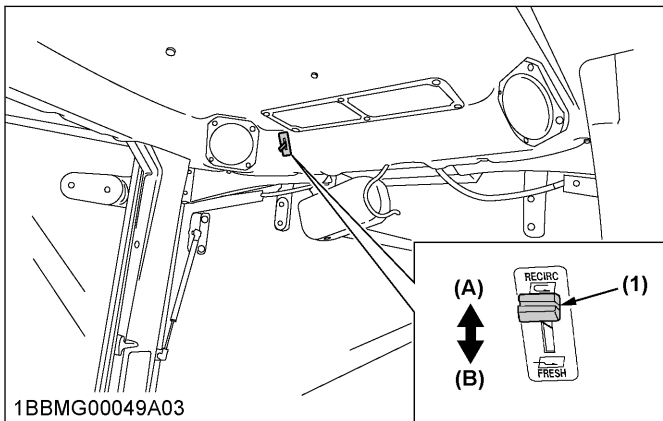


(1) Recirculation or fresh air selection lever
(A) "RECIRCULATION"
(B) "FRESH AIR"

NOTE :

- When heating, do not keep the lever at the "RECIRCULATION" position for a long time. The windshield easily gets foggy.
- While working in dusty conditions, keep the lever at the "FRESH AIR" position. This


 

increases the pressure in the CAB, which helps prevent dust from coming into the CAB.

3. Control panel

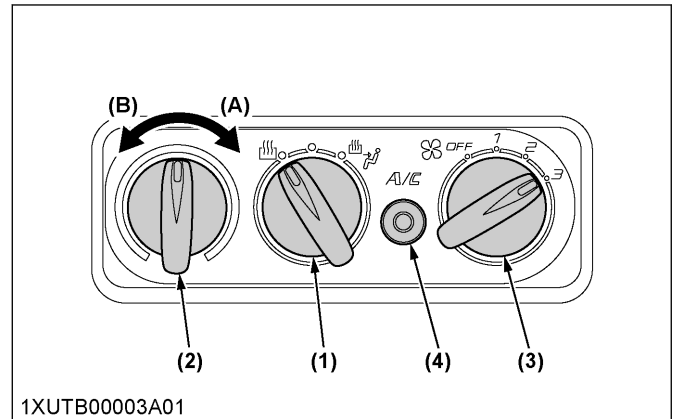

(1) Mode switch (A) "WARM"
(2) Temperature control dial (B) "COOL"
(3) Blower switch
(4) Air conditioner switch with indicator light

3.1 Mode switch

Set the mode switch to the desired position.
 Air is blown from the front and side air outlets.
 Air is blown only from the front air outlets.
 With this switch at the middle position, air is blown weaker from the side air outlets (head) and stronger from the front air outlets.

3.2 Temperature control dial

Set this dial at the desired position to obtain the optimum air temperature. Turn the dial in the "WARM" direction to obtain warmer air. Turn the dial in the "COOL" direction to obtain cooler air.

3.3 Blower switch

Air volume can be changed in 3 steps. At the [3] position, the largest air volume is obtained.

3.4 Air conditioner switch

Push this switch to activate the air conditioner. An indicator light will light up when the switch is set to "ON".
 Push the switch again to turn the air conditioner off, in which case the indicator light will turn off.

IMPORTANT :

- To operate the air conditioner after the tractor has not been used for one week or longer, run the engine at idling speed first and then set the

air conditioner switch to the “ON” position. Keep this for one minute or so. If the air conditioner switch is set to the “ON” position with the engine running at high rpm, the compressor may get in trouble.


NOTE :

- With the blower switch at the “OFF” position, the indicator light will not light up even when the air conditioner switch is set to “ON”.


4. Operation

4.1 Heating

1. Set the mode switch to the position, the ● position or the position.
2. Set the recirculation or fresh air selection lever to the “FRESH AIR” position. To raise the temperature in the CAB quickly, set this lever to the “RECIRCULATION” position.
3. Adjust the blower ([1]/[2]/[3]) switch and the temperature control dial to achieve a comfortable temperature level.

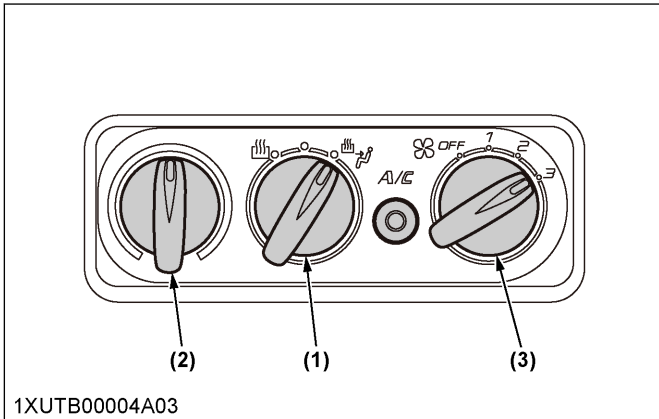

- 1XUTB00004A03
- (1) Mode switch
 - (2) Temperature control dial
 - (3) Blower switch

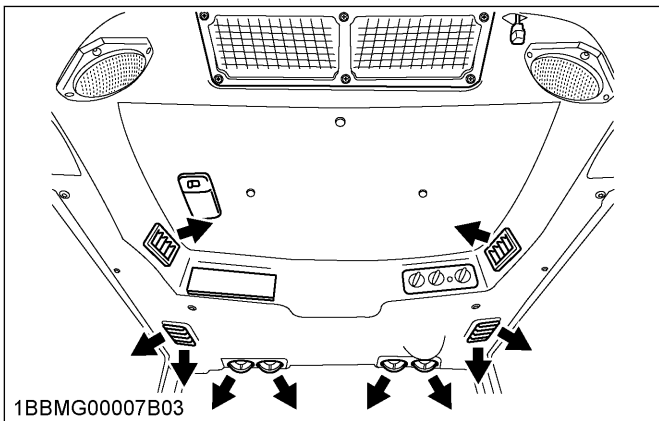


1BBMG00007B03

4.2 Cooling or dehumidifying-heating

1. Set the mode switch to the position.
2. Set the recirculation or fresh air selection lever to the “FRESH AIR” position. To lower the temperature in the CAB quickly, set this switch to the “RECIRCULATION” position.
3. Press and turn on the air conditioner switch with indicator.
4. Turn on the blower ([1]/[2]/[3]) switch.
5. Adjust the temperature control dial to the “COOL” position or the intermediate position to achieve a comfortable temperature level.


NOTE :

- In summer when the heater is not used, keep the temperature control dial at the max “COOL” (end of counterclockwise) position. Otherwise, hot air will raise the temperature in the CAB.

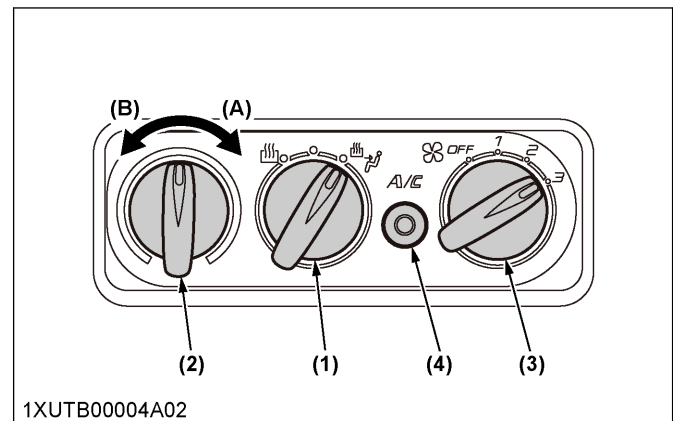

1XUTB00004A02

- (1) Mode switch
 - (2) Temperature control dial
 - (3) Blower switch
 - (4) Air conditioner switch with indicator light
- (A) “WARM”
(B) “COOL”

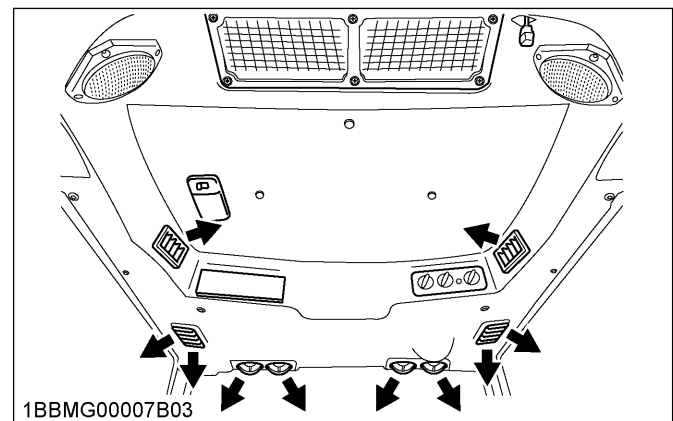


1BBMG00007B03



4.3 Foot warming and head cooling

1. Set the mode switch to the position.


2. In the cooling or dehumidifying-heating mode, set the temperature control dial at the center position area.
3. Open the front air outlet and the door air outlet, and direct them to your feet.
4. You can feel your head cool and your feet warm.

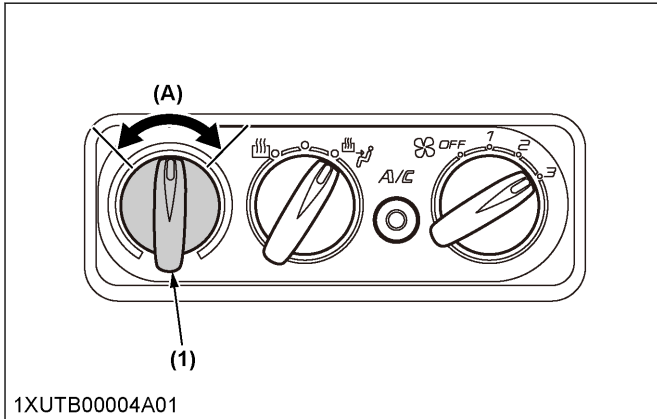

(1) Temperature control dial (A) Center position area

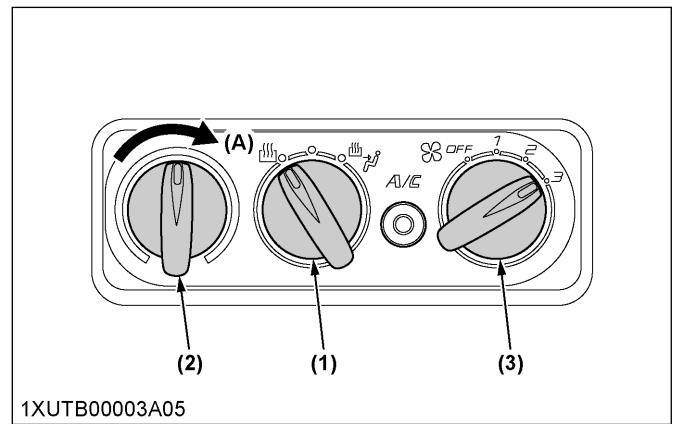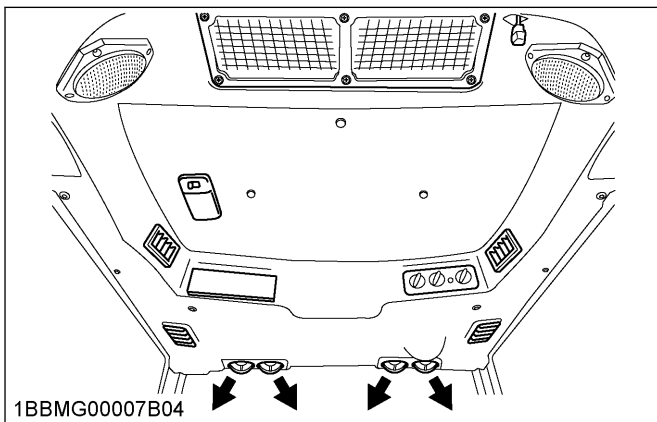

(1) Mode switch (A) "WARM"
 (2) Temperature control dial
 (3) Blower switch

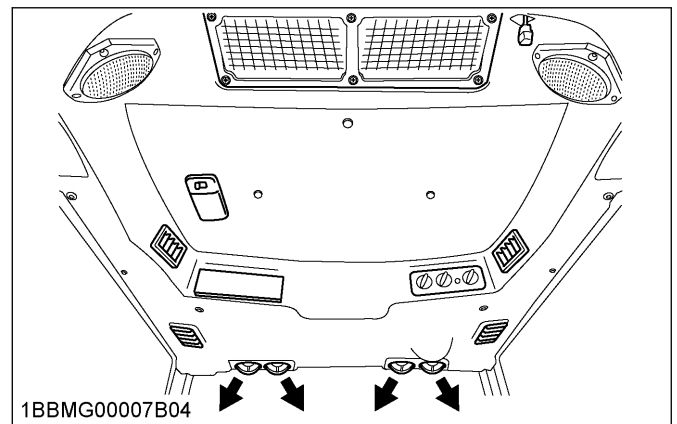


4.4 Defrosting or demisting

To defrost or demist the windshield, take the following steps.

1. Set the mode switch to the position.
2. Open the front air outlet and direct it to the windshield.
3. Set the recirculation or fresh air selection lever to the "FRESH AIR" position.
4. Set the blower switch and the temperature control dial to the [3] and the max "WARM" (end of clockwise) positions, respectively.

REAR DEFOGGER

To activate the rear window defogger, press the switch marked while the key switch is in the "ON" position. To turn the defogger off, push down the switch marked "OFF".

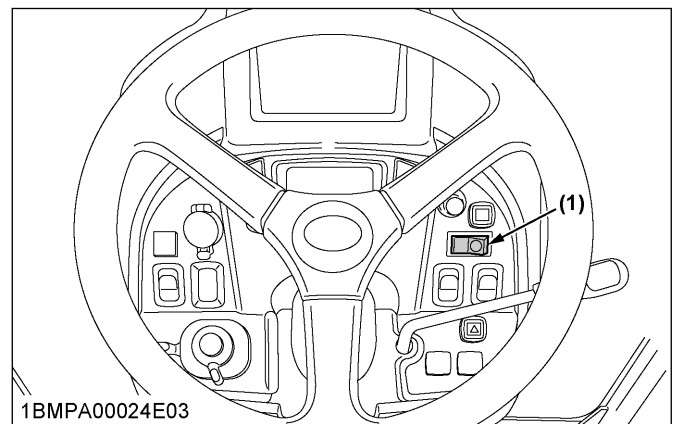

(1) Defogger switch

IMPORTANT :

- The battery will discharge if the defogger and the key switch remain in the "ON" positions with the engine stopped.

Always use the defogger with the engine running.


HANGER

WARNING

To avoid personal injury or death:

- Do not hang anything that is heavier than 3 kg. The hanger may get damaged.
- Make sure anything hanging does not interfere with your operation.

Caps and other small objects can be hung.

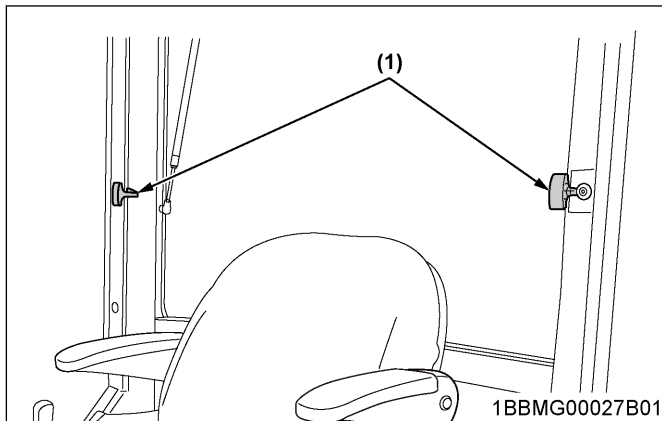

(1) Hanger (both sides)

MAINTENANCE

SERVICE INTERVALS

IMPORTANT :

- Perform daily checks before and after work
(See DAILY CHECK on page 39.)

Maintenance parts			Maintenance timing											Ref. page					
			Indication on hour meter										Months or years				Interval		
			50	100	150	200	250	300	350	400	450	500						...	
Air conditioner condenser screen [CAB model]	Clean															Daily	102		
Greasing	Lubricate	○	○	○	○	○	○	○	○	○	○	○	○	○	○	Every 50 hrs	104		
Engine start system	Check	○	○	○	○	○	○	○	○	○	○	○	○	○	105				
Wheel bolt torque	Check	○	○	○	○	○	○	○	○	○	○	○	○	○	106				
Battery condition	Check		○		○		○		○		○		○		Every 100 hrs	106	*1		
Air cleaner element	Primary element	Clean	○		○		○		○		○		○			108	*2	@	
Fuel filter element	Clean		○		○		○		○		○		○			108		@	
Fan belt	Adjust		○		○		○		○		○		○			109			
Brake pedal	Adjust		○		○		○		○		○		○			109			
Engine oil filter	Replace	⊙			○						○					Every 200 hrs	110		
Engine oil	Change	⊙			○						○						111		
Transmission oil filter	Replace	⊙			○						○				111				
Power steering oil line	Check				○						○				112				
Toe-in	Adjust				○						○				112				
Air conditioner drive belt [CAB model]	Adjust				○						○				113				
Inner air filter [CAB model]	Clean				○						○				113				
Fresh air filter [CAB model]	Clean				○						○				113				
Air conditioner condenser [CAB model]	Check				○						○				114				
Transmission fluid	Change										○				Every 400 hrs		114		
Hydraulic oil filter	Replace	⊙									○					115			
Fuel filter element	Replace										○					116		@	
Front axle pivot	Adjust										○					117			
Front axle case oil	Change										○					117			
Engine valve clearance	Adjust												800 hrs		Every 800 hrs	118	*3		
Air cleaner element	Primary element	Replace											1000 hrs	1 year	Every 1000 hrs or 1 year	118	*4	@	
	Secondary element	Replace											1000 hrs			118	*4	@	
Fuel injector nozzle Injection pressure	Clean												1500 hrs	Every 1500 hrs	118	*3	@		

(Continued)

MAINTENANCE

Maintenance parts		Maintenance timing											Months or years	Interval	Ref. page				
		Indication on hour meter																	
		50	100	150	200	250	300	350	400	450	500	...							
Cooling system	Flush												2000 hrs	2 years	Every 2000 hrs or 2 years	118	*5		
Coolant	Change																119	*5	
Injection pump	Check												3000 hrs		Every 3000 hrs	120	*3	@	
Radiator hose and clamp	Check													1 year	Every 1 year	120	*6		
Fuel line	Check												120			*6	@		
Intake air line	Check												120			*6	@		
Air conditioner pipes and hose [CAB model]	Check												121			*6			
CAB isolation cushion [CAB model]	Check												121			*3			
Radiator hose and clamp	Check													2 years	Every 2 years	121	*3		
Power steering oil line	Check												121			*3			
Air conditioner pipes and hose [CAB model]	Check												121			*3			
Fuel line	Replace													4 years	Every 4 years	121	*3 *6	@	
Intake air line	Replace												121			*3 *6	@		
Fuel system	Bleed													Service as required		121			
Clutch housing water	Drain														122				
Fuse	Replace														122				
Light bulb	Replace														123	*3			
Headlamp [SU model only]	Replace														123				
Tail light	Replace														124				
Room lamp [CAB model]	Replace														124				
LED light	Replace														125				
Lubricating points [CAB model]	Lubricate														125				
Washer liquid [CAB model]	Add														125				
Amount of refrigerant (gas) [CAB model]	Check														125				
Radiator hose and clamp	Replace														126	*3			
Fuel line	Replace														126	*3			
Intake air line	Replace														126	*3			

*1 When the battery is used for less than 100 hours per year, check the fluid level annually.

*2 Air cleaner should be cleaned more often in severe dusty conditions. Operation with clogged air cleaner may cause regeneration failure.

*3 Contact your local Kubota dealer for this service.

*4 Replace in 1000 hours or 1 year, whichever comes faster.

*5 Replace in 2000 hours or 2 years, whichever comes faster.

*6 Replace if any deterioration (crack, hardening, scar or deformation) or damage occurred.

IMPORTANT :

- The jobs indicated by **⦿** must be done after the first 50 hours of operation.
- The items listed above (**@** marked) are registered as emission related critical parts by Kubota in the U.S.EPA nonroad emission regulation. As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the above instruction. Please see Warranty Statement in detail.
- When using biodiesel, check the maintenance requirements of biodiesel fuel as the intervals will change for some of the items.

LUBRICANTS, FUEL AND COOLANT

No.	Locations	Capacities		Lubricants	
		ROPS	CAB		
		LX2620 LX2620SU	LX2620		
1	Fuel	27 L (7.1 U.S.gals.)	32 L (8.4 U.S.gals.)	No.2-D diesel fuel No.1-D diesel fuel if temperature is below -10 °C (14 °F)	
2	Coolant (with recovery tank)	4.3 L (4.5 U.S.qts.)	5.4 L (5.7 U.S.qts.)	Fresh clean water with antifreeze	
3	Washer liquid	—	1.5 L (1.6 U.S.qts.)	Automobile washer liquid	
4	Engine crankcase (with filter)	4.0 L (4.2 U.S.qts.)		• Engine oil: refer to the following table	
				Above 25 °C (77 °F)	SAE30, SAE10W-30 or 15W-40
				-10 °C (14 °F) to 25 °C (77 °F)	SAE20, SAE10W-30 or 15W-40
				Below -10 °C (14 °F)	SAE10W-30
5	Transmission case	15 L (4.0 U.S.gals.)		• Kubota Super UDT-2 fluid	
6	Front axle case	4.7 L (5.0 U.S.qts.)		• Kubota Super UDT-2 or SAE 80- SAE 90 gear oil	
7	Greasing	No. of greasing points		Capacity	Type of grease
	Top link	1		Until grease over- flow.	Multipurpose grease NLGI-2 or NLGI-1 (GC-LB)
	Lifting rod (RH)	1			
	Speed control pedal	—	2		
	Brake pedal	1	—		
	Battery terminals	2		Moderate amount	

NOTE :

- The product name of Kubota genuine UDT fluid may be different from that in the operator's manual depending on countries or territories. Contact your local Kubota dealer for further details.

Engine oil

- The oil used in the engine should have an American Petroleum Institute (API) service classification and proper SAE engine oil according to the ambient temperatures shown in the previous table.
- Refer to the following table for the suitable API classification engine oil according to the engine type (with internal EGR, external EGR or non-EGR) and the fuel.

Fuel used	Engine oil classification (API classification)
	Oil class of engines except external EGR*1
Ultra low sulfur fuel <0.0015 % (15 ppm)	CF, CF-4, CG-4, CH-4 or CI-4

*1 EGR: Exhaust gas re-circulation

- The CJ-4 engine oil is intended for diesel particulate filter (DPF) type engines, and cannot be used on this tractor.

Fuel

- Use the ultra-low sulfur diesel fuel only (below 0.0015 % or 15 ppm) for these engines.
- Cetane number of 45 minimum. Cetane number greater than 50 is preferred, especially for temperatures below -20 °C (-4 °F) or elevations above 1500 m (5000 ft).
- Diesel fuels specified to EN 590 or ASTM D975 are recommended.

- No.2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service (SAE J313 JUN87).

Transmission oil

***Kubota Super UDT2**: For an enhanced ownership experience, we highly recommend **Super UDT2** to be used instead of standard hydraulic and transmission fluid.

Super UDT2 is a proprietary Kubota formulation that delivers superior performance and protection in all operating conditions.

Regular UDT is also permitted for use in this machine.

Indicated capacities of water and oil are manufacturer's estimate.

1. Biodiesel fuel (BDF) B0-B20

B0-B20 Biodiesel fuels (BDF): mixed diesel fuels containing 20 % or less biodiesel can be utilized under the following conditions.

IMPORTANT :

- **Refueling and handling fuel should be done with caution in order to avoid contact with the fuel and spillage that could create a potential environmental or fire hazard. Wear appropriate protective equipment when refueling.**

Applicable BDF:

1. Blended diesel fuels containing 6 % through 20 % BDF (B6 - B20) which comply with American Society for Testing and Materials (ASTM) D7467 Standard, as revised, can be used without adversely affecting the performance and durability of the engine and fuel system components.
2. Any mineral oil diesel fuel, if used, must conform to ASTM D975 (or the European EN590) Standard, as revised. B100 fuel used to make Biodiesel blended fuels must meet ASTM D6751 (or EN14214) Standard, as revised. The final blended fuel B20 must conform to ASTM D7467 Standard, as revised. Straight vegetable oil is not allowed in any blended fuel.
3. Allowable blended fuel is mineral oil diesel fuel blended with B100 (meaning, 100 % BDF). The blended fuel ratio shall be less than 20 % B100 and 80 % or more diesel fuel. The B100 source used for Biodiesel blends must be purchased from an accredited BQ-9000 marketer or producer. More information about qualified marketer(s) and producer(s) can be found at <http://www.bq-9000.org>.

Preparation:

1. Before using BDF concentrations greater than B5, you are advised to replace the engine oil, engine oil filter and fuel filter with new oil and filters. Details regarding the replacement procedures can be found in a different section. (See Changing engine oil on page 111, Replacing engine oil filter on page 110, Replacing fuel filter on page 116.)

Product warranty, emission and other precautions:

1. The engine emission control system was certified according to current regulations based on the use of non-BDF. When using BDF, the owner is advised to check applicable local and federal emission regulations and comply with all of them.
2. BDF may cause restricted or clogged fuel filters during cold weather conditions, resulting in the engine not operating properly.
3. BDF encourages the growth of microorganisms which may cause degradation of the fuel. This in turn may cause fuel line corrosion or reduce fuel filter flow earlier than expected.
4. BDF inherently absorbs moisture which may cause degradation of the fuel earlier than expected. To avoid this, drain the water separator and fuel filter port often.
5. Do not use Biodiesel concentrations higher than 20 % (namely, greater than B20). Engine performance and fuel consumption will be affected, and degradation of the fuel system components may occur.
6. Do not readjust the engine fuel control system as this will violate emission control levels for which the equipment was approved.
7. Compared with soybean-based and rapeseed-based feedstock, palm oil-based feedstock has a thicker consistency (that is, higher viscosity) at lower temperatures. Consequently, fuel filter performance may be reduced, particularly during cold weather conditions.
8. The Kubota Warranty, as specified in the owner's warranty information guide, only covers defects in product materials and workmanship. Accordingly, any problems that may arise due to the use of poor quality fuels that fail to meet the above requirements, whether biodiesel or mineral oil based, are not covered by the Kubota Warranty.

Routine handling:

1. Avoid spilling BDF onto painted surfaces as this may damage the finish. If fuel is spilled immediately wipe clean and flush with soapy water to avoid permanent damage.
2. When using BDF, you are advised to maintain a full tank of fuel, especially overnight and during short term storage, to reduce condensation within the tank. Tighten the fuel cap after refueling to prevent moisture build up within the tank. Water in the biodiesel mixture will damage fuel filters and may damage engine components.

Maintenance requirements when using BDF B0 through B5:

Follow the recommended oil change intervals. (See MAINTENANCE on page 93.)
Extended oil change intervals may result in premature wear or engine damage.

Maintenance requirements when using BDF B6 through B20:

The maintenance intervals for fuel related parts changes.

See the following table for the new maintenance intervals.

Items		Interval	Remarks
Fuel filter	Clean	Every 50 hrs	All models
	Replace	Every 200 hrs	All models
Fuel line	Check	Every 6 months	Replace if any deterioration (crack, hardening, scar or deformation) or damage occurred.
	Replace	Every 2 years	Contact your local Kubota dealer for this service.

Long term storage:

1. BDF easily deteriorates due to oxygen, water, heat and foreign substances.
Do not store B6 through B20 longer than 1 month and B5 longer than 3 months.
2. When using B6 through B20 and storing the machine longer than 1 month, drain the fuel from the tanks and replace with light mineral oil diesel fuel.
Subsequently, run the engine at least 30 minutes to remove all of the Biodiesel from the fuel lines.
3. When using B5 fuel and storing machine longer than 3 months, drain the fuel from the tanks and replace with light mineral oil diesel fuel.
Subsequently, run the engine at least 30 minutes to remove all of the Biodiesel from the fuel lines.

PERIODIC SERVICE

⚠ WARNING
To avoid personal injury or death:

- Do not work under any hydraulically supported devices. They can settle, suddenly leak, or be accidentally lowered. If necessary to work under the tractor or any machine elements for servicing or adjustments, securely support them with stands or suitable blocking beforehand.

WASTE DISPOSAL

- The improper disposal or burning of waste causes environmental pollution and can be punishable by your local laws and regulations.
 - When draining fluids from the tractor, place a container underneath the drain port.
 - Do not pour waste onto the ground, down a drain, or into any water source (such as rivers, streams, lakes, marshes, seas and oceans).
 - Waste products such as used oil, fuel, coolant, hydraulic fluid, aqueous urea solution (DEF (AdBlue)), refrigerant, solvent, filters, rubber, batteries and harmful substances, can harm the environment, people, pets and wildlife. Please dispose properly. See your local recycling center or Kubota dealer to learn how to recycle or get rid of waste products.

HOW TO OPEN THE HOOD


⚠ WARNING
To avoid personal injury or death from contact with moving parts:

- Never open the hood or engine side cover while the engine is running.
- Do not touch the muffler or exhaust pipes while they are hot; severe burns could result.
- Support hood with other hand while unlocking support rod.

1. Hood


1.1 Opening the hood

- Twist the hood latch.

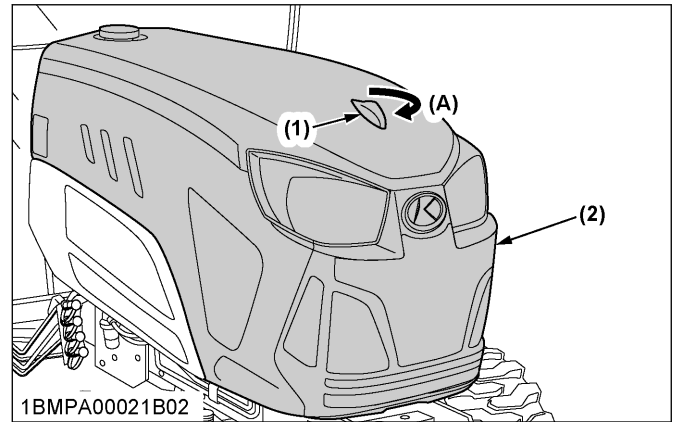


(1) Hood latch (A) Twist
 (2) Hood

- Open the hood by holding its bottom with both hands.

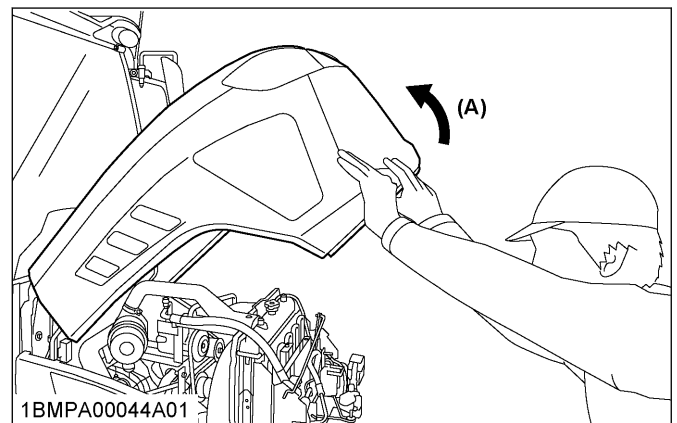

(A) Open


- Hold the hood and insert the support rod to the mounting hole.

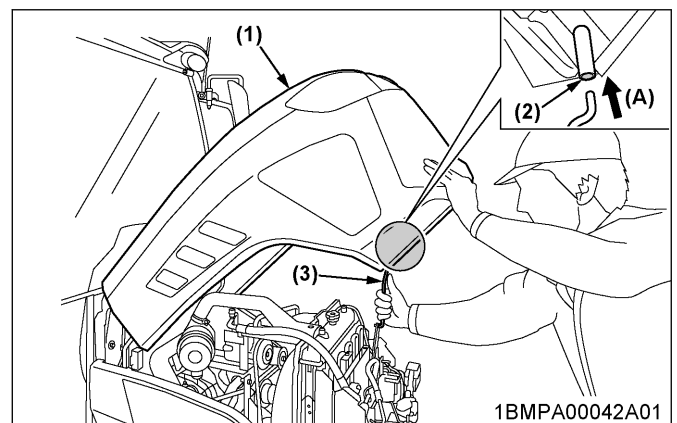

(1) Hood (A) Insert
 (2) Mounting hole
 (3) Support rod

1.2 Closing the hood

1. To close the hood, hold the hood and release the support rod.
2. In closing the hood, use both hands again.

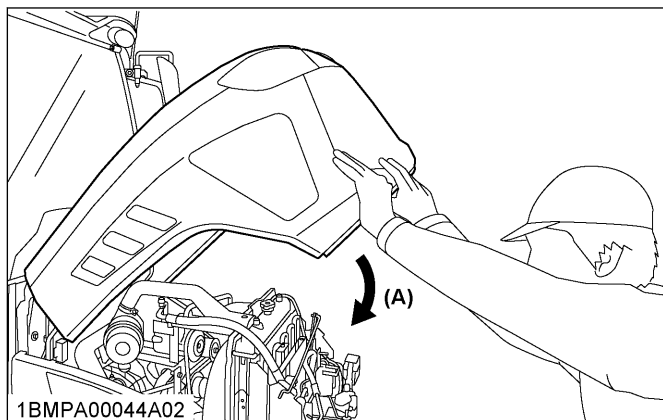


(A) Close

2. Engine side cover


Remove the side cover

1. Pull up the cover toward "A".

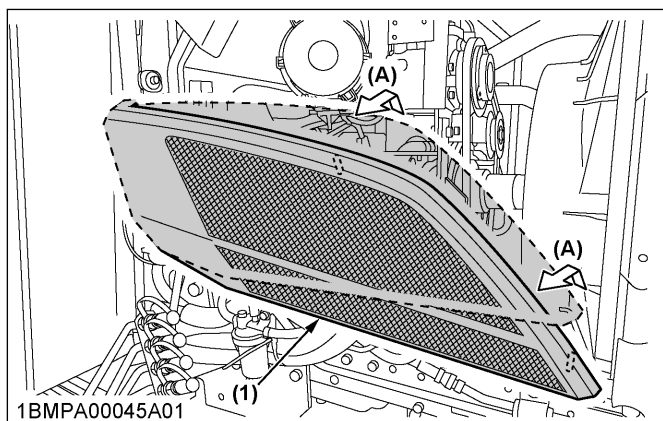

(1) Side cover (A) Pull up


2. Pull the cover toward "B" and detach the notch.

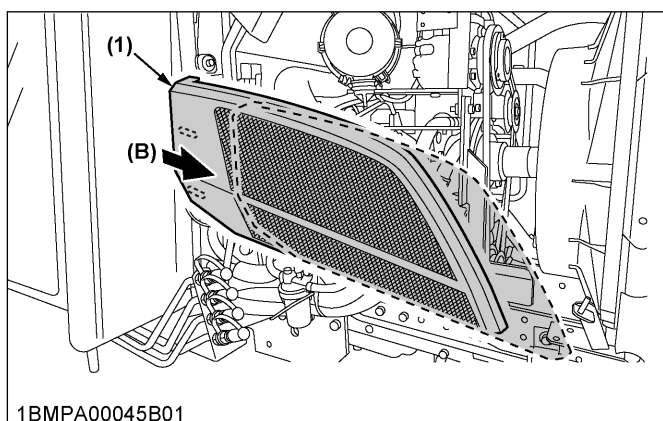

(1) Side cover (B) Pull

Attaching the side cover

1. To attach the cover, take the reverse order.

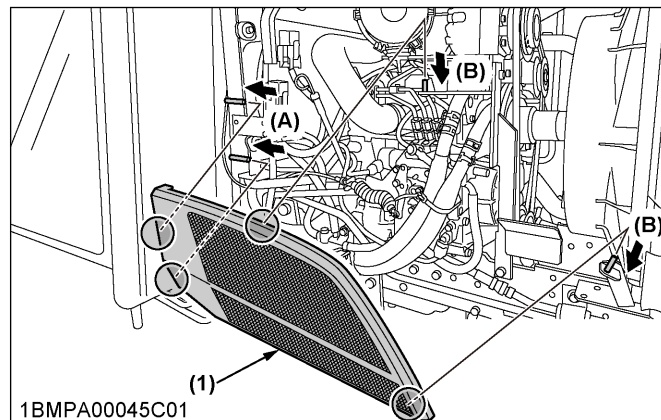

(1) Side cover (A) Insert (B) Insert

DAILY CHECK

For your own safety and maximum service life of the machine, make a thorough daily inspection before operating the machine to start the engine.

! WARNING

To avoid personal injury or death: Take the following precautions when checking the tractor.

- Park the machine on firm and level ground.
- Set the parking brake.
- Lower the implement to the ground.
- Release all residual pressure from the hydraulic system.
- Stop the engine and remove the key.

1. Walk around inspection

Look around and under the tractor for items such as loose bolts, trash build-up, oil or coolant leaks, broken or worn parts.


2. Checking and refueling

! WARNING

To avoid personal injury or death:

- Never refuel near an open flame.
- Do not smoke while refueling.
- Stop the engine before refueling.
- Never use fire.
- Close the fuel tank cap after refueling.
- For refueling, avoid parking the tractor in any place with straws, weeds and other flammable things below and around.

1. Turn the key switch to "ON", check the amount of fuel by fuel gauge.
2. Fill fuel tank when fuel gauge shows 1/4 or less fuel in tank.
3. Use grade No.2-Diesel fuel at temperatures above -10 °C (14 °F). Use grade No.1-Diesel fuel at temperatures below -10 °C (14 °F).
4. After refueling, close the fuel tank cap tight enough.

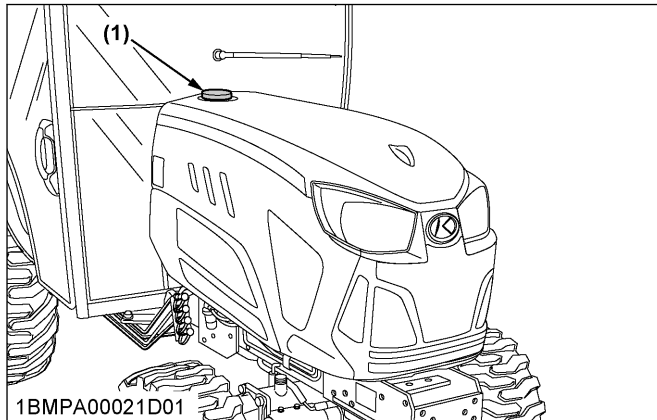

(1) Fuel tank cap

Fuel tank capacity

ROPS	27 L (7.1 U.S.gals.)
CAB	32 L (8.4 U.S.gals.)

IMPORTANT :

- Do not permit dirt or trash to get into the fuel system.
- Be careful not to let the fuel tank become empty. Otherwise, air will enter the fuel system, necessitating bleeding before the next engine start.
- Be careful not to spill during refueling. If a spill occurs wipe it off at once or it may cause a fire.
- To prevent condensation (water) accumulation in the fuel tank, fill the tank before parking overnight.
- Check to see if the fuel tank cap is tight enough.
- Before refueling, make sure there are no flames around and remove static electricity.

3. Checking engine oil level


WARNING

To avoid personal injury or death:

- Stop the engine before checking the oil level.

1. Park the machine on a flat surface.
2. Check the engine oil before starting the engine or 5 minutes or more after the engine has stopped.

3. To check the oil level, pull out the dipstick, wipe it clean, replace it, and pull it out again. Check to see that the oil level lies within the crosshatched area. If the level is too low, add new oil to the prescribed level at the oil inlet.
(See LUBRICANTS, FUEL AND COOLANT on page 95.)

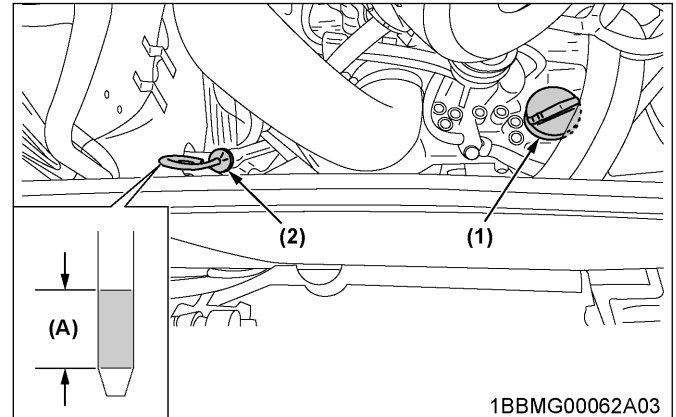

(1) Oil inlet
(2) Dipstick

(A) Oil level is acceptable within this range.


IMPORTANT :

- When using an oil of different manufacturer or viscosity from the previous one, remove all of the old oil.
Never mix 2 different types of oil.
- If the oil level is low, do not run the engine.
- In adding engine oil, use a funnel or the like, which could prevent the oil from getting splashed on hot spots.

4. Checking transmission fluid level

1. Park the machine on a flat surface, lower the implement and shut off the engine.

- To check the oil level, pull out the dipstick, wipe it clean, replace it, and pull it out again. Check to see that the oil level lies within the crosshatched area. If the level is too low, add new oil to the prescribed level at the oil inlet.
(See LUBRICANTS, FUEL AND COOLANT on page 95.)

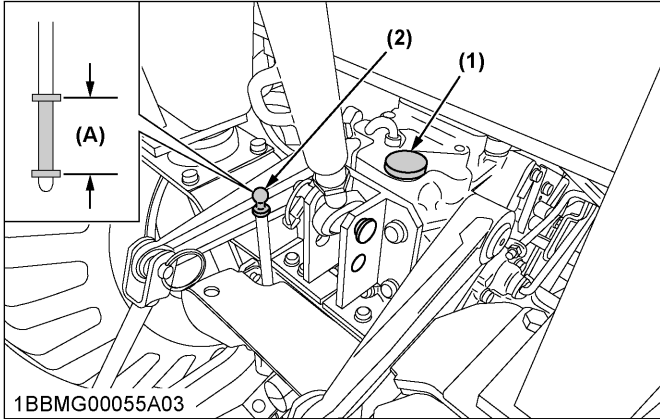

(1) Oil inlet
(2) Dipstick
(A) Oil level is acceptable within this range.

IMPORTANT :

- If the oil level is low, do not run the engine.


5. Checking coolant level

! WARNING

To avoid personal injury or death:

- Do not remove the radiator cap while the coolant is hot. When cool, slowly rotate the cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely.

- Check to see that the coolant level is between the **[FULL]** and **[LOW]** marks of the recovery tank.
- When the coolant level drops due to evaporation, add soft water only up to the full level. In case of leakage, add antifreeze and soft water in the specified mixing ratio up to the full level.
(See Flushing cooling system and changing coolant on page 118.)

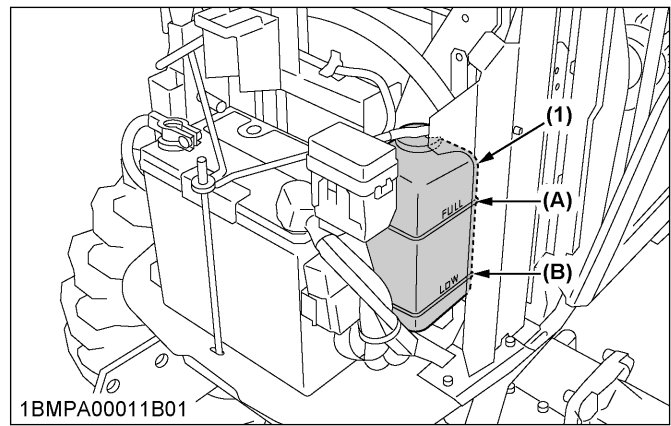


1BMPA00011B01
(1) Recovery tank
(A) **[FULL]**
(B) **[LOW]**

IMPORTANT :

- If the radiator cap has to be removed, follow the caution above and securely retighten the cap.
- Use clean and fresh soft water, and antifreeze to fill the recovery tank.
- If coolant should leak, contact your local Kubota dealer.

6. Cleaning evacuator valve

Open the evacuator valve to get rid of large particles of dust and dirt.

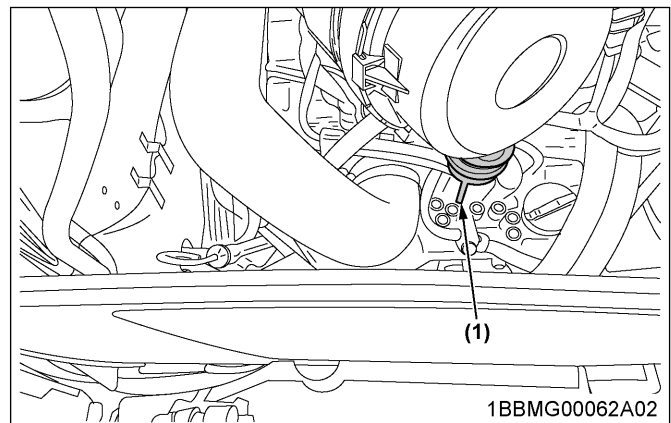

(1) Evacuator valve
1BBMG00062A02


7. Cleaning air conditioner condenser screen [CAB model]

! WARNING

To avoid personal injury or death:

- Stop the engine before removing the screen.
- The condenser and receiver become hot while the air conditioner is running. Before checking or cleaning them, wait until they cool down enough.

1. Detach the air conditioner condenser screen and remove all foreign materials.

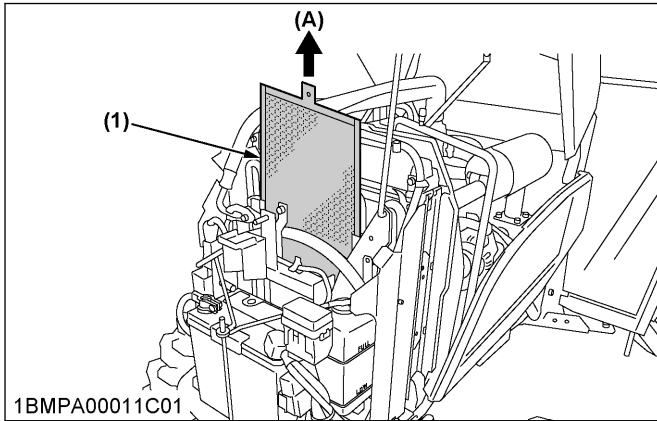

(1) Air conditioner condenser screen (A) Detach screen

IMPORTANT :

- Grill and screen must be clean from debris to prevent engine from overheating and to allow good air intake for air cleaner.


8. Cleaning grill and radiator screen

⚠ WARNING


To avoid personal injury or death:

- Stop the engine and remove the key before removing the screen.
- The condenser and receiver become hot while the air conditioner is running. Before checking or cleaning them, wait until they cool down enough.

1. Check front grill and side screens to be sure they are clean of debris.
2. Pull the panel upward and outward. Raise the panel until the tip clears the hole, and take out the panel.

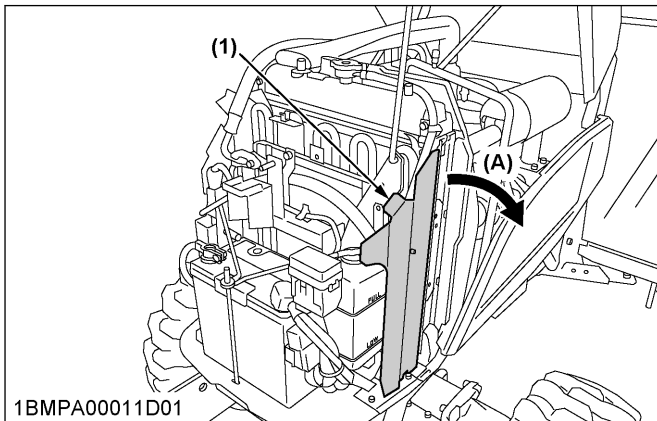


(1) Panel (A) Pull

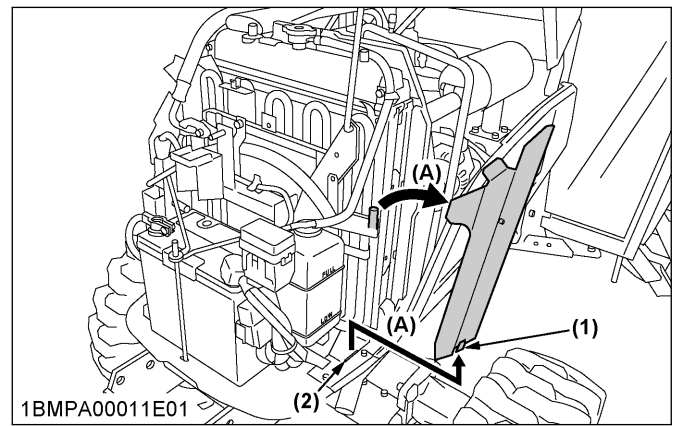

(1) Tip (2) Hole (A) Pull

3. Detach the screen and remove all foreign materials and clean the front of radiator completely.

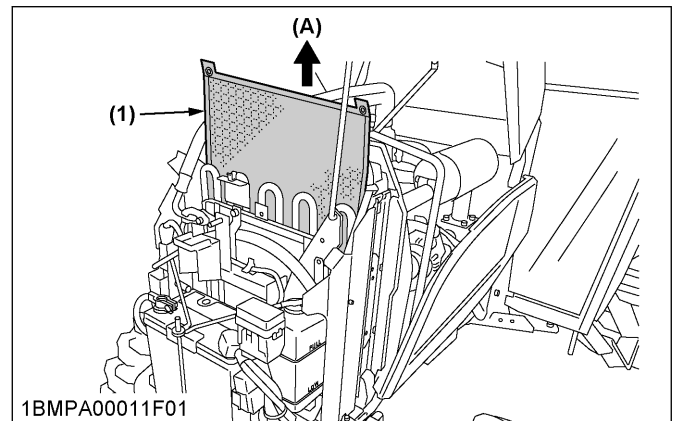

(1) Radiator screen (A) Detach

IMPORTANT :

- Grill and screen must be clean from debris to prevent engine from overheating and to allow good air intake for the air cleaner.
- Do not operate the tractor with the panel detached from the battery mount.

9. Checking brake pedal

1. Inspect the brake for free travel and smooth operation.
2. Adjust if incorrect measurement is found. (See Adjusting brake pedal on page 109.)

10. Checking gauges, meter and Easy Checker

1. Inspect the instrument panel for broken gauge(s), meter(s) and Easy Checker indicators.
2. Replace if broken.

11. Checking headlight, hazard light, and so on

1. Inspect the lights for broken bulbs and lenses.
2. Replace if broken.

12. Checking seat belt and ROPS

1. Always check the condition of the seat belt and ROPS attaching hardware before operating the tractor.
2. Replace if damaged.

13. Checking and cleaning of electrical wiring and battery cables

WARNING

To avoid personal injury or death:

- A loose terminal or connector, or a damaged wire may affect the performance of the electrical components or cause short circuits. Leakage of electricity could result in a fire hazard, a dead battery or damage to electrical components.
- Replace the damaged wires or connections promptly.
- If a fuse blows soon after replacement, do not use a larger than recommended fuse or bypass the fuse system.
- Many wiring connections are protected by waterproof plugs. Plug and unplug these connections carefully and make sure they are sealed correctly after assembly.
- Accumulation of dust, chaff or spilled fuel deposits around the battery, electrical wiring, engine or exhaust system may cause a fire hazard. Clean these areas before starting the work.

To avoid the premature electrical malfunctioning, do not apply high pressure water directly to battery, wiring, connectors, electrical components or instrument panel.

Inspect the following regularly

1. Check the wiring for chafed or cracked insulation.
2. Check the wiring harness clamps. Replace if necessary.
3. Check the connectors and terminals for looseness, contamination or overheated (discolored) connections.
4. Check the instrument panel for correct operation of the switches and gauges.

Contact your Kubota dealer regarding maintenance, diagnosis and repair.

14. Checking movable parts

If any of the movable parts, such as levers and pedals, do not move smoothly because of rust or sticky material, do not force them into motion.

In the above case, remove the rust or the sticky material and apply oil or grease to the relevant spot. Otherwise, the machine may be damaged.


EVERY 50 HOURS

1. Lubricating grease fittings

Apply a small amount of multipurpose grease to the following points every 50 hours.


If you have been operating the machine in extremely wet and muddy conditions, lubricate the grease fittings more often.

[ROPS model]

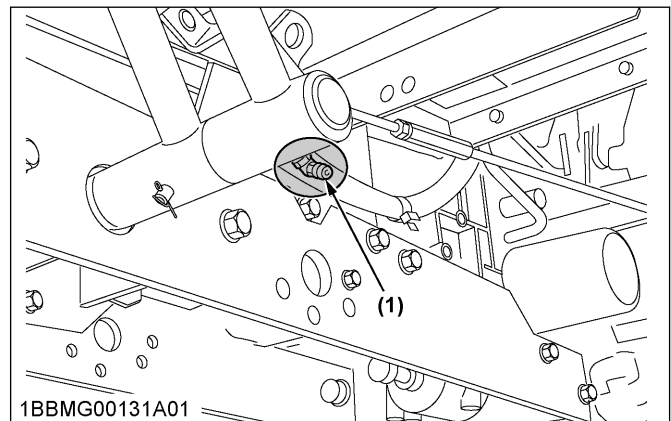


(1) Grease fitting (brake pedal)

[CAB model]

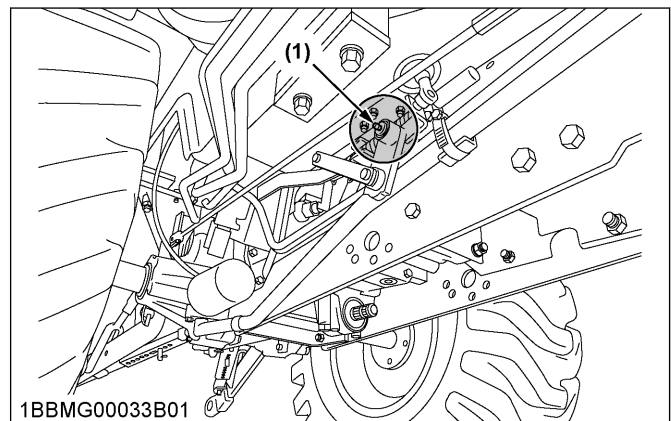


(1) Grease fitting (speed control pedal)

[CAB model]

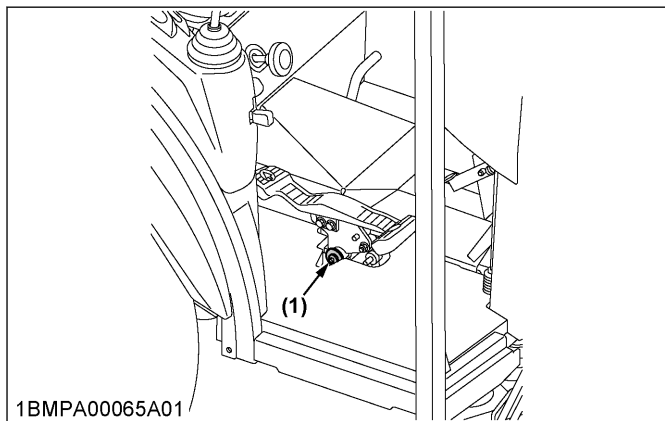


(1) Grease fitting (speed control pedal)

All models

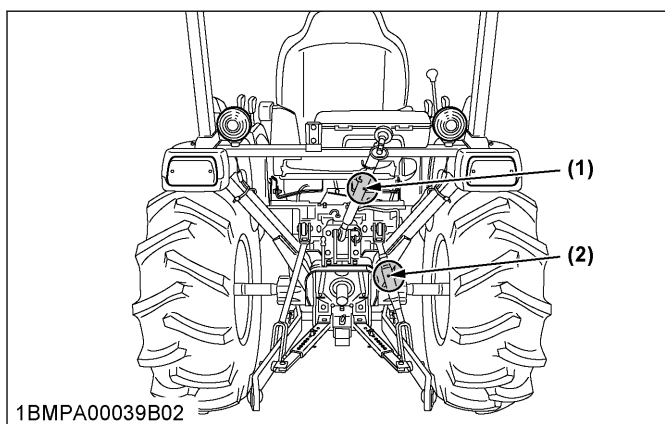

(1) Grease fitting (top link)
(2) Grease fitting (lifting rod, right)

All models

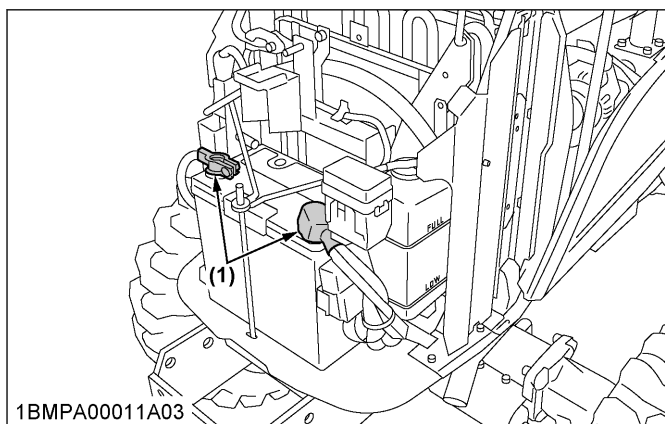

(1) Battery terminals

2. Checking engine start system


⚠ WARNING

To avoid personal injury or death:

- Do not allow anyone near the tractor while testing.
- If the tractor does not pass the test, do not operate the tractor.


- Detach an implement before testing.

[ROPS model]

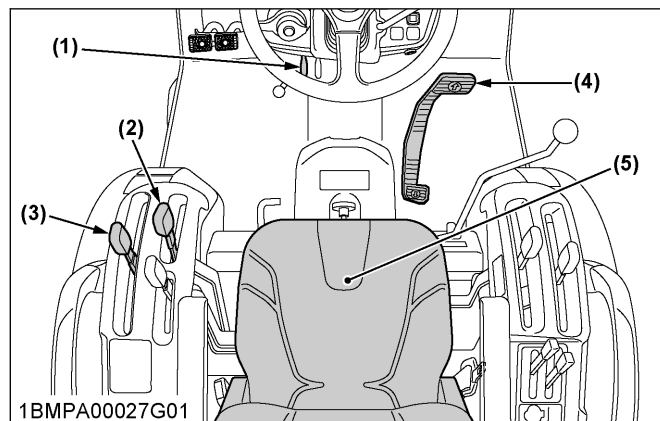

(1) Parking brake lever
(2) PTO clutch lever
(3) Range gear shift lever
(4) Speed control pedal
(5) Operator's seat

[CAB model]

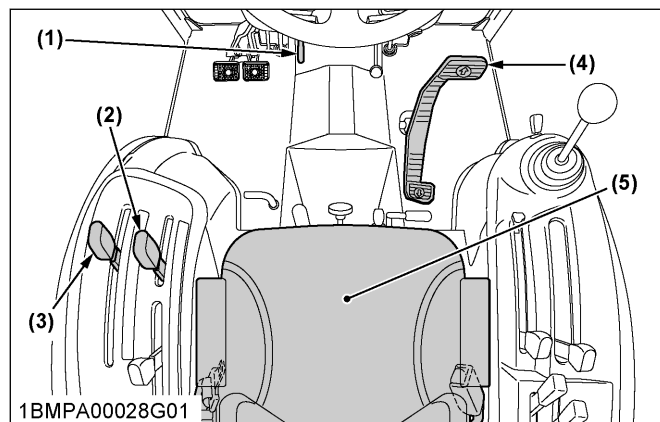

(1) Parking brake lever
(2) PTO clutch lever
(3) Range gear shift lever
(4) Speed control pedal
(5) Operator's seat

Preparation before testing

1. Sit on operator's seat.
2. Set the parking brake and stop the engine.
3. Shift the range gear shift lever to "NEUTRAL" position.
4. Place the speed control pedal in "NEUTRAL" position.
5. Shift the PTO clutch lever to "OFF" position.

Testing switch for the speed control pedal

1. Depress the speed control pedal.
2. Turn the key to "START" position.
3. The engine must not crank.
4. If it cranks, contact your local Kubota dealer for this service.

Testing switch for the PTO clutch lever

1. Place the speed control pedal in "NEUTRAL" position.

2. Shift the PTO clutch lever to "ON" position.
3. Turn the key to "START" position.
4. The engine must not crank.
5. If it cranks, contact your local Kubota dealer for this service.

Testing switches for the operator's seat and the PTO clutch lever

1. Sit on the operator's seat.
2. Start the engine.
3. Shift the PTO clutch lever to "ON" position.
4. Release the parking brake.
5. Stand up. (Do not get off the tractor.)
6. The engine must shut off after approximately 1 second.
7. If it does not stop, contact your local Kubota dealer for this service.


3. Checking the wheel bolt torque

⚠ WARNING
To avoid personal injury or death:

- Never operate the tractor with a loose rim, wheel or axle.
- Any time bolts and nuts are loosened, retighten to the specified torque.
- Check all bolts and nuts frequently and keep them tight.


Check the wheel bolts and the nuts regularly, especially when new. If the wheel bolts and nuts are loose, tighten them as follows.

[ROPS model]

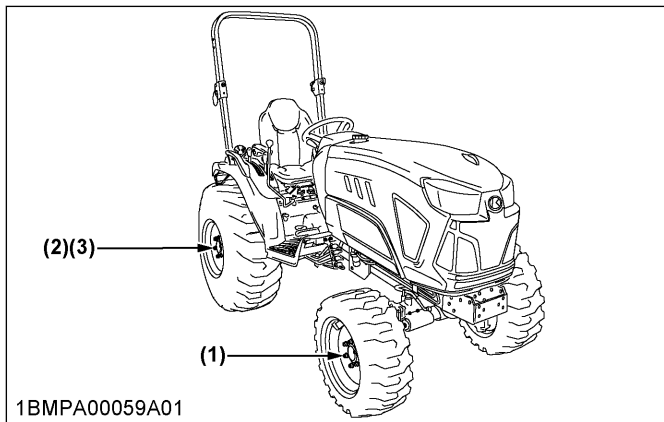

- (1) Nut
- (2) Bolt
- (3) Nut

[CAB model]

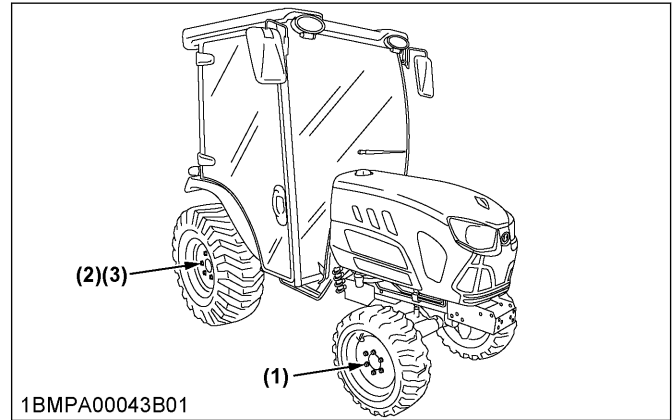

- (1) Nut
- (2) Bolt
- (3) Nut

Tightening torque

(1) Nut	77 N·m to 90 N·m (7.9 kgf·m to 9.2 kgf·m, 57 lbf·ft to 67 lbf·ft)
(2) Bolt	196 N·m to 225 N·m (20 kgf·m to 23 kgf·m, 145 lbf·ft to 166 lbf·ft)
(3) Nut	167 N·m to 191 N·m (17 kgf·m to 19.5 kgf·m, 123 lbf·ft to 141 lbf·ft)

EVERY 100 HOURS

1. Checking battery condition

⚠ DANGER
To avoid the possibility of battery explosion:
For the refillable type battery, follow the instructions below.

- Do not use or charge the refillable type battery if the fluid level is below the [LOWER] (lower limit level) mark. Otherwise, battery component parts may prematurely deteriorate, which may shorten the battery's service life or cause an explosion. Check the fluid level regularly and add distilled water as required so that the fluid level is between the [UPPER] and [LOWER] levels.

⚠ WARNING
To avoid personal injury or death:

- Never remove the battery cap while the engine is running.
- Keep electrolyte away from eyes, hands, and clothes. If you are spattered with electrolyte, wash it away completely with water immediately and get medical attention.

- Keep open sparks and flames away from the battery at all times. Hydrogen gas mixed with oxygen becomes very explosive.
- Wear eye protection and rubber gloves when working around the battery.


NOTE :

- The factory-installed battery is a non-refillable type. If the indicator turns white, do not charge the battery but replace it with a new one.

Mishandling the battery shortens the service life and adds to maintenance costs.

The original battery is maintenance-free, but needs some servicing.

If the battery is weak, the engine will be difficult to start, and the lights will be dim. It is important to check the battery periodically.

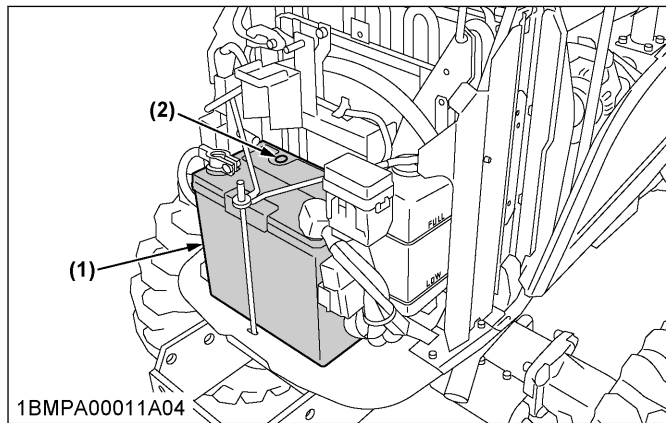

1BMPA00011A04

- (1) Battery
- (2) Indicator

1.1 How to read indicator

Check the battery condition by reading the indicator.

Green	Specific gravity of electrolyte and quality of electrolyte are both in good condition.
Black	Battery needs charging.
White	Battery needs replacing.


1.2 Charging the battery

⚠ WARNING

To avoid personal injury or death:

- When the battery is being activated, hydrogen and oxygen gases in the battery are extremely explosive. Keep open sparks and flames away from the battery at all times, especially when charging the battery.
- When charging the battery, ensure the vent caps are securely in place (if equipped).

- When disconnecting the cable from the battery, start with the negative terminal first. When connecting the cable to the battery, start with the positive terminal first.
- Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

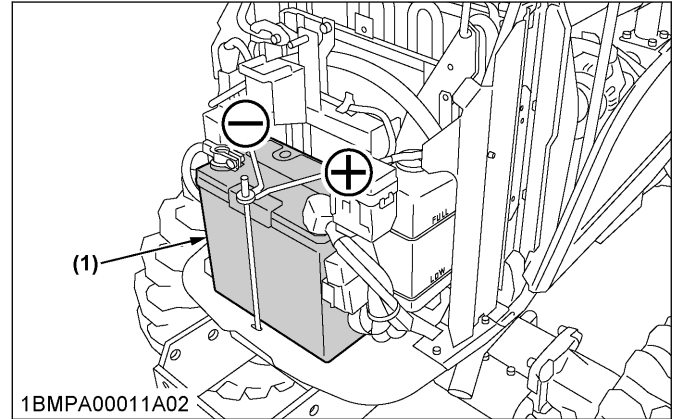

1BMPA00011A02

- (1) Battery

1. To slow charge the battery, connect the battery positive terminal to the charger positive terminal and the negative to the negative, then recharge in the standard fashion.
2. A boost charge is only for emergencies. It will partially charge the battery at a high rate and in a short time. When using a boost-charged battery, it is necessary to recharge the battery as early as possible. Failure to do this will shorten the battery's service life.
3. The battery is charged when the indicator display turns from black to green.
4. When exchanging an old battery for a new one, use a battery of equivalent specification to those shown in the following table.

Battery type	Volts (V)	Capacity at 5 hr (A.H)	Reserve capacity (min)	Cold cranking amps (A)	Normal charging rate (A)
55B24L(S)-MF	12	36	80	430	4.5

1.3 Directions for battery storage

1. When storing the tractor for long periods of time, remove the battery from the tractor, adjust the electrolyte to the proper level and store in a dry place out of direct sunlight.
2. The battery self-discharges while it is stored. Recharge it once every 3 months in hot seasons and once every 6 months in cold seasons.

2. Cleaning air cleaner primary element

WARNING


To avoid personal injury or death:

- Stop the engine and remove the key before cleaning air filter element.

1. Remove the air cleaner cover and primary element.
2. Clean the primary element:
 - When dry dust adheres to the element, blow compressed air from the inside, turning the element. Pressure of compressed air must be under 205 kPa (2.1 kgf/cm², 30 psi).
 - When carbon or oil adheres to the element, soak the element in detergent for 15 minutes, then wash it several times in water, rinse with clean water and dry it naturally. After the element has fully dried, inspect inside of the element with a light and check for damage.
3. Replace the air cleaner primary element:
Every 1000 hours or once yearly, whichever comes first.


NOTE :

- Check to see if the evacuator valve is blocked with dust.

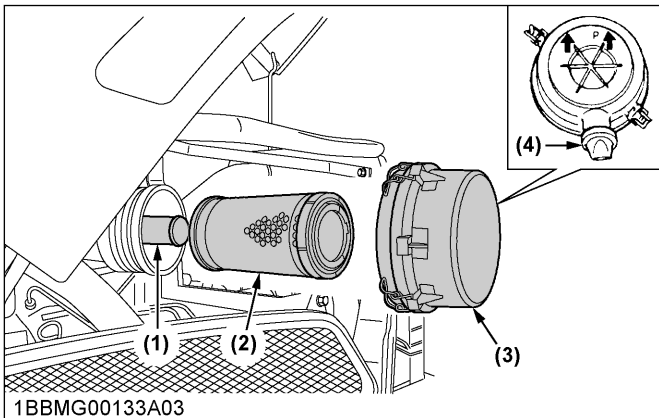

- (1) Secondary (safety) element
 (2) Primary element
 (3) Cover
 (4) Evacuator valve

IMPORTANT :

- The air cleaner uses a dry element; never apply oil.
- Do not run the engine with the filter element removed.
- Refit the cover with the arrow  (of the cover) upright. If the cover is improperly fitted, the evacuator valve will not function and dust will adhere to the element.
- Do not touch the secondary element except in cases where replacing is required.

(See Replacing air cleaner primary element and secondary element on page 118.)

Evacuator valve

Open and clean the evacuator valve to get rid of large particles of dust and dirt (once a week under ordinary conditions, or daily when used in a dusty place).

3. Cleaning fuel filter

WARNING

To avoid personal injury or death:

- Stop the engine and remove the key before checking fuel lines and fuel filter.
- Check the fuel lines periodically. The fuel lines are subject to wear and aging. Fuel may leak out onto the running engine, causing a fire.
- Protect your hands when using kerosene to clean components.


This job should not be done in the field, but in a clean place.

1. Loosen and remove the filter bowl, and rinse the inside with kerosene.
2. Remove the element and dip it in the kerosene to rinse.
3. After cleaning, reassemble the fuel filter, keeping out dust and dirt.


- Bleed the fuel system.
(See Bleeding fuel system on page 121.)

IMPORTANT :

- When the fuel filter bowl has been removed, fuel stops flowing from the fuel tank. If the fuel tank is almost full, however, the fuel will flow back from the fuel return pipe to the fuel filter. Before checking, make sure the fuel tank is less than half-full.
- If dust, dirt or water enters the fuel system, the fuel pump and injection nozzles are subject to premature wear. To prevent this, clean the fuel filter bowl and element periodically.

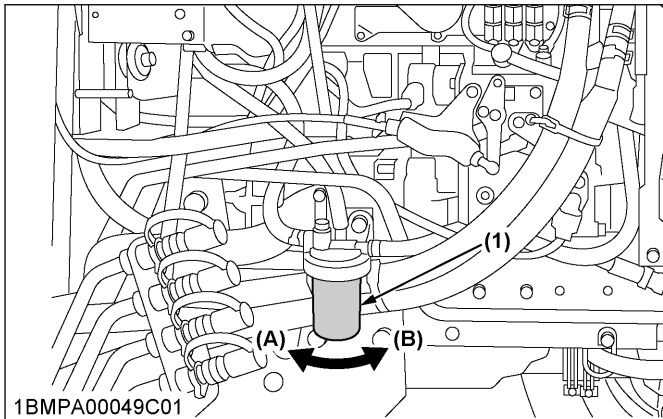

(1) Fuel filter bowl
(A) Loosen
(B) Tighten

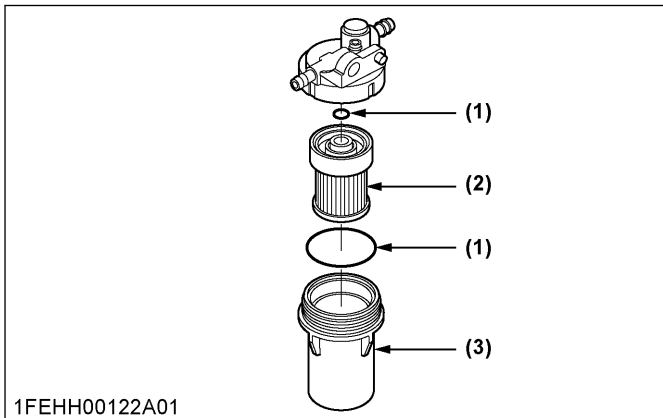

(1) O ring
(2) Filter element
(3) Filter bowl


4. Adjusting fan belt tension

! WARNING
To avoid personal injury or death:
• Stop the engine and remove the key before checking the belt tension.

- Stop the engine and remove the key.
- Apply moderate thumb pressure to the belt between pulleys.
- If the tension is incorrect, loosen the alternator mounting bolts and, using a lever placed between the alternator and the engine block, pull the alternator out until the deflection of the belt falls within acceptable limits.

Proper fan belt tension	A deflection of between 7 mm to 9 mm (0.28 in. to 0.35 in.) when the belt is pressed in the middle of the span.
-------------------------	---

- Replace the fan belt if it is damaged.

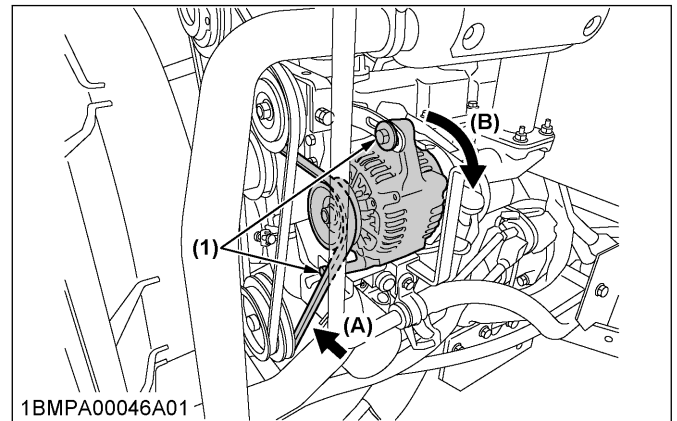

(1) Bolt
(A) Check the belt tension
(B) To tighten

5. Adjusting brake pedal


! WARNING
To avoid personal injury or death:
• Stop the engine and chock the wheels before checking the brake pedal.

Proper brake pedal free travel	30 mm to 40 mm (1.18 in. to 1.57 in.) on the pedal
	Keep the free travel in the right and left brake pedals equal.

- Release the parking brake.
- Disengage the brake pedal lock.
- Depress the brake pedal several times.
- Slightly depress the right-hand brake pedal and measure free travel at the top of pedal stroke.
- Do the same for the left-hand pedal.
- If adjustment is needed, loosen the lock nut and turn the turnbuckle to adjust the rod length within acceptable limits.


7. Re-tighten the lock nut.

[ROPS model]

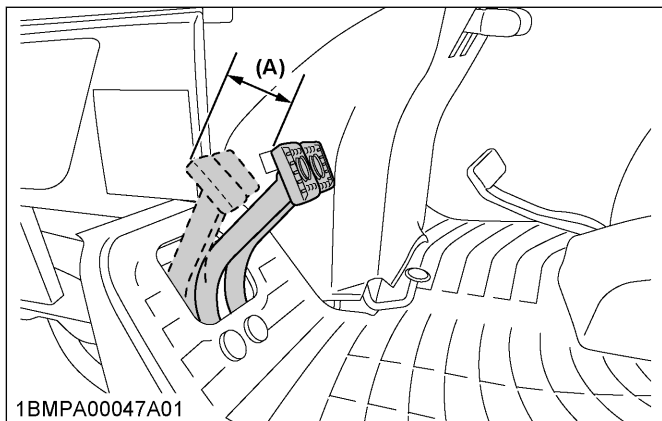


(A) Free travel

[ROPS model]

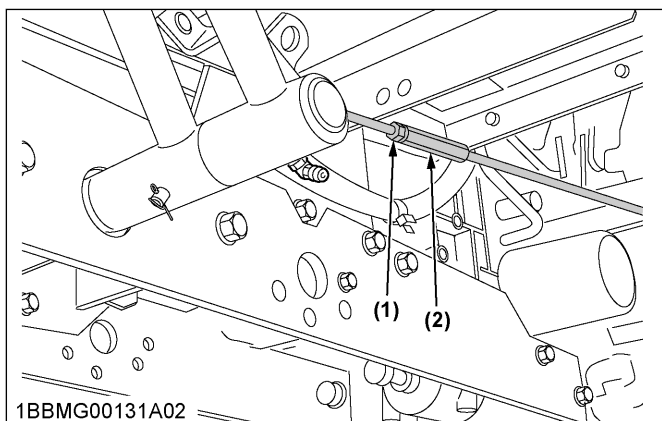


(1) Lock nut (both sides)
(2) Turnbuckle (Both sides)

[CAB model]

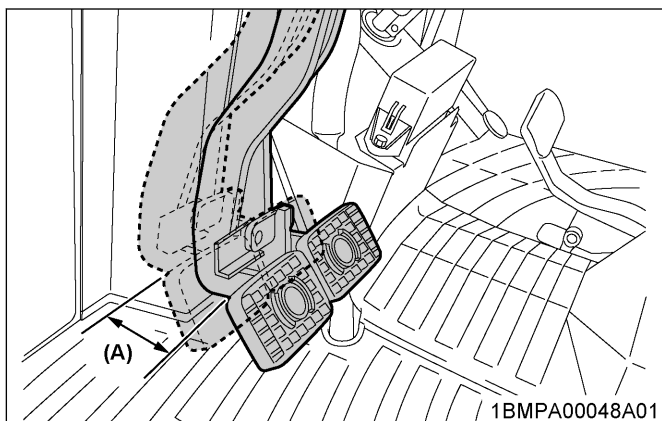

(A) Free travel

[CAB model]

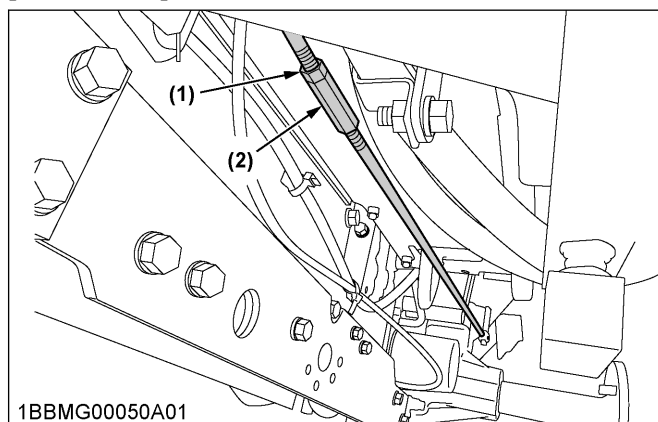

(1) Lock nut (both sides)
(2) Turnbuckle (Both sides)

EVERY 200 HOURS

1. Replacing engine oil filter



WARNING

To avoid personal injury or death:

- Stop the engine before replacing the oil filter cartridge.
- Allow the engine to cool down sufficiently; oil can be hot and can burn.

1. Remove the oil filter.
2. Put a film of clean engine oil on the rubber seal of the new filter.
3. Tighten the filter quickly until it contacts the mounting surface.
Tighten the filter by hand an additional 1/2 turn only.
4. After the new filter has been replaced, the engine oil normally decreases by a small amount. Make sure that the engine oil does not leak through the seal and check the oil level on the dipstick. Then replenish the engine oil up to the prescribed level.

5. Properly dispose of used oil.

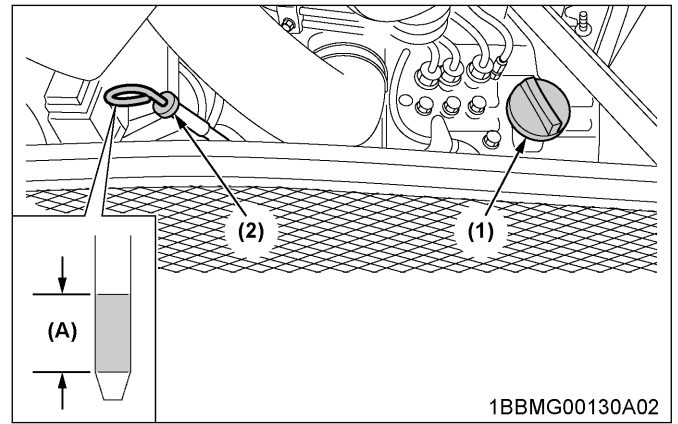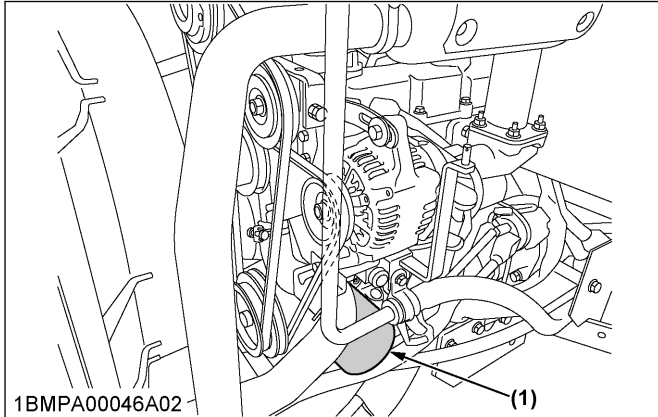

IMPORTANT :

- To prevent serious damage to the engine, use only a Kubota genuine filter.
- When replacing the engine oil filter:
 - Be careful not to allow any oil onto the harness.
 - Use an oil pan or similar device to prevent oil from flowing into the wire harness.

2. Changing engine oil

⚠ WARNING
 To avoid personal injury or death:

- Stop the engine before changing the oil.
- Allow the engine to cool down sufficiently; oil can be hot and can burn.


1. To drain the used oil, remove the drain plug at the bottom of the engine and drain the oil completely into the oil pan.
2. After draining, reinstall the drain plug.
3. Fill with new oil up to the upper notch on the dipstick.
 (See LUBRICANTS, FUEL AND COOLANT on page 95.)

NOTE :

- In adding engine oil, use a funnel or the like.

4. Properly dispose of used oil.

Oil capacity with filter	4.0 L (4.2 U.S.qts.)
--------------------------	----------------------

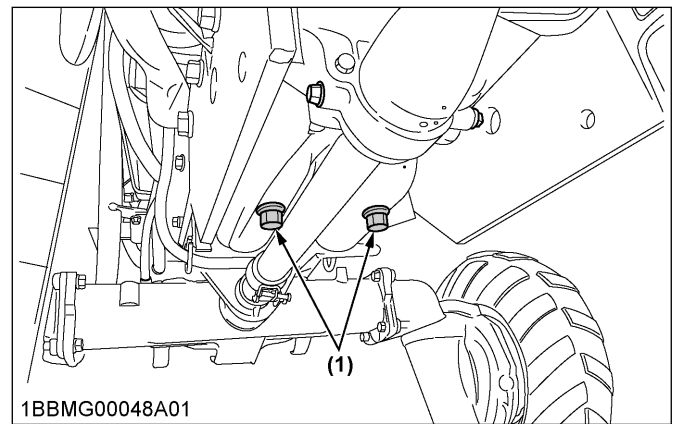


3. Replacing transmission oil filter

⚠ WARNING
 To avoid personal injury or death:


- Stop the engine before changing the oil filter cartridge.
- Allow engine to cool down sufficiently, oil can be hot and can burn.

- Place the oil pan underneath the transmission oil filter and remove the filter.
Do not remove the hydraulic oil filter. Otherwise, the oil comes out.

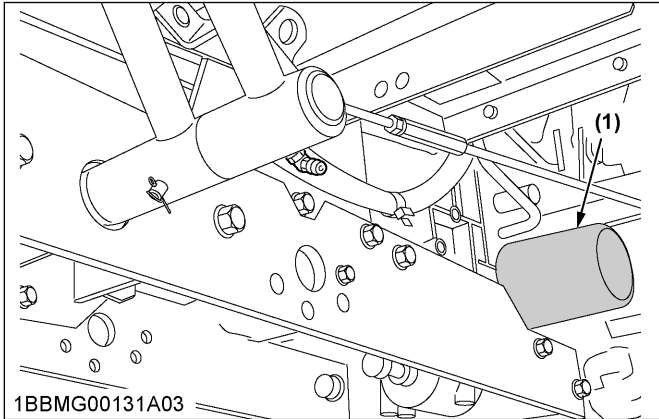

(1) Transmission oil filter

- Put a film of clean transmission oil on the rubber seal of the new filter.
- Quickly tighten the filter until it contacts the mounting surface, then, with a filter wrench, tighten it an additional 1 turn only.
- After the new filter has been replaced, fill the transmission oil up to the upper limit on the dipstick.

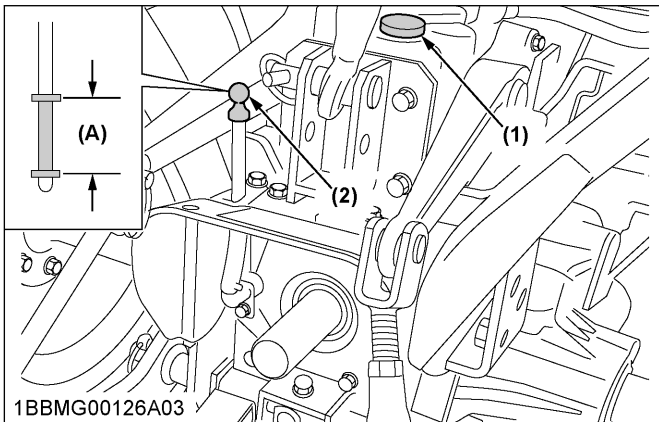

(1) Oil inlet (A) Oil level is acceptable within this range
(2) Dipstick


- After running the engine for a few minutes, stop the engine and check the oil level again, add oil to the prescribed level.
- Make sure that the transmission fluid does not leak past the seal on the filter.

IMPORTANT :


- To prevent serious damage to the hydraulic system, use only a Kubota genuine filter.
- Do not operate the tractor immediately after changing the transmission fluid. Run the engine at medium speed for a few minutes to prevent damage to the transmission.

4. Checking the power steering line

- Check to see that all lines and hose clamps are tight and not damaged.
- If the hoses and the clamps are found to be worn or damaged, replace or repair them at once.

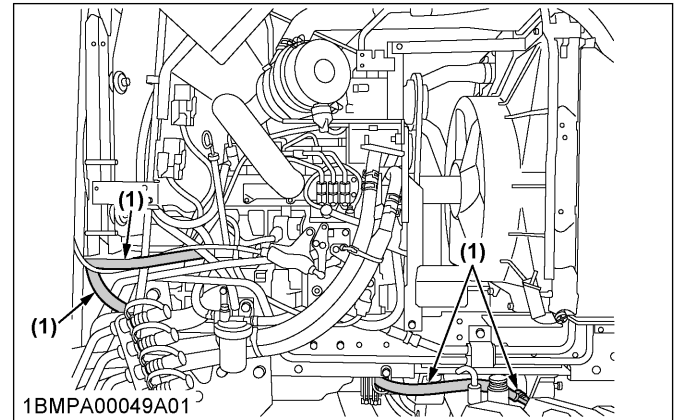


(1) Power steering pressure hoses

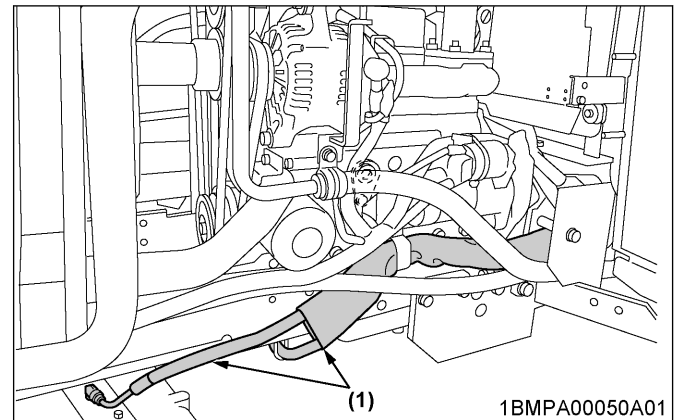

(1) Power steering pressure hoses

5. Adjusting toe-in

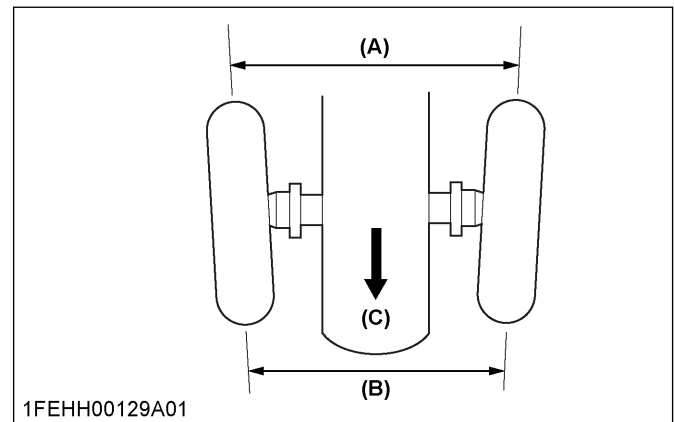

(A) Wheel-to-wheel distance at the rear
(B) Wheel-to-wheel distance at the front
(C) "FRONT"

- Park the tractor on a flat surface.

2. Turn the steering wheel so that the front wheels are in the straight ahead position.
3. Lower the implement, lock the park brake and stop the engine.
4. Measure the distance between the tire beads at the front of the tire, at hub height.
5. Measure the distance between the tire beads at the rear of the tire, at hub height.
6. The front distance should be 0 mm to 20 mm (0 in. to 0.79 in.) less than the rear distance. If not, adjust the tie rod length.
7. If adjust the tie rod length, contact your local Kubota dealer.

6. Adjusting air conditioner belt tension [CAB model]


WARNING

To avoid personal injury or death:

- Stop the engine and remove the key before checking the belt tension.

Proper air conditioner belt tension	A deflection of between 10 mm to 12 mm (0.4 in. to 0.48 in.) when the belt is pressed (98 N / 10 kgf / 22.1 lbs.) in the middle of the span.
-------------------------------------	--

1. Stop the engine and remove the key.
2. Apply moderate thumb pressure to belt between pulleys.
3. If tension is incorrect, loosen the tension pulley mounting nut and turn the adjusting bolt to adjust the belt tension within acceptable limits.
4. Replace air conditioner belt if it is damaged.

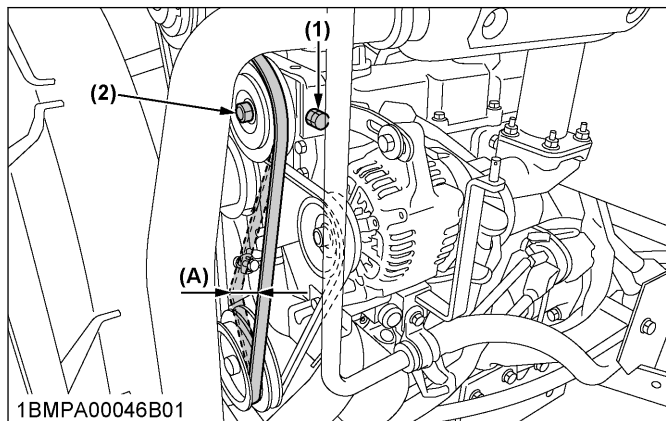


1BMPA00046B01

- (1) Adjusting bolt (A) Check the belt tension
 (2) Tension pulley mounting nut

7. Cleaning inner air filter [CAB model]

1. Remove the inner filter, and blow air from the direction opposite to the filter's normal air flow. Pressure of compressed air must be under 205 kPa (2.1 kgf/cm², 30 psi).

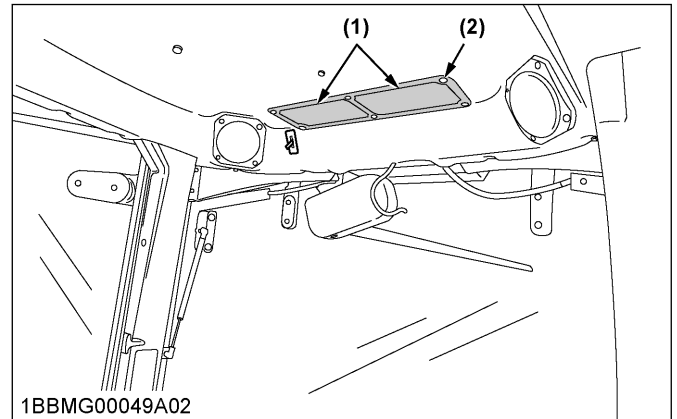


1BBMG00049A02

- (1) Inner air filter
 (2) Screw

8. Cleaning fresh air filter [CAB model]

1. Remove the knob bolts and pull out the filter.

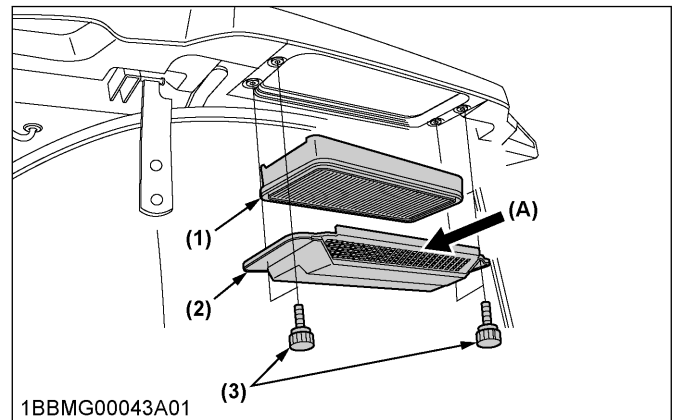

1BBMG00043A01

- (1) Fresh air filter (A) Air inlet port
 (2) Cover
 (3) Knob bolt

NOTE :

- After cleaning, attach the filter and cover as in the previous illustration.

8.1 Cleaning the filter


Normal use

Blow air from the opposite direction to the filter's normal air flow.

Pressure of compressed air must be under 205 kPa (2.1 kgf/cm², 30 psi).

IMPORTANT :

- Do not hit the filter. If the filter becomes deformed, dust may enter into the air-conditioner, which may cause damage and malfunction.

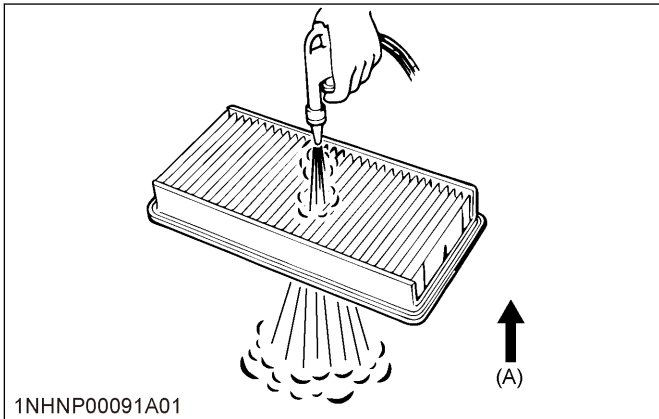

(A) "AIR CONDITIONER AIRFLOW"

NOTE :

- If the filter is very dirty:
Dip the filter in lukewarm water with mild dishwashing detergent.
Move the filter up and down as well as left and right to loosen dirt. Rinse the filter with clean water and let it air-dry.

IMPORTANT :

- Do not use gasoline, thinner or similar chemicals to clean the filter as damage to the filter may occur. Cleaning the filter with such chemicals may also cause an unpleasant odor in the CAB next time the system is used.


9. Checking the air conditioner condenser [CAB model]

WARNING

To avoid personal injury or death:

- Stop the engine before removing the screen.
- The condenser and receiver become hot while the air conditioner is running. Before checking or cleaning them, wait until they cool down enough.

1. Check air conditioner condenser to be sure it is clean of debris.

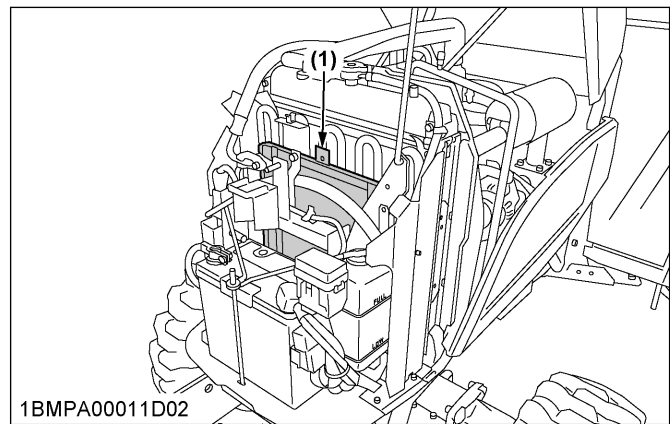

(1) Air conditioner condenser

EVERY 400 HOURS

1. Changing transmission fluid


WARNING

To avoid personal injury or death:

- Allow the engine to cool down sufficiently; oil can be hot and can burn.
1. To drain the used oil, remove the drain plug at the bottom of the transmission case and drain the oil completely into the oil pan.
 2. After draining reinstall the drain plug.
 3. Fill with new **Kubota Super UDT** fluid up to the upper notch on the dipstick.
(See LUBRICANTS, FUEL AND COOLANT on page 95.)
 4. After running the engine for a few minutes, stop it and check the oil level again; add oil to prescribed level.


5. Properly dispose of used oil.

Oil capacity	15 L (4.0 U.S.gals.)
--------------	----------------------

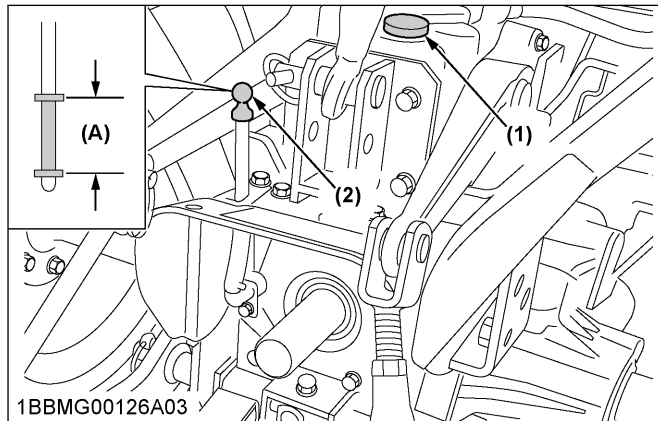


1BBMG00126A03
 (1) Oil inlet
 (2) Dipstick
 (A) Oil level is acceptable within this range

[LX2620]

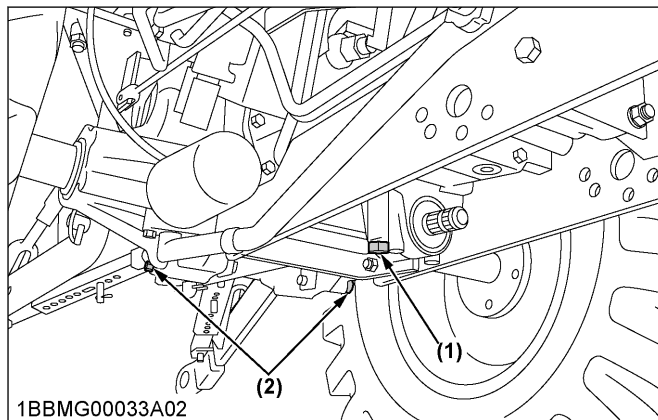

1BBMG00033A02
 (1) Drain plug
 (2) Drain plugs

[LX2620SU]

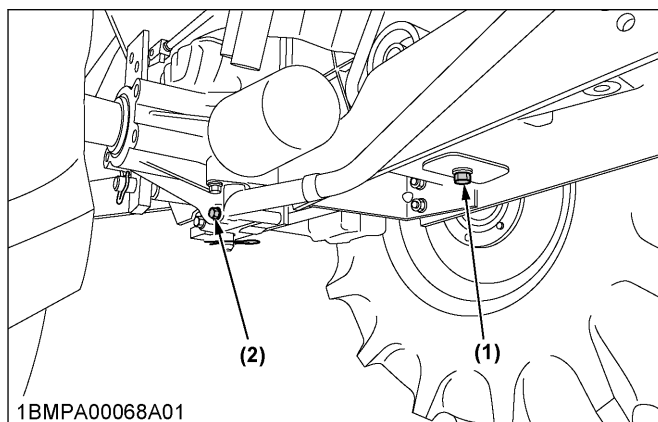

1BMPA00068A01
 (1) Drain plug
 (2) Drain plug (both sides)

IMPORTANT :

- If the 3-point hitch cannot be raised by setting the hydraulic control lever to the UP position after long term storage or when

changing the transmission oil, turn steering wheel to the right and left several times to bleed air from the system.

- Do not operate the tractor immediately after changing the transmission fluid. Run the engine at medium speed for a few minutes to prevent damage to the transmission.

2. Replacing hydraulic oil filter


⚠ WARNING

To avoid personal injury or death:

- Stop the engine before changing the oil filter cartridge.
- Allow the engine to cool down sufficiently; oil can be hot and can burn.


1. Remove the drain plugs at the bottom of the transmission case and drain the oil completely into the oil pan.
2. After draining reinstall the drain plugs.

[LX2620]

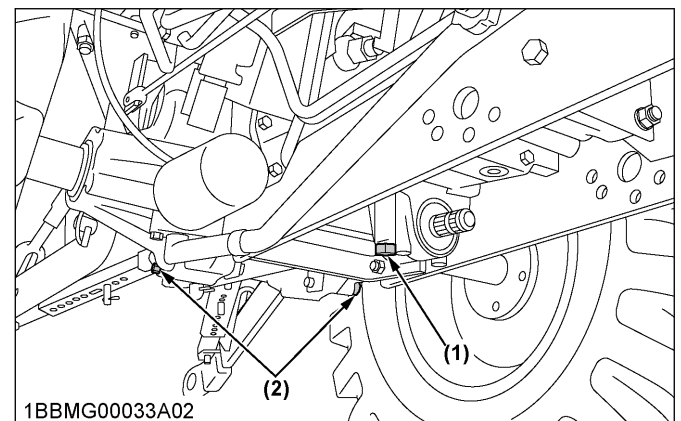

1BBMG00033A02
 (1) Drain plug
 (2) Drain plugs


[LX2620SU]

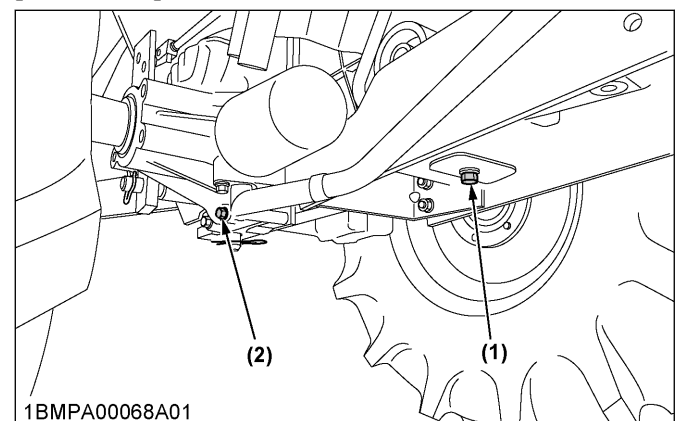

1BMPA00068A01
 (1) Drain plug
 (2) Drain plug (both sides)


3. Remove the oil filter.

[LX2620]

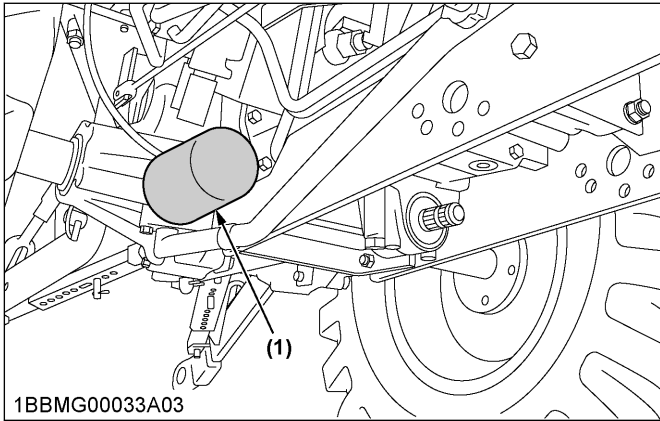

(1) Hydraulic oil filter


[LX2620SU]

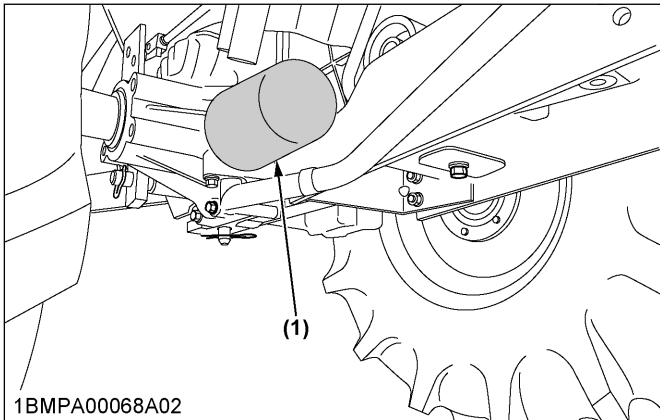

(1) Hydraulic oil filter

4. Put a film of clean transmission oil on the rubber seal of the new filter.
5. Quickly tighten the filter until it contacts the mounting surface, then tighten it by hand an additional 1/2 turn only.
6. After the new filter has been replaced, fill the transmission oil up to the upper limit on the dipstick.

All models

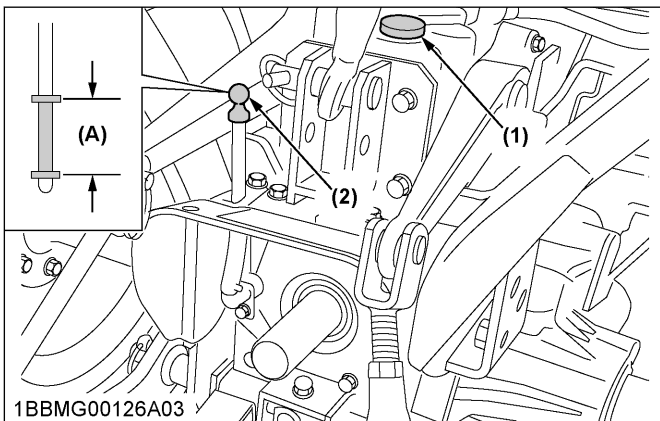

(1) Oil inlet
(2) Dipstick

(A) Oil level is acceptable within this range

7. After running the engine for a few minutes, stop the engine and check the oil level again, add oil to the prescribed level.
8. Make sure that the transmission fluid does not leak past the seal on the filter.

IMPORTANT :

- To prevent serious damage to the hydraulic system, use only a Kubota genuine filter.

3. Replacing fuel filter

! WARNING

To avoid personal injury or death:

- Stop the engine and remove the key before checking fuel lines and fuel filter.
- Check the fuel lines periodically. The fuel lines are subject to wear and aging. Fuel may leak out onto the running engine, causing a fire.
- Protect your hands when using kerosene to clean components.


This job should not be done in the field, but in a clean place.

1. Loosen and remove the filter bowl, and rinse the inside with kerosene.
2. Take out the element and replace it with new one.
3. Reassemble the fuel filter, keeping out dust and dirt.


- Bleed the fuel system.
(See Bleeding fuel system on page 121.)

IMPORTANT :

- When the fuel filter bowl has been removed, fuel stops flowing from the fuel tank. If the fuel tank is almost full, however, the fuel will flow back from the fuel return pipe to the fuel filter. Before checking, make sure the fuel tank is less than half-full.
- If dust, dirt or water enters the fuel system, the fuel pump and injection nozzles are subject to premature wear. To prevent this, clean the fuel filter bowl and element periodically.

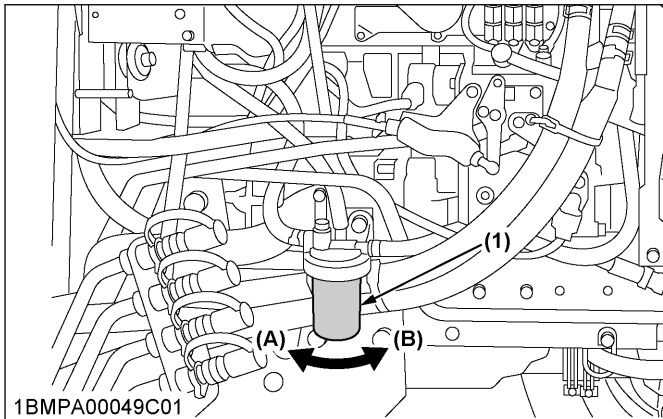

(1) Fuel filter bowl
(A) Loosen
(B) Tighten

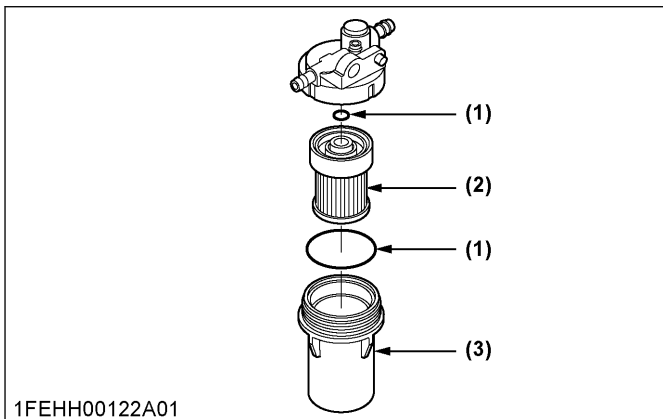

(1) O ring
(2) Filter element
(3) Filter bowl

4. Adjusting front axle pivot (4WD)

⚠ WARNING

To avoid personal injury or death:

- Park the tractor on a flat place.
- Lower the implement, lock the parking brake and stop the engine.


If the front axle pivot pin adjustment is not correct, front wheel vibration can occur causing vibration in the steering wheel.

- Loosen the lock nut, and tighten the adjusting screw.
The oscillating load is as follows.

Oscillating load	50 N to 100 N (5.1 kg to 10.2 kg) (11.2 lbf to 22.5 lbf)
------------------	--

If the adjusting screw is tightened, loosened and re-tightened, apply liquid gasket to its tip.

- Retighten the lock nut.
Contact your local Kubota dealer for further details.

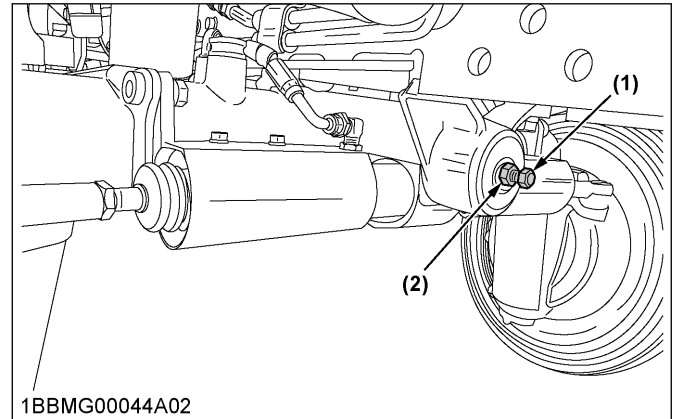

(1) Adjusting screw
(2) Lock nut

5. Changing front axle gear case oil

- Park the tractor on a firm, flat and level surface.
- To drain the used oil, remove the right and left drain plugs and filling plugs at the front axle gear case and drain the oil completely into the oil pan.
- After draining, reinstall the drain plugs.
- Fill with the new oil up to the upper notch on the dipstick.
(See LUBRICANTS, FUEL AND COOLANT on page 95.)


IMPORTANT :

- After 10 minutes, check the oil level again; add oil to prescribed level.

- After filling, reinstall the filling plug.

6. Properly dispose of used oil.

Oil capacity	4.7 L (5.0 U.S.qts.)
--------------	----------------------

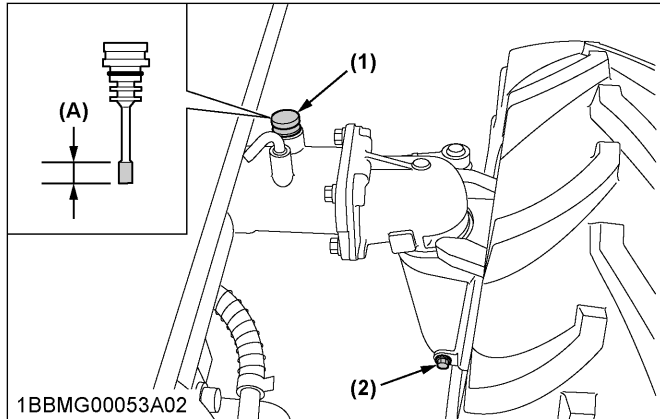

(1) Filling plug with dipstick (A) Oil level is acceptable within this range.
 (2) Drain plug

EVERY 800 HOURS

1. Adjusting engine valve clearance

Contact your local Kubota dealer for this service.

EVERY 1000 HOURS OR 1 YEAR

Perform the following servicing once every 1000 hours or yearly, whichever comes first.

1. Replacing air cleaner primary element and secondary element

(See Cleaning air cleaner primary element on page 108.)

NOTE :

- To prevent serious damage to the engine, use only a Kubota genuine filter.

EVERY 1500 HOURS

1. Cleaning fuel injector nozzle injection pressure

Contact your local Kubota dealer for this service.

EVERY 2000 HOURS OR 2 YEARS

Perform the following servicing once every 2000 hours or biennially, whichever comes first.

1. Flushing cooling system and changing coolant

! WARNING

To avoid personal injury or death:


- Do not remove the radiator cap while the coolant is hot. When cool, slowly rotate the cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely.

1. Stop the engine, remove the key and let it cool down.
2. To drain the coolant, open the radiator drain shutoff-valve, and then remove the radiator drain plug and the radiator cap.
3. After the coolant has drained, close the drain shutoff-valve and reinstall the drain plug.
4. Fill with clean soft water and cooling system cleaner.
5. Follow the directions given in the cleaner instruction.
6. After flushing, fill with clean soft water and antifreeze until the coolant level is just below the radiator cap. Install the radiator cap securely.
7. Fill with coolant up to the **[FULL]** mark of the recovery tank.
8. Start up and operate the engine for a few minutes.
9. Stop the engine, remove the key and let it cool down.
10. Check the coolant level of the recovery tank and add coolant if necessary.

11. Properly dispose of the used coolant.


Model	Coolant capacity (with recovery tank)
ROPS	4.3 L (4.5 U.S.qts.)
CAB	5.4 L (5.7 U.S.qts.)

Right side

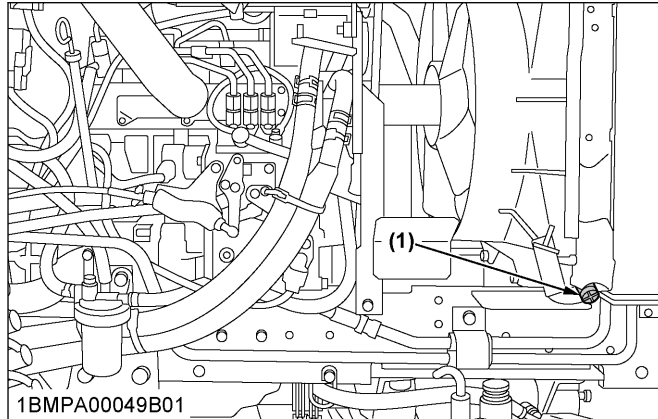


(1) Drain plug

Left side

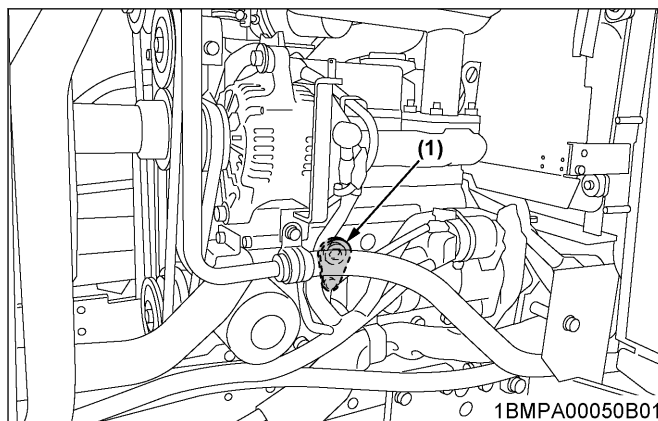

(1) Drain shutoff-valve

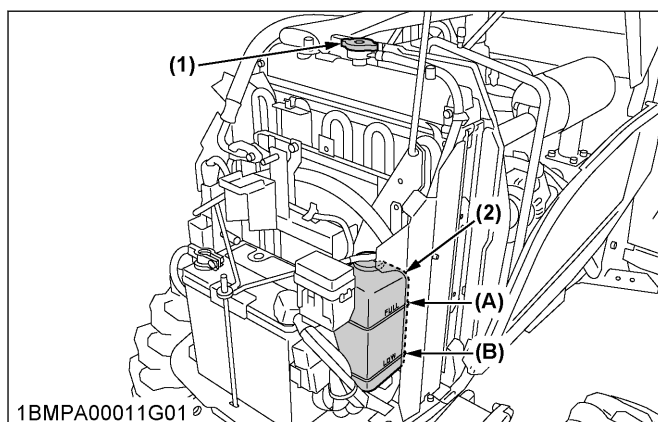

(1) Radiator cap (A) [FULL]
 (2) Recovery tank (B) [LOW]

IMPORTANT :

- Do not start the engine without any coolant.

- Use clean, fresh soft water and antifreeze to fill the radiator and recovery tank.
- When mixing the antifreeze with water, the antifreeze mixing ratio is 50 %.
- Securely tighten the radiator cap. If the cap is loose or improperly fitted, water may leak out and the engine could overheat.

2. Antifreeze

! WARNING

To avoid personal injury or death:

- When using anti freeze, put on some protection such as rubber gloves (antifreeze contains poison).
- If you swallow the antifreeze, seek immediate medical help. Do not make a person throw up unless told to do so by a poison control or a healthcare professional. Use standard first aid and CPR for signs of shock or cardiac arrest. Call your local poison control center or your local emergency number for further assistance.
- When antifreeze comes in contact with the skin or clothing, wash it off immediately.
- Do not mix different types of antifreeze. The mixture can produce chemical reactions resulting in harmful substances.
- Antifreeze is extremely flammable and explosive under certain conditions. Keep fire and children away from antifreeze.
- When draining fluids from the engine, place a container underneath the engine body.
- Do not pour waste onto the ground, down a drain, or into any water source.
- Also, observe the relevant environmental protection regulations when disposing of antifreeze.

Always use a 50/50 mix of long-life coolant and clean soft water in Kubota engines. Contact your local Kubota dealer concerning coolant for extreme conditions.

1. Long-life coolant (hereafter LLC) comes in several types. Use ethylene glycol (EG) type for this engine.
2. Before employing LLC-mixed cooling water, fill the radiator with fresh water and empty it again. Repeat this procedure 2 or 3 times to clean up the inside.
3. Mixing the LLC
 Premix 50 % LLC with 50 % clean soft water. When mixing, stir it up well, and then pour it into the radiator.

4. The procedure for the mixing of water and antifreeze differs according to the make of the antifreeze and the ambient temperature. Refer to SAE J1034 standard, more specifically also to SAE J814c.

Vol % antifreeze	Freezing point		Boiling point*1	
	°C	°F	°C	°F
50	-37	-34	108	226

*1 At 1.013×10^5 Pa (760 mmHg) pressure (atmospheric). A higher boiling point is obtained by using a radiator pressure cap which permits the development of pressure within the cooling system.

5. Adding the LLC
 - a. Add only water if the mixture level is reduced by evaporation.
 - b. If there is a mixture leak, add LLC of the same manufacturer and type in the same mixture percentage.

IMPORTANT :

- **Never add any long-life coolant from a different manufacturer. Different brands may have different additive components, and the engine may fail to perform as specified.**

6. When the LLC is mixed, do not employ any radiator cleaning agent. The LLC contains an anti-corrosive agent. If mixed with the cleaning agent, sludge may build up, adversely affecting the engine parts.
7. Kubota's genuine long-life coolant has a service life of 2 years. Change the coolant every 2000 hours or every 2 years, whichever comes first.

NOTE :

- **The above data represents industry standards that necessitate a minimum glycol content in the concentrated antifreeze.**

EVERY 3000 HOURS

1. Checking injection pump

Contact your local Kubota dealer for this service.

EVERY 1 YEAR

1. Checking the radiator hoses and clamps


WARNING

To avoid personal injury or death:

- Stop the engine and remove the key before checking radiator hose and clamp.
- Allow engine and coolant to cool down sufficiently before checking.

Inspect every year; replace if any deterioration (crack, hardening, scar, or deformation) or damage occurred.


1. If the hose clamps are loose or water leaks, tighten the bands securely.
2. Replace the hoses and tighten the hose clamps securely, if the radiator hoses are swollen, hardened or cracked.

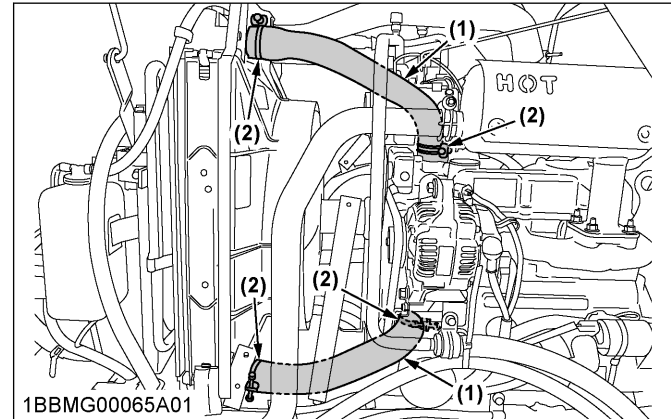

(1) Radiator hoses (2 hoses)
(2) Clamp bands (4 clamps)

2. Checking fuel lines

1. Check to see that all lines and the hose clamps are tight and not damaged.
2. If the hoses and the clamps are found to be worn or damaged, replace or repair them at once.

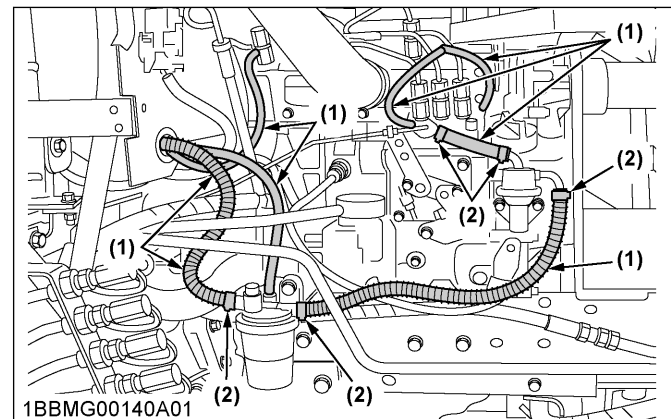

(1) Fuel lines
(2) Clamp bands


NOTE :

- **If the fuel line has been replaced, properly bleed the fuel system. (See Bleeding fuel system on page 121.)**

3. Checking intake air line

1. Check to see that the hoses and the hose clamps are tight and not damaged.

- If the hoses and the clamps are found to be worn or damaged, replace or repair them at once.

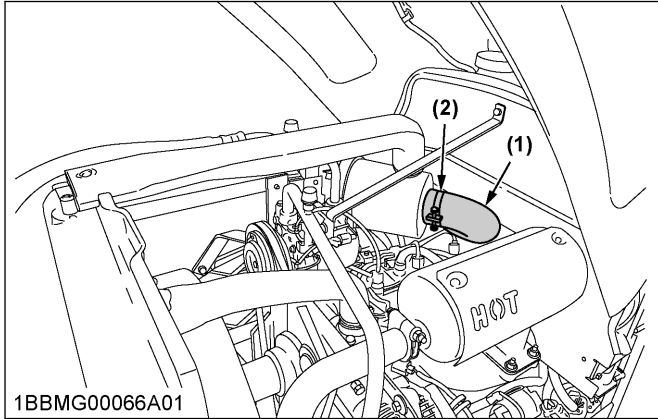


- Hose
- Hose clamps

4. Checking the air conditioner pipe and hose [CAB model]


- Check to see that all lines and hose clamps are tight and not damaged.
- If hoses and clamps are found worn or damaged, contact your local Kubota dealer for this service.

5. Checking CAB isolation cushion [CAB model]

- Check the cushion for any breakage or fatigue. Replace them if they have deteriorated.

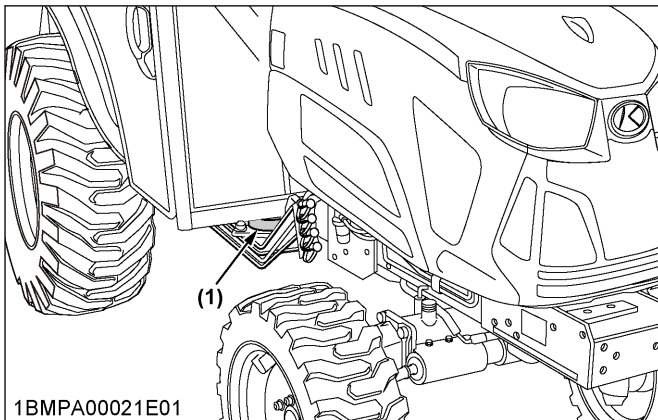

- Cushions (both side)

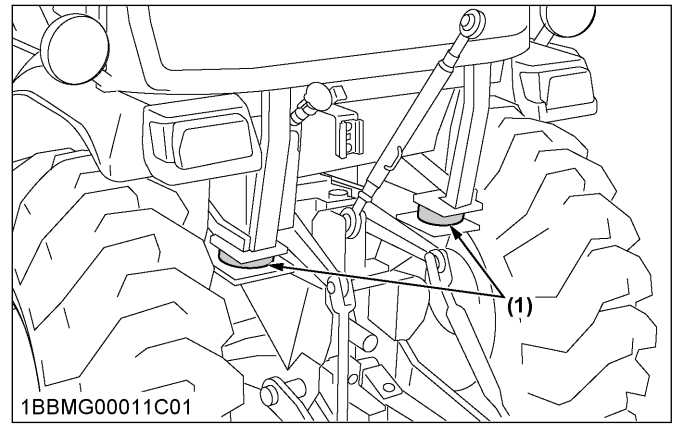

- Cushion

EVERY 2 YEARS

1. Checking radiator hose (water pipes)

Contact your local Kubota dealer for this service.

2. Checking power steering line

Contact your local Kubota dealer for this service.

3. Checking air conditioner hose [CAB model]

Contact your local Kubota dealer for this service.

EVERY 4 YEARS

1. Replacing fuel lines

Contact your local Kubota dealer for this service.

2. Replacing intake air line

Contact your local Kubota dealer for this service.

SERVICE AS REQUIRED

1. Bleeding fuel system

Air must be removed:


- When the fuel filter or lines are removed.
- When the tank is completely empty.
- After the tractor has not been used for a long period of time.

Bleeding procedure

- Fill the fuel tank with fuel.
- Start the engine and run for about 30 seconds, and then stop the engine.

2. Draining clutch housing water

The tractor is equipped with a drain plug under the clutch housing. After operating in the rain or snow, or if the tractor has been washed, water may get into the clutch housing. Remove the drain plug, drain the water and then reinstall the plug.

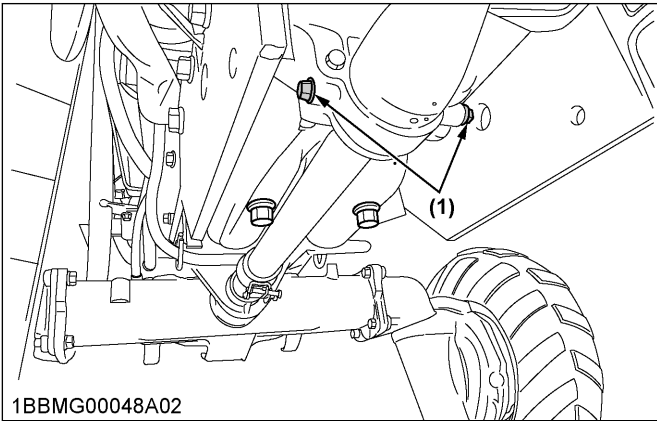

(1) Water drain plug


3. Replacing fuses

The tractor electrical system is protected from potential damage by fuses. A blown fuse indicates that there is an overload or short somewhere in the electrical system. If any of the fuses should blow, replace with a new one of the same capacity.


IMPORTANT :

- Before replacing a blown fuse, determine why the fuse blew and make any necessary repairs. Failure to follow this procedure may result in serious damage to the tractor electrical system. For specific information dealing with electrical problems, read the troubleshooting section of this manual or contact your local Kubota dealer. (See TROUBLESHOOTING on page 128.)

[ROPS model]

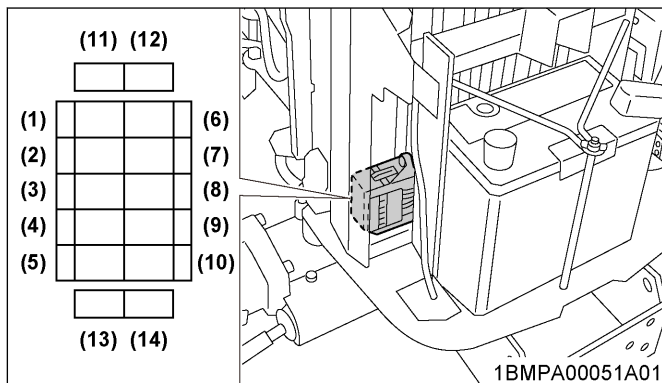


[ROPS model]

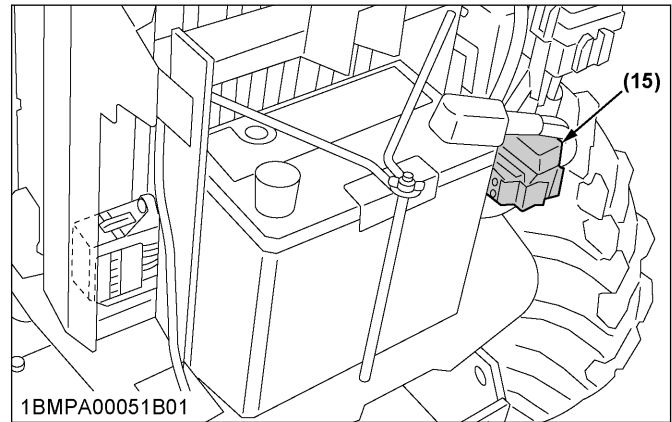


[ROPS model]

Fuse No.	Capacity (A)	Protected circuit
(1)	5	Key switch (starter)
(2)	15	OPC controller, hazard
(3)	5	Panel
(4)	30	Starter relay
(5)	5	Grow relay
(6)	10	Head light
(7)	5	Panel, OPC
(8)	10	Alternator, ACC relay
(9)	15	Outlet (right side)
(10)	15	Outlet (rear)
(11)	5	Spare fuse
(12)	10	Spare fuse
(13)	15	Spare fuse
(14)	30	Spare fuse
(15)	Slow blow fuse	<ul style="list-style-type: none"> • Check circuit against wrong battery connection. • Contact your local Kubota dealer for replacement.

[CAB model]

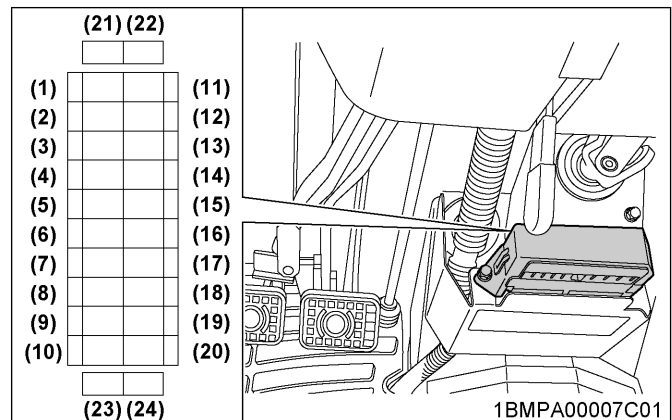

[CAB model]

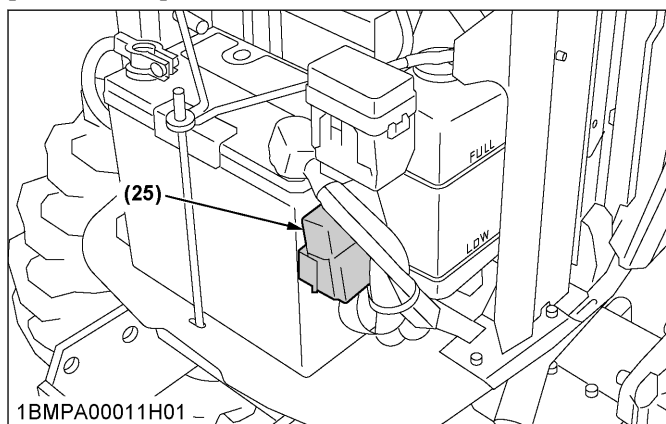

[CAB model]

Fuse No.	Capacity (A)	Protected circuit
(1)	15	Outlet (rear)
(2)	15	Outlet (front)
(3)	15	Head light, horn
(4)	15	OPC, controller, hazard
(5)	5	Panel
(6)	15	Wiper
(7)	7.5	Air conditioner
(8)	5	Radio
(9)	20	ACC relay
(10)	—	—
(11)	10	Key switch
(12)	30	Starter relay
(13)	5	Panel, OPC
(14)	10	Alternator, ACC relay
(15)	5	Glow relay
(16)	20	Defogger
(17)	15	Radio, dome light
(18)	20	Air conditioner, blower
(19)	15	Work light
(20)	5	Key switch (starter)
(21)	10	Spare fuse
(22)	5	Spare fuse
(23)	20	Spare fuse
(24)	15	Spare fuse
(25)	Slow blow fuse	<ul style="list-style-type: none"> • Check circuit against wrong battery connection. • Contact your local Kubota dealer for replacement.

4. Replacing light bulb

WARNING

To avoid personal injury or death:

- Be careful not to drop the bulb, hit anything against the lamp, apply excess force, or get the lamp scratched. If broken, glass may cause injury. Pay more attention to halogen lamps in particular, which have high pressure inside.
- Before replacing the lamp, turn off the light and wait until the bulb cools down; otherwise, you may get burned.

IMPORTANT :

- Use a new bulb of the specified wattage.
- Never touch the bulb surface (glass) with bare hands. Fingerprints, for example, may break the bulb.
- The light covers may get damaged while attaching or detaching them when replacing the light bulbs of the turn signal and hazard lights. Contact your local Kubota dealer for this service.
- Headlights [SU model only]: Take the bulb out of the light body and replace it with a new one.
- Other lights: Detach the lens and replace the bulb.


Light	Capacity		
	ROPS	CAB	SU
Headlight	—*1		23 W
Tail light	8 W		
Turn signal and hazard light	21 W /32 CP		
Front work light	—	—*1	—
Dome light (room lamp)	—	5 W	—

*1 See Replacing the LED light on page 125.

4.1 Replacing headlamp [SU model only]

1. While pushing the center lock buttons, pull and remove the electrical connector.
2. Turn left to remove connector and then remove the bulb.

- Replace it with a new bulb and reinstall the headlamp assembly in the reverse order.

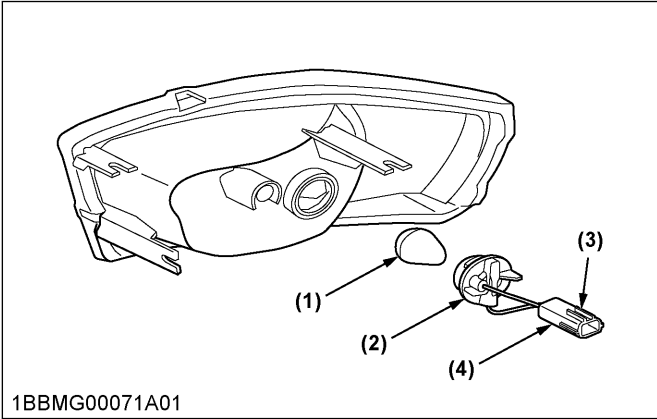


1BBMG00071A01

- (1) Bulb
- (2) Connector
- (3) Lock buttons
- (4) Electrical connector

4.2 Replacing tail light


- Remove the harness connector of the tail light.

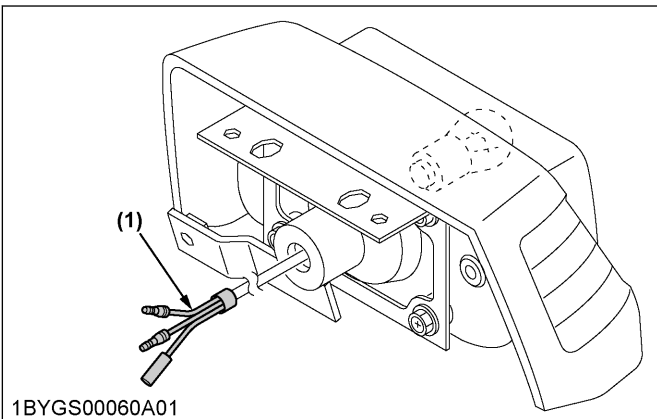

1BYGS00060A01

- (1) Harness connector

- Loosen the screws and remove the lens.
- Replace the bulbs.

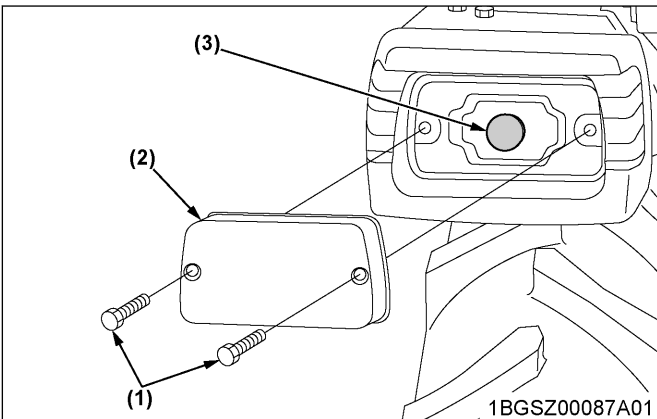


1BGSZ00087A01

- (1) Screw
- (2) Lens
- (3) Bulb

- Install the lens and the harness connector in the reverse order of step 1 to 2.

4.3 Replacing room lamp [CAB model only]


- Open the hood and disconnect the cable from the negative terminal of the battery.

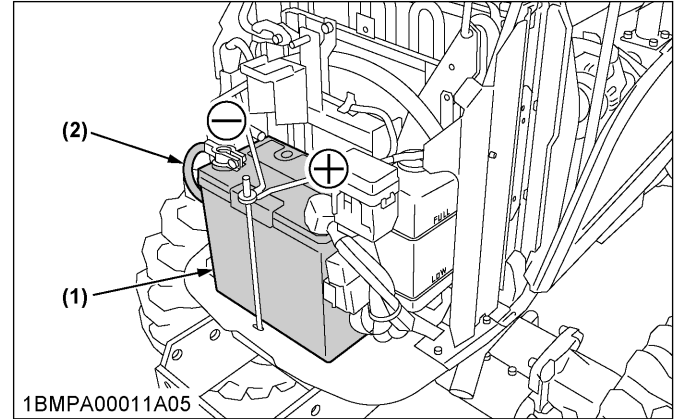

1BMPA00011A05

- (1) Battery
- (2) Cable from the negative terminal of the battery


- Remove the cover of the room light with a flathead screwdriver.

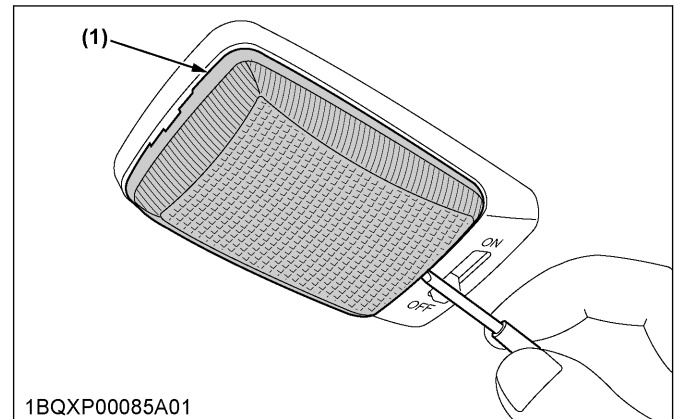

1BQXP00085A01

- (1) Cover

- Replace the bulb.

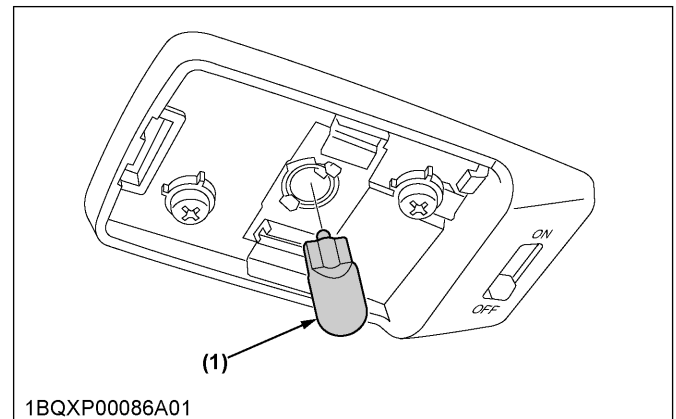

1BQXP00086A01


- (1) Bulb

4. Install the cover and the cable in the reverse order of step 1 to 2.

5. Replacing the LED light

If the LED head light, front work light, or rear work light (if equipped) is no longer functioning, contact your local Kubota dealer for replacing the LED light.


6. Lubricating points for door and window [CAB model]

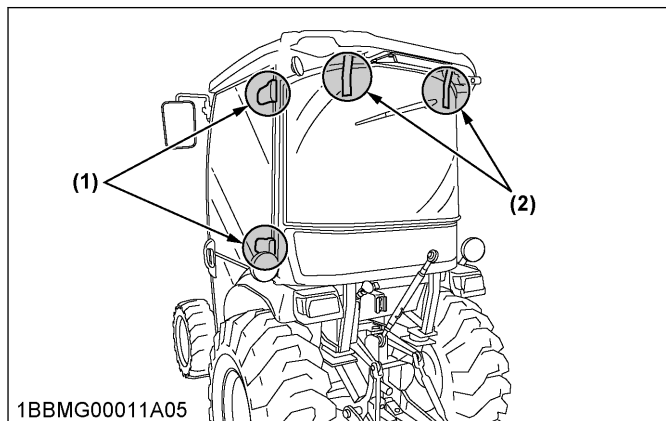

- (1) Door hinge
- (2) Rear window hinge

7. Adding washer liquid [CAB model]

Add a proper amount of automobile washer liquid.

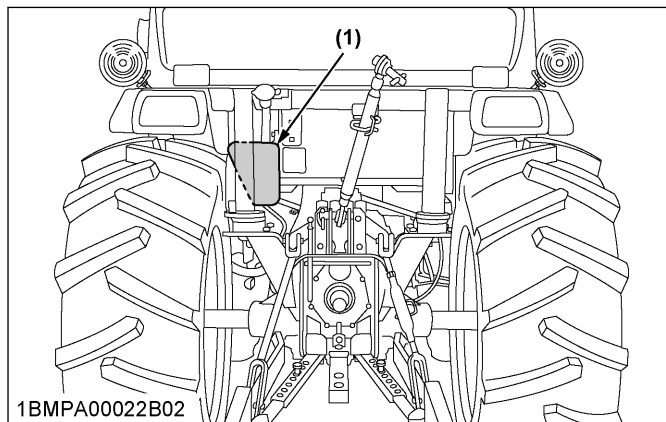

- (1) Washer liquid tank

Washer tank capacity	1.5 L (1.6 U.S.qts.)
----------------------	----------------------

8. Checking amount of refrigerant (gas) [CAB model]

⚠ WARNING
To avoid personal injury or death:


- Liquid contact with eyes or skin may cause frostbite.
- In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes.
- In contact with a flame, R134a refrigerant produces a toxic gas.
- Do not disconnect any part of the refrigeration circuit of the air conditioning system. Contact your local Kubota dealer for assistance and service.

A shortage of refrigerant impairs the air-conditioner performance. Check the following points. If it is indicated that the amount of refrigerant is extremely low, ask your dealer to inspect and charge.


Checking procedure

1. Run the air-conditioner in the following conditions.
 - Engine speed - About 1500 rpm
 - Temperature control lever - Maximum cooling position (leftmost)
 - Fan switch - Highest blow
 - Air-conditioner switch - "ON"

- Look into the sight glass to see if the refrigerant is flowing through its circuit.

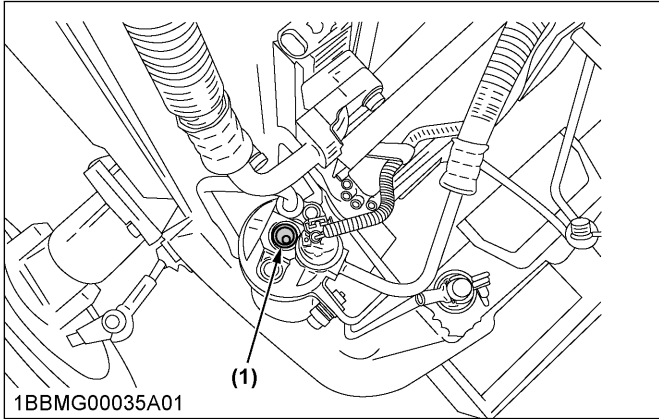

(1) Sight glass

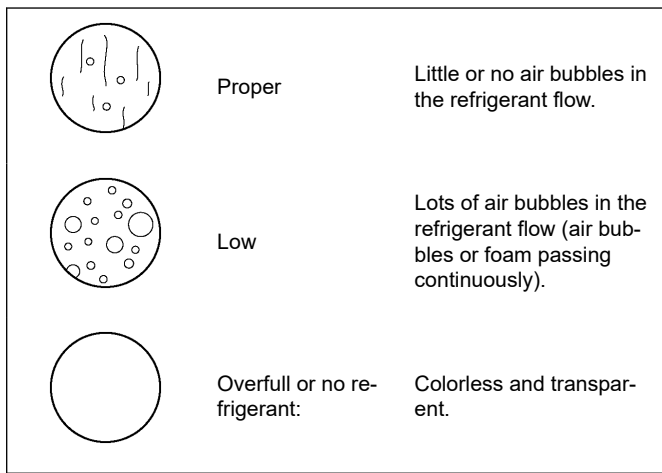

IMPORTANT :

- Charge only with R134a not R12 refrigerant (gas).

9. Replacing radiator hose (water pipes)

Contact your local Kubota dealer for this service.

NOTE :

- Replace the mentioned parts if any deterioration (crack, hardening, scar or deformation) or damage has occurred.

10. Replacing fuel lines

Contact your local Kubota dealer for this service.

NOTE :

- Replace the mentioned parts if any deterioration (crack, hardening, scar or deformation) or damage has occurred.

11. Replacing the intake air line

Contact your local Kubota dealer for this service.

NOTE :

- Replace the mentioned parts if any deterioration (crack, hardening, scar or deformation) or damage has occurred.

STORAGE



WARNING

To avoid personal injury or death:

- Do not clean the machine while the engine is running.
- To avoid the danger of exhaust fume poisoning, do not operate the engine indoors without proper ventilation.
- When storing the tractor, remove the key from the key switch to prevent unauthorized persons from operating the tractor and getting injured.

TRACTOR STORAGE

If you intend to store your tractor for an extended period of time, follow the procedures outlined below. These procedures will ensure that the tractor is ready to operate with minimum preparation when it is removed from storage.

1. Check the bolts and nuts for looseness and tighten if necessary.
2. Apply grease to tractor areas where bare metal will rust, and also to pivot areas.
3. Detach the weights from the tractor body.
4. Inflate the tires to a pressure a little higher than usual.
5. Change the engine oil and run the engine to circulate oil throughout the engine block and internal moving parts for about 5 minutes.
6. With all implements lowered to the ground, coat any exposed hydraulic cylinder piston rods with grease.
7. Remove the battery from the tractor. Store the battery following the battery storage procedures. (See Checking battery condition on page 106.)
8. Keep the tractor in a dry place where the tractor is sheltered from the elements. Cover the tractor.
9. Store the tractor indoors in a dry area that is protected from sunlight and excessive heat. If the tractor must be stored outdoors, cover it with a waterproof tarpaulin.
10. Jack the tractor up and place blocks under the front and rear axles so that all 4 tires are off the ground. Keep the tires out of direct sunlight and extreme heat.

IMPORTANT :

- Before washing the tractor, stop the engine. Allow sufficient time for the engine to cool down before washing.

- Cover the tractor after the muffler and the engine have cooled down.

REMOVING THE TRACTOR FROM STORAGE

1. Check the tire air pressure and inflate the tires if needed.
2. Jack the tractor up and remove the support blocks from under the front and rear axles.
3. Install the battery. Before installing the battery, make sure that it is fully charged.
4. Check the fan belt tension.
5. Check all fluid levels (engine oil, transmission and hydraulic oil, engine coolant, and any attached implements).
6. Start the engine. Observe all gauges. If all the gauges are functioning properly and have normal readings, move the tractor outside. Once outside, park the tractor and let the engine idle for at least 5 minutes. Shut the engine off and walk around the tractor and make a visual inspection looking for evidence of oil or water leaks.
7. With the engine fully warmed up, release the parking brake and test the brakes for proper adjustment as you move forward. Adjust the brakes as necessary.

TROUBLESHOOTING

ENGINE TROUBLESHOOTING

If something is wrong with the engine, refer to the following table for the cause and its corrective measure.

Trouble		Cause	Countermeasure
Engine is difficult to start or will not start.		<ul style="list-style-type: none"> No fuel flow. 	<ul style="list-style-type: none"> Check the fuel tank and the fuel filter. Replace filter if necessary.
		<ul style="list-style-type: none"> Air or water is in the fuel system. 	<ul style="list-style-type: none"> Make sure that all hose clamps are tightly fastened to the fuel lines. If any part of the fuel line is damaged, repair it or replace it with a new one. Bleed the fuel system. (See Bleeding fuel system on page 121.)
		<ul style="list-style-type: none"> In winter, oil viscosity increases, and engine revolution is slow. 	<ul style="list-style-type: none"> Use oils of different viscosities, depending on ambient temperatures. Use engine block heater (optional).
		<ul style="list-style-type: none"> Battery becomes weak and the engine does not turn over quick enough. 	<ul style="list-style-type: none"> Clean battery cables and terminals. Charge the battery. In cold weather, always remove the battery from the engine, charge and store it indoors. Install it on the tractor only when the tractor is going to be used.
Insufficient engine power.		<ul style="list-style-type: none"> Insufficient or dirty fuel. The air cleaner is clogged. 	<ul style="list-style-type: none"> Check the fuel system. Clean or replace the element.
Engine stops suddenly.		<ul style="list-style-type: none"> Insufficient fuel. 	<ul style="list-style-type: none"> Refuel. Bleed the fuel system if necessary.
Exhaust fumes are colored.	Black	<ul style="list-style-type: none"> Fuel quality is poor. Too much oil. The air cleaner is clogged. 	<ul style="list-style-type: none"> Change the fuel and fuel filter. Drain excess oil if necessary. Clean or replace the element.
	Blue White	<ul style="list-style-type: none"> The inside of the exhaust muffler is damp with fuel. Injection nozzle trouble. Fuel quality is poor. 	<ul style="list-style-type: none"> Heat the muffler by applying load to the engine. Check the injection nozzle. Change the fuel and fuel filter.
Engine overheats.		<ul style="list-style-type: none"> Engine overloaded. 	<ul style="list-style-type: none"> Shift to lower gear or reduce load.
		<ul style="list-style-type: none"> Low coolant level. 	<ul style="list-style-type: none"> Fill cooling system to the correct level; check radiator and hoses for loose connections or leaks.
		<ul style="list-style-type: none"> Loose or damaged fan belt. 	<ul style="list-style-type: none"> Adjust or replace fan belt.
		<ul style="list-style-type: none"> Dirty radiator core or grille screens. 	<ul style="list-style-type: none"> Remove all trash.
		<ul style="list-style-type: none"> Coolant flow route corroded. 	<ul style="list-style-type: none"> Flush cooling system.


If you have any questions, contact your local Kubota dealer.

Trouble	Operator's action
Engine not overheated, but engine warning indicator on.	Stop the engine and get it restarted. If the engine fails to restart or the indicator stays on, immediately contact your local Kubota dealer.

If you have any questions, contact your local Kubota dealer.

POWERTRAIN TROUBLE SHOOTING

If something is wrong with the powertrain, the master system warning indicator starts blinking and the error code shown below is displayed on the liquid crystal display, indicating the location of the trouble. If an error code appears, immediately contact your local Kubota dealer for repairs.

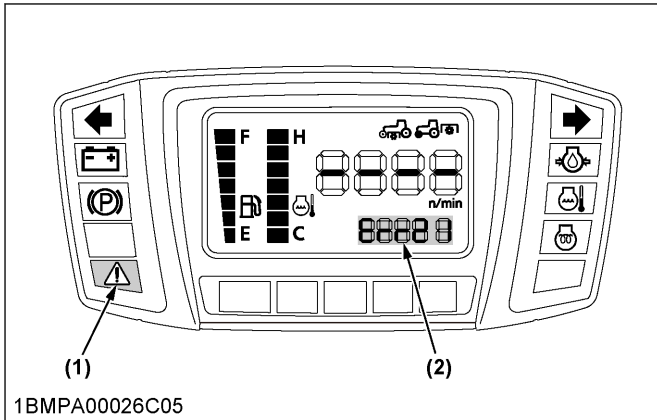

- (1) Master system warning indicator
- (2) Error code

Displayed error code	Trouble	Operator's action
"Err1"	Water temperature sensor trouble	Contact your local Kubota dealer.
"Err2"	Fuel sensor trouble	
"Err3"	Meter panel memory reading trouble	

OPTIONS

LIST OF OPTIONS


Contact your local Kubota dealer for further details.

- Rear work light
High visibility for night work
- Front end weights for front ballast
- Mounting kit (front end weights) to mount front end weights
- Engine block heater for extremely cold weather starting
- Radio CD player with weather band (CAB model)
- Rear remote hydraulics
- Spacer kit

MOUNTING THE SUPPORT PLATE


1. Installation procedures

1. Insert the support plate through the CD player mounting opening of the inner roof.

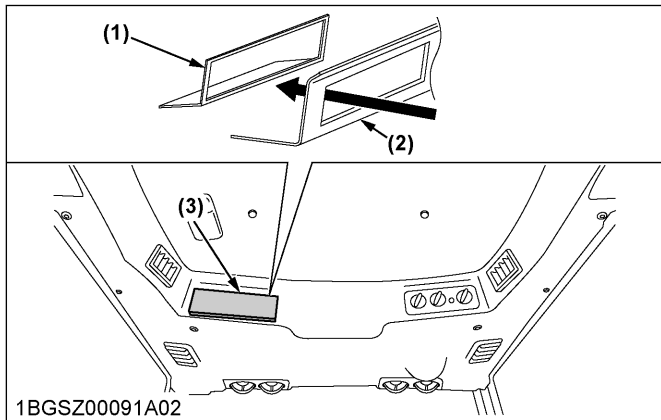


- 1BGSZ00091A02
- (1) Support plate
 - (2) Inner roof
 - (3) CD player mounting opening

2. Insert the mounting collar into the inner roof and support plate.

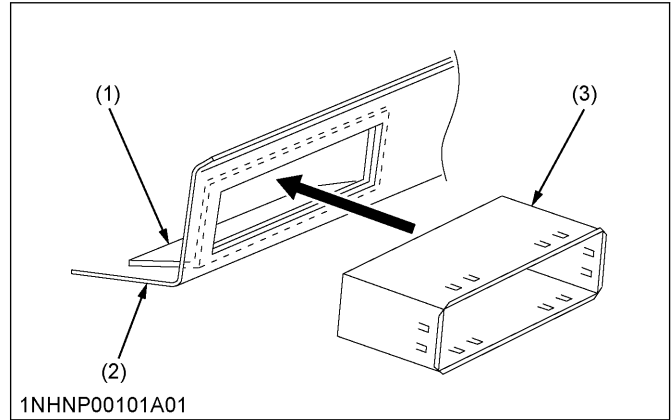

- 1NHNP00101A01
- (1) Support plate
 - (2) Inner roof
 - (3) Mounting collar


3. Bend the mounting tabs of the mounting collar out with a screwdriver.

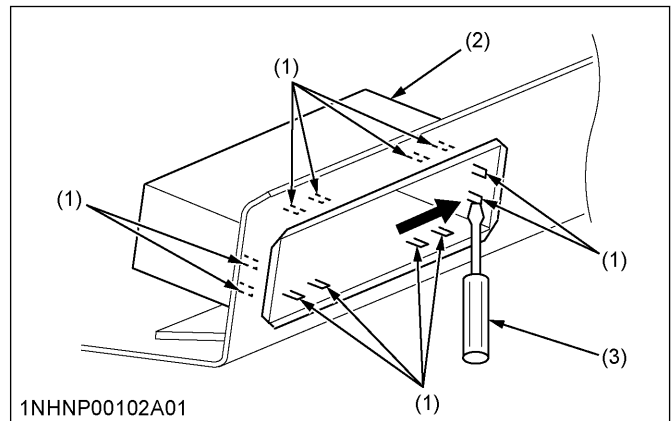

- 1NHNP00102A01
- (1) Mounting tabs
 - (2) Mounting collar
 - (3) Screwdriver


4. Connect the antenna lead to the CD player.

5. Connect the power connector to the CAB wire harness.

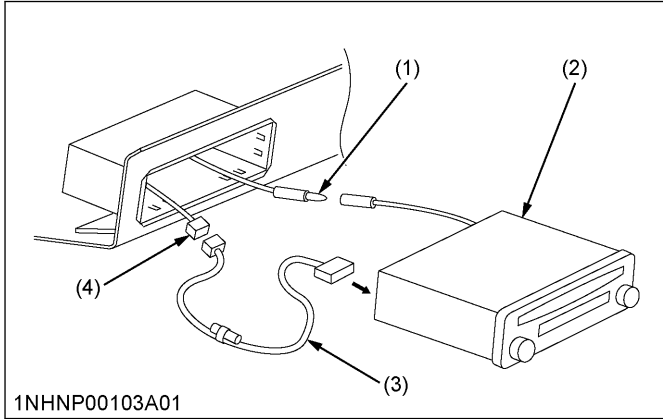


- (1) Antenna lead
- (2) CD player
- (3) Power connector
- (4) CAB wire harness

6. Insert the CD player into the mounting collar and push it in until "click" is heard. The CD player is secured to the mounting collar by the side tabs.

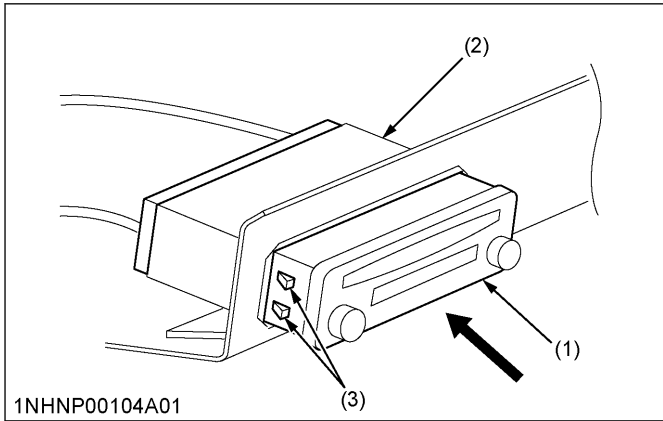

- (1) CD player
- (2) Mounting collar
- (3) Side tabs

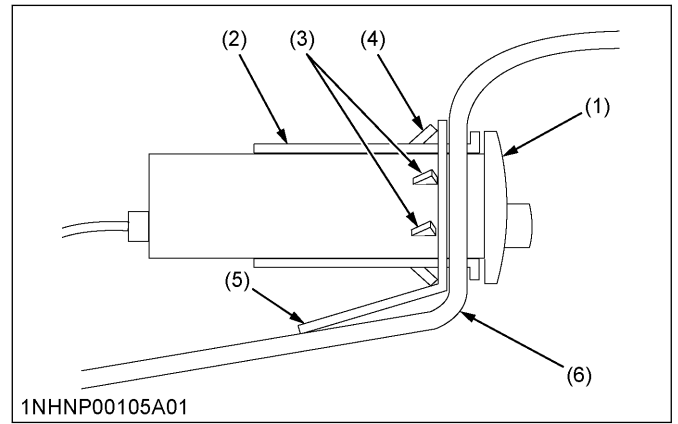

- (1) CD player
- (2) Mounting collar
- (3) Side tabs
- (4) Mounting tabs
- (5) Support plate
- (6) Inner roof

INDEX

Symbols

3-point hitch.....	68
lowering speed knob.....	73
starting.....	70
using.....	15

A

air cleaner primary element	
cleaning.....	108
replacing.....	118
air cleaner secondary element	
replacing.....	118
air conditioner	
cooling.....	90
defrosting or demisting.....	91
dehumidifying-heating.....	90
foot warming.....	90
head cooling.....	90
heating.....	90
air conditioner belt [CAB model]	
adjusting tension.....	113
air conditioner condenser [CAB model]	
checking.....	114
air conditioner condenser screen [CAB model]	
cleaning.....	102
air conditioner hose [CAB model]	
checking.....	121
air conditioner pipe and hose [CAB model]	
checking.....	121
air conditioner switch.....	89
air control vent.....	88
air outlet (front).....	88
airflow	
outline.....	88
antifreeze	
using.....	119

B

ballast.....	83
ballast (rear).....	83
battery	
charging.....	107
checking condition.....	106,107
battery cables	
checking.....	104
cleaning.....	104
battery storage	
directions.....	107
before operating the tractor.....	11
biodiesel fuel (BDF) B0-B20.....	97
block heater	
outline.....	44
blower switch (air conditioner).....	89

brake pedal	
adjusting.....	109
checking.....	103
brake pedals (right and left).....	52

C

CAB isolation cushion [CAB model]	
checking.....	121
clutch housing water	
draining.....	122
control panel	
allocation.....	89
coolant.....	95
changing.....	118
checking level.....	102
coolant temperature gauge	
function.....	58
cooling system	
changing coolant.....	118
flushing.....	118
cruise control lever [LX2620 CAB model only].....	56

D

daily check.....	39,100
checking brake pedal.....	103
checking coolant level.....	102
checking Easy Checker.....	103
checking engine oil level.....	101
checking fuel gauge.....	100
checking gauges.....	103
checking hazard light.....	104
checking headlight.....	104
checking meter.....	103
checking transmission fluid level.....	101
checking turn signal light.....	104
cleaning evacuator valve.....	102
cleaning grill.....	103
cleaning radiator screen.....	103
refueling.....	100
warning.....	100
differential lock.....	60
display mode	
changing.....	58
dome light.....	86
door	
locking and unlocking.....	85
opening.....	85
door [CAB model]	
lubricating points.....	125
drawbar.....	68,72
adjusting length.....	72
removing.....	71
dual tires.....	80

E

Easy Checker	
checking.....	103
Easy Checker indicators.....	57
electrical outlet.....	62
electrical wiring	
checking.....	104
cleaning.....	104
emergency exit.....	86
engine	
adjusting valve clearance.....	118
jump starting.....	45
operating in freezing conditions.....	44
overheating.....	58
starting.....	40
stopping.....	44
stopping immediately.....	57
troubleshooting.....	128
warming up.....	44
warming up at low temperature range.....	44
engine oil	
changing.....	111
checking level.....	101
engine oil filter	
replacing.....	110
engine side cover.....	100
engine start system	
checking.....	105
evacuator valve	
cleaning.....	102

F

fan belt tension	
adjusting.....	109
fluorinated greenhouse gases.....	125
foldable ROPS	
adjusting.....	48
foldable ROPS (if equipped)	
operating.....	46
foot controls for ROPS model.....	37
fresh air filter	
cleaning.....	113
fresh air filter [CAB model]	
removing.....	113
front air outlet.....	88
front axle gear case oil	
changing.....	117
front axle pivot (4WD)	
adjusting.....	117
front ballast	
outline.....	83
front end weights (option).....	83
front jack point.....	81
Front wheel drive lever.....	54
front wheels tread	
adjusting.....	80,82
front wiper.....	87

front work light.....	87
front-wheel drive (4WD)	
using effectively.....	54
fuel.....	95
fuel filter	
cleaning.....	108
replacing.....	116
fuel gauge.....	57
fuel injector nozzle tip	
cleaning.....	118
fuel lines	
checking.....	120
replacing.....	121,126
fuel system	
bleeding.....	121
fuse	
replacing.....	122

G

gauge	
checking.....	103
grease fittings	
lubricating.....	104
grill	
cleaning.....	103

H

hand controls.....	34
hand controls for ROPS model.....	37
hand throttle lever.....	54
hanger.....	92
hazard and turn signal indicator.....	51
hazard light	
checking.....	104
hazard light switch.....	51
headlamp [SU model only]	
replacing.....	123
headlight	
checking.....	104
headlight switch.....	50
hood	
closing.....	100
opening.....	99
horn button [CAB only].....	52
hourmeter.....	58
hydraulic block type outlet.....	74
hydraulic control lever.....	75
hydraulic control unit	
reference chart.....	79
hydraulic hose	
connections.....	75
hydraulic oil filter	
replacing.....	115

I

inflation pressure for tires.....	80
-----------------------------------	----

injection pump	
checking.....	120
inner air filter [CAB model]	
cleaning.....	113
instrument panel.....	36
intake air line	
checking.....	120
replacing.....	121,126

J

jack point (front).....	81
jack point (rear).....	81

L

LCD monitor message.....	66
LED light	
replacing.....	125
lever	
checking.....	104
lifting rod (right).....	71
light bulb	
replacing.....	123
liquid ballast in rear tires.....	83
loader/remote control valve lever.....	76
valve lock.....	76
lower link	
selecting holes.....	70
lower link (telescopic) [CAB model].....	72
lubricants.....	95

M

maintenance intervals.....	93
meter	
checking.....	103
mode switch (air conditioner).....	89

O

operator's seat.....	48
options	
list.....	130
overheating countermeasures.....	58

P

parking brake lever.....	52
pedal	
checking.....	104
position control.....	73
power steering	
directions for use.....	62
power steering line	
checking.....	112,121
powertrain	
troubleshooting.....	129
PTO	
operating.....	15,64

PTO clutch lever [LX2620].....	65
PTO clutch lever [LX2620SU].....	65
PTO select lever [except LX2620SU].....	64
PTO shaft cap.....	66
PTO shaft cover.....	66

R

radiator clamp	
checking.....	120
radiator hose	
checking.....	120,121
radiator hose (water pipes)	
replacing.....	126
radiator screen	
cleaning.....	103
range gear shift lever (L-M-H).....	53
rear ballast.....	83
rear defogger.....	91
rear hydraulic outlet (if equipped).....	76
rear jack point.....	81
rear wheels tread	
adjusting.....	81,82
rear window	
operation.....	85
rear window half-lock.....	85
rear wiper switch.....	87
rear work light.....	87
recirculation or fresh air selection lever.....	89
refrigerant (gas) amount	
checking.....	125
remote control valve.....	77
remote control valve coupler	
connecting.....	78
disconnecting.....	78
remote control valve lever.....	77
remote hydraulic control system (if equipped).....	77
room lamp [CAB model only]	
replacing.....	124
ROPS	
checking.....	104
folding.....	47
raising to upright position.....	47

S

safety	
CAB and ROPS.....	12
driving tractor on the road.....	14
general information.....	11
operating PTO.....	15
operating tractor on slopes.....	13
parking tractor.....	15
servicing tractor.....	16
starting to operate tractor.....	12
transporting tractor.....	62
using 3-point hitch.....	15
working tractor.....	13
safety labels.....	18

taking care.....	24
seat belt.....	50
checking.....	104
service intervals.....	93
specification table (implement).....	33
specification table for CAB model.....	29
specification table for ROPS model.....	27
speed control pedal.....	55
speed set lever [LX2620 ROPS model only].....	55
stationary PTO.....	66
support plate (option)	
installing.....	130
switches.....	34
T	
tachometer.....	58
tail light	
replacing.....	124
telescopic stabilizers.....	71
temperature control dial	
operation.....	89
tilt steering [except LX2620SU]	
adjusting.....	50
tire size and inflation pressure.....	80
toe-in	
adjusting.....	112
top link.....	71
selecting mounting holes.....	70
tractor	
before operating.....	11
boarding.....	46
changing lubricating oil for new tractor.....	46
driving on the road.....	14
leaving.....	46
operating on a road.....	61
operating on slopes.....	13
operating on slopes and rough terrain.....	61
operating techniques.....	60
parking.....	15,59
removing from storage.....	127
safety for children.....	13
scrapping procedure.....	26
servicing.....	16
starting.....	48
starting to operate.....	12
stopping.....	57
storing procedure.....	127
transporting safely.....	62
walk around inspection.....	100
working.....	13
tractor (new)	
operating.....	46
operating caution.....	46
transmission fluid	
changing.....	114
checking level.....	101
warming up at low temperature range.....	44

transmission oil filter	
replacing.....	111
travel speeds.....	31
turn signal light switch.....	51

W

warranty.....	26
washer liquid [CAB model]	
adding.....	125
washer switch.....	87
waste	
disposal.....	99
water pipe	
checking.....	121
wheel	
adjusting.....	80
checking bolt torque.....	106
wheels tread (front)	
adjusting.....	80
wheels tread (rear)	
adjusting.....	81
window [CAB model]	
lubricating points.....	125
wiper	
using in cold season.....	87
work light (front).....	87
work light (rear).....	87
work light switch.....	86