

Kubota L4600H (HST) Frequently Used Parts

**Zerex Anti-freeze
G05 Phosphate Free**

**Battery
77700-00450**

**Headlight Bulb (25/25W
Low-High beam)
TC422-30050**

**Tail/Hazard Light (23W)
TC422-91530**

HST
040 Oil Filter
Replace every 200 hrs

HHTA0-59900

Transmission
030 Hydraulic Oil Filter
Replace every 400 hrs

HHTA0-37710

Engine
010 Engine Oil Filter
Replace every 200 hrs

HH164-32430



Engine
050 Air Cleaner Outer
Clean every 100 hrs,
Replace every 1 year

TA040-93230

Engine
060 Air Cleaner Inner
Replace every 1 year

TA040-93220

Belt
070 Fan belt
Adjust every 100 hrs

TC403-97010

Engine
020 Fuel Filter
Clean every 100 hrs,
Replace every 400 hrs

15521-43160

FUJTL-258-10

L4600H	Fuel	Coolant	Engine Oil	Transmission	Front Axle Case
Capacities	12.7Gal 48L	6.9Qt 6.5L	8Qt 7.6L	10.6Gal 40L	6.9Qt 6.5L
Change interval		2000hrs or 2years	200hrs	400hrs	400hrs
Ref#		080	090	100	100-110

*see "Lubrications & Chemicals" page for a complete selection of oils.