

OPERATOR'S MANUAL

KUBOTA TRACTOR

MODELS BX1500 · BX1800 · BX2200



READ AND SAVE THIS MANUAL

Kubota

ABBREVIATION LIST

Abbreviations	Definitions
2WD	Two Wheel Drive
4WD	Four Wheel Drive
API	American Petroleum Institute
ASAE	American Society of Agricultural Engineers, USA
ASTM	American Society of Testing and Materials, USA
DIN	Deutsches Institut für Normung, GERMANY
DT	Dual Traction [4WD]
fpm	Feet Per Minute
GST	Glide Shift Transmission
Hi-Lo	High Speed-Low Speed
HST	Hydrostatic Transmission
m/s	Meters Per Second
PTO	Power Take Off
RH/LH	Right-hand and left-hand sides are determined by facing in the direction of forward travel
ROPS	Roll-Over Protective Structures
rpm	Revolutions Per Minute
r/s	Revolutions Per Second
SAE	Society of Automotive Engineers, USA
SMV	Slow Moving Vehicle




 

 




 







 











California Proposition 65

▲ WARNING ▲

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

UNIVERSAL SYMBOLS

As a guide to the operation of your tractor, various universal symbols have been utilized on the instruments and controls. The symbols are shown below with an indication of their meaning.

- | | | | |
|---|--|---|--------------------------------|
|  | Safety Alert Symbol |  | 3-Point Lowering Speed Control |
|  | Diesel Fuel |  | Remote Cylinder-Retract |
|  | Fuel-Level |  | Remote Cylinder-Extend |
|  | Hourmeter/Elapsed Operating Hours |  | Hazard Warning Lights |
|  | Engine Coolant-Temperature |  | Headlight |
|  | Diesel Preheat/Glow Plugs(Low Temperature Start Aid) |  | Four-Wheel Drive-On |
|  | Parking Brake |  | Four-Wheel Drive-Off |
|  | Battery Charging Condition |  | Fast |
|  | Engine Oil-Pressure |  | Slow |
|  | Turn Signal |  | Read Operator's Manual |
|  | Engine-Stop |  | Engine Speed Control |
|  | Diesel Preheat/Glow Plugs(Low Temperature Start Aid) | | |
|  | Engine-Run | | |
|  | Starter Control | | |
|  | Power Take-Off Clutch Control-Off Position | | |
|  | Power Take-Off Clutch Control-On Position | | |
|  | Differential Lock | | |
|  | Hydraulic Control-Raised Position | | |
|  | Hydraulic Control-Lowered Position | | |

FOREWORD

You are now the proud owner of a KUBOTA Tractor. This tractor is a product of KUBOTA quality engineering and manufacturing. It is made of fine materials and under a rigid quality control system. It will give you long, satisfactory service. To obtain the best use of your tractor, please read this manual carefully. It will help you become familiar with the operation of the tractor and contains many helpful hints about tractor maintenance. It is KUBOTA's policy to utilize as quickly as possible every advance in our research. The immediate use of new techniques in the manufacture of products may cause some small parts of this manual to be outdated. KUBOTA distributors and dealers will have the most up-to-date information. Please do not hesitate to consult with them.



SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.



DANGER : Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

IMPORTANT : Indicates that equipment or property damage could result if instructions are not followed.

NOTE : Gives helpful information.

CONTENTS

SAFE OPERATION	1
SERVICING OF TRACTOR.....	1
SPECIFICATIONS.....	2
SPECIFICATION TABLE	2
TRAVELING SPEEDS	3
IMPLEMENT LIMITATIONS	4
INSTRUMENT PANEL AND CONTROLS.....	6
PRE-OPERATION CHECK	8
DAILY CHECK	8
OPERATING THE ENGINE.....	9
STARTING THE ENGINE	9
Block Heater (Option)	11
STOPPING THE ENGINE.....	11
WARMING UP	12
Warm-up and Transmission Oil in the Low Temperature Range.....	12
JUMP STARTING	12
OPERATING THE TRACTOR	13
OPERATING NEW TRACTOR	13
Do not Operate the Tractor at Full Speed for the First 50 Hours.....	13
Changing Lubricating Oil for New Tractors.....	13
STARTING	13
Operator's Seat.....	13
Seat Belt	14
Head Light Switch.....	14
Hazard Light Switch.....	14
Turn Signal Light Switch.....	14
Brake Pedal	14
Range Gear Shift Lever (Hi-Lo).....	15
Front Wheel Drive Lever.....	15
Hand Throttle Lever	16
Parking Brake Pedal.....	16
Speed Control Pedal.....	16
STOPPING.....	17
Stopping.....	17
CHECK DURING DRIVING	17
Immediately Stop the Engine if:.....	17
Easy Checker(TM).....	17
Fuel Gauge[BX1800/2200]	17
Fuel Warning Lamp[BX1500].....	17
Coolant Temperature Gauge.....	18
Hourmeter.....	18
PARKING	18
Parking.....	18

CONTENTS

OPERATING TECHNIQUES	19
Differential Lock	19
Operating the Tractor on a Road	19
Operating on a Slopes and Rough Terrain	20
Directions for Use of Power Steering	20
PTO	21
PTO OPERATION	21
PTO Select Lever	21
PTO Clutch Lever	22
PTO Shaft Cover and Shaft Cap	22
Stationary PTO	23
PTO Drive Shaft	23
THREE-POINT HITCH & DRAWBAR	24
3 -POINT HITCH	25
Attaching and detaching implements	25
Lifting Rod (Right)	25
Top Link	25
Check Chains	25
HITCH	25
HYDRAULIC UNIT	26
3-POINT HITCH CONTROL SYSTEM	26
Hydraulic Control	26
Implement Lowering Limit	26
3-point Hitch Lowering Speed	27
AUXILIARY HYDRAULICS	27
Hydraulic Outlet	27
MOWER LIFT LINKAGE SYSTEM	28
Cutting Height Control Dial	28
Hydraulic Control Unit Use Reference Chart	29
TIRES, WHEELS AND BALLAST	30
TIRES	30
Inflation Pressure	30
WHEEL TREAD	30
Front Wheels	30
Rear Wheels	31
BALLAST	32
Front Ballast	32
Rear Ballast	32
MAINTENANCE	33
SERVICE INTERVALS	33
LUBRICANTS	35
PERIODIC SERVICE	36
HOW TO OPEN THE HOOD	36
Hood	36
Engine Cover	36
DAILY CHECK	37
Walk Around Inspection	37
Checking and Refueling	37

Checking Engine Oil Level.....	38
Checking Transmission Fluid Level.....	38
Checking Coolant Level.....	39
Cleaning Panel and Radiator Screen	39
Checking Brake Pedal	40
Checking Gauges, Meter and Easy Checker.....	40
Checking Head Light, Hazard Light etc.....	40
Checking and Cleaning of Electrical Wiring and Battery Cables	40
Checking Seat Belt and ROPS.....	40
EVERY 50 HOURS	40
Checking Engine Start System.....	40
Lubricating Grease Fittings.....	41
Checking Wheel Bolt Torque.....	42
EVERY 100 HOURS	42
Battery	42
Changing Engine Oil.....	44
Cleaning Air Cleaner Element	45
Checking Fuel Lines and Fuel Filter	45
Adjusting Fan Belt Tension.....	46
Adjusting HST Neutral Spring (for Speed Control Pedal).....	46
Adjusting Brake Pedal	47
EVERY 200 HOURS	48
Replacing Engine Oil Filter	48
Checking Radiator Hoses and Clamps.....	48
Checking Intake Air Line.....	49
Adjusting Toe-in.....	49
Checking Power Steering Line	50
EVERY 300 HOURS	50
Changing Transmission Fluid	50
Replacing Transmission Oil Filter.....	51
Changing Front Axle Case Oil	52
EVERY 400 HOURS	52
Adjusting Front Axle Pivot.....	52
EVERY 500 HOURS	52
Replacing Fuel Filter Element.....	52
EVERY 800 HOURS	52
Adjusting Engine Valve Clearance	52
EVERY 1500 HOURS	53
Checking Fuel Injection Nozzle Injection Pressure.....	53
EVERY 3000 HOURS	53
Checking Injection Pump.....	53
EVERY 1 YEAR	53
Replacing Air Cleaner Element.....	53
EVERY 2 YEAR	53
Flush Cooling System and Changing Coolant.....	53
Anti-Freeze	54
Replacing Radiator Hose (Water pipes)	54
Replacing Power Steering Hose.....	54
Replacing Fuel Hose	54
Replacing Intake Air Line.....	54
SERVICE AS REQUIRED.....	54

CONTENTS

Bleeding Fuel System.....	54
Replacing Fuse.....	55
Replacing Light Bulb.....	55
STORAGE	56
TRACTOR STORAGE	56
REMOVING THE TRACTOR FROM STORAGE.....	56
TROUBLESHOOTING.....	57
ENGINE TROUBLESHOOTING	57
OPTIONS.....	58



SAFE OPERATION


Careful operation is your best insurance against an accident.

Read and understand this manual carefully before operating the tractor.

All operators, no matter how much experience they may have, should read this and other related manuals before operating the tractor or any implement attached to it. It is the owner's obligation to instruct all operators in safe operation.

1. BEFORE OPERATING THE TRACTOR

1. Know your equipment and its limitations. Read this entire manual before attempting to start and operate the tractor.
2. Pay special attention to the danger, warning and caution labels on the tractor.
3. KUBOTA recommends the use of a CAB or Roll Over Protective Structures (ROPS) and seat belt in almost all applications. This combination will reduce the risk of serious injury or death, should the tractor be upset. If the CAB or ROPS is loosened or removed for any reason, make sure that all parts are reinstalled correctly before operating the tractor. Never modify or repair a CAB or ROPS because welding, bending, drilling, grinding, or cutting may weaken the structure. A damaged CAB or ROPS structure must be replaced, not repaired or revised. If any structural member of the CAB or ROPS is damaged, replace the entire structure at your local KUBOTA Dealer.

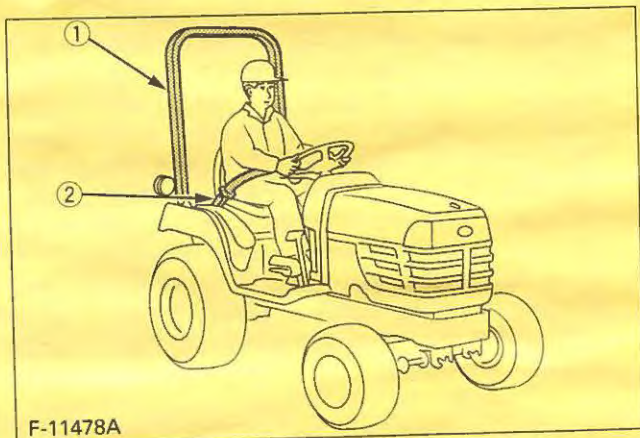

F-11478A

- (1) ROPS
(2) Seat belt

4. Always use the seat belt if the tractor has a CAB or ROPS. Do not use the seat belt if there is no CAB or ROPS. Check the seat belt regularly and replace if frayed or damaged
5. Do not operate tractor or any implement attached to it while under the influence of alcohol, medication, controlled substances or while fatigued.
6. Carefully check the vicinity before operating tractor or any implement attached to it. Check for overhead clearance which may interfere with a CAB or ROPS. Do not allow any bystanders around or near tractor during operation.
7. Before allowing other people to use your tractor, explain how to operate and have them read this manual before operation.
8. Never wear loose, torn, or bulky clothing around tractor. It may catch on moving parts or controls, leading to the risk of an accident. Use additional safety items, e.g. hard hat, safety boots or shoes, eye and hearing protection, gloves, etc., as appropriate or required.
9. Do not allow passengers to ride on any part of the tractor at anytime. The operator must remain in the tractor seat during operation.
10. Check brakes, and other mechanical parts for improper adjustment and wear. Replace worn or damaged parts promptly. Check the tightness of all nuts and bolts regularly. (For further details, see "MAINTENANCE" section.)
11. Keep your tractor clean. Dirt, grease, and trash build up may contribute to fires and lead to personal injury.
12. Use only implements meeting the specifications listed under "IMPLEMENT LIMITATIONS" in this manual or implements approved by KUBOTA.
13. Use proper weights on the front or rear of the tractor to reduce the risk of upsets. When using the front loader, put an implement or ballast on the 3-point hitch to improve stability. Follow the safe operating procedures specified in the implement or attachment manual.
14. Do not modify the tractor. Unauthorized modification may affect the function of the tractor, which may result in personal injury.


2. OPERATING THE TRACTOR

◆ Starting

1. Always sit in the operator's seat when starting engine or operating levers or controls.
2. Before starting the engine, make sure that all levers (including auxiliary control levers) are in their neutral positions, that the parking brake is engaged, and the Power Take-Off (PTO) is disengaged or "OFF".
Fasten the seat belt if the tractor has a CAB, a fixed ROPS or a foldable ROPS in the upright and locked position.
3. Do not start engine by shorting across starter terminals or bypassing the safety start switch. Machine may start in gear and move if normal starting circuitry is bypassed.
4. Do not operate or idle engine in a non-ventilated area. Carbon monoxide gas is colorless, odorless, and deadly.
5. Check before each use that operator presence controls are functioning correctly. Test safety systems. (See "EVERY 50 HOURS, Checking Engine Start System" in "PERIODIC SERVICE" section)
Do not operate unless they are functioning correctly.

◆ Working

1. Pull only from the hitch. Never hitch to axle housing or any other point except the hitch; such arrangements will increase the risk of serious personal injury or death due to a tractor upset.

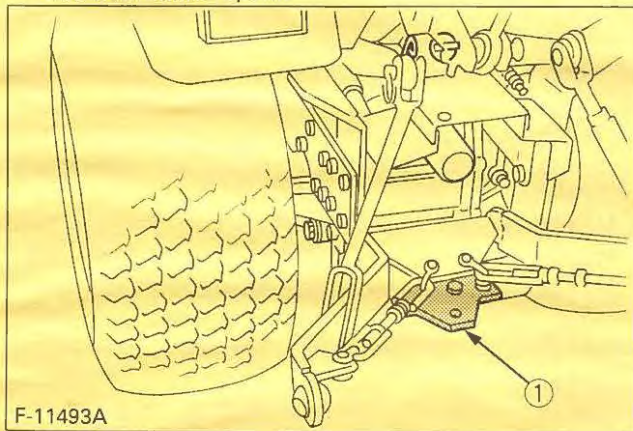

(1) Hitch

2. Keep all shields and guards in place. Replace any that are missing or damaged.
3. Avoid sudden starts. To avoid upsets, slow down when turning, on uneven ground, and before stopping.
4. The tractor cannot turn with the differential locked and attempting to do so could be dangerous.
5. Do not operate near ditches, holes, embankments, or other ground surface features which may collapse under the tractor's weight. The risk of tractor upset is even higher when the ground is loose or wet. Tall grass can hide obstacles, walk the area first to be sure.

6. Watch where you are going at all times. Watch for and avoid obstacles. Be alert at row ends, near trees, and other obstructions.
7. When working in groups, always let the others know what you are going to do before you do it.
8. Never try to get on or off a moving tractor.

◆ Safety for children

Tragedy can occur if the operator is not alert to the presence of children. Children generally are attracted to machines and the work they do.

1. Never assume that children will remain where you last saw them.
2. Keep children out of the work area and under the watchful eye of another responsible adult.
3. Be alert and shut your machine down if children enter the work area.
4. Never carry children on your machine. There is no safe place for them to ride. They may fall off and be run over or interfere with your control of the machine.
5. Never allow children to operate the machine even under adult supervision.
6. Never allow children to play on the machine or on the implement.
7. Use extra caution when backing up. Look behind and down to make sure area is clear before moving.
8. When parking your machine if at all possible park on a firm, flat and level surface; if not, park across a slope. Set the parking brake(s), lower the implements to the ground, remove the key from the ignition and lock the cab door (if equipped) and chock the wheels.


◆ Operating on slopes

Slopes are major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. All slopes require extra caution.

1. To avoid upsets, always back up steep slopes. If you cannot back up the slope or if you feel uneasy on it, do not operate on it. Stay off slopes too steep for safe operation.
2. Driving forward out of a ditch, mired condition or up a steep slope increases the risk of a tractor to be upset backward. Always back out of these situations. Extra caution is required with four-wheel drive models because their increased traction can give the operator false confidence in the tractor's ability to climb slopes.
3. Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction.
4. Avoid disengaging the changing gears speed when climbing or going down a slope. If on a slope disengaging the changing gears to neutral could cause loss of control.


◆ Driving the tractor on the road

5. Check the front wheel engagement. The braking characteristics are different between two and four wheel drive. Be aware of the difference and use carefully.
6. Always slow the tractor down before turning. Turning at high speed may tip the tractor over.
7. Make sure that the Slow Moving Vehicle (SMV) sign is clean and visible. Use hazard lights and turn signals as required.

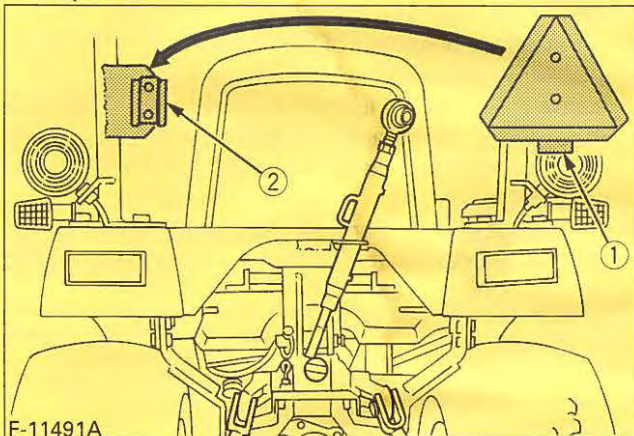

- (1) SMV emblem
(2) Bracket


8. Observe all local traffic and safety regulations.
9. Turn the headlights on.
10. Drive at speeds that allow you to maintain control at all times.
11. Do not apply the differential lock while traveling at road speeds. The tractor may run out of control.
12. Avoid sudden motions of the steering wheel as they can lead to a dangerous loss of stability. The risk is especially great when the tractor is traveling at road speeds.
13. Do not operate an implement while the tractor is on the road. Lock the 3-point hitch in the raised position.
14. When towing other equipment, use a safety chain and place an SMV emblem on it as well.

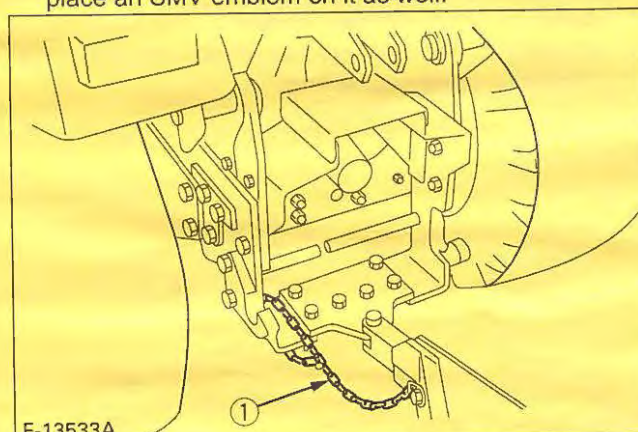

- (1) Safety chain

3. PARKING THE TRACTOR


1. Disengage the PTO, lower all implements to the ground, place all control levers in their neutral positions, set the parking brake, stop the engine, and remove the key.

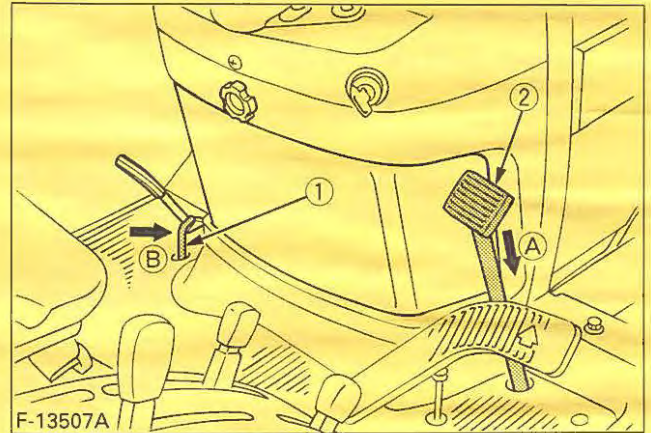

2. Make sure that the tractor has come to a complete stop before dismounting.
3. Avoid parking on steep slopes, if possible park on flat ground, if not, park across a slope, always with attachment on the ground.

4. OPERATING THE PTO

1. Wait until all moving components have completely stopped before getting off the tractor, connecting, disconnecting, adjusting, cleaning, or servicing any PTO driven equipment.
2. Keep the PTO shaft cover in place at all times. Replace the PTO shaft cap when the shaft is not in use.

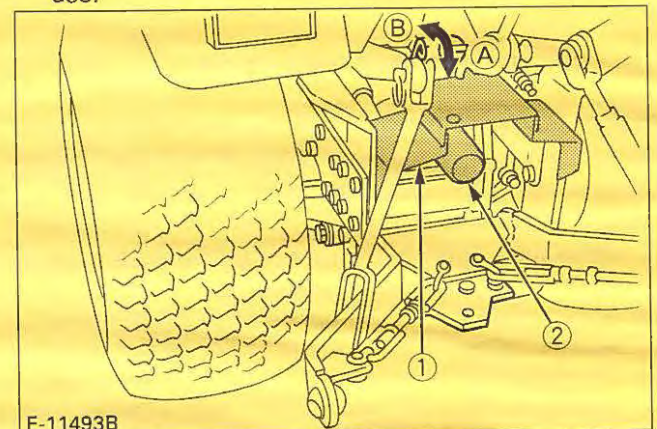


- (1) PTO Shaft cover
(2) PTO Shaft cap

- (A) "NORMAL POSITION"
(B) "RAISED POSITION"

3. Before installing or using PTO driven equipment, read the manufacturer's manual and review the safety labels attached to the equipment.
4. When operating stationary PTO driven equipment, always apply the tractor parking brake and place chocks behind and in front of the rear wheels. Stay clear of all rotating parts. Never step over rotating parts.

5. USING 3-POINT HITCH

1. Use the 3-point hitch only with equipment designed for 3-point hitch usage.
2. When using a 3-point hitch mounted implement, be sure to install the proper counterbalance weight on the front of the tractor.
3. When transporting on the road, set the implement lowering speed knob in the "LOCK" position to hold the implement in the raised position.

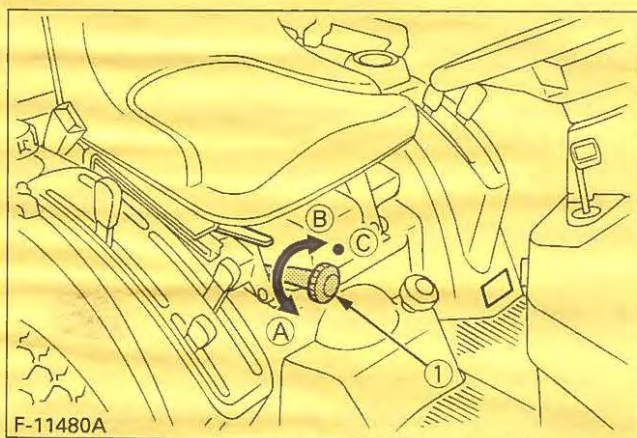


(1) 3-point hitch lowering speed knob
 (A) "FAST"
 (B) "SLOW"
 (C) "LOCK"

6. SERVICING THE TRACTOR

Before servicing the tractor, park it on a firm, flat and level surface, set the parking brake, lower all implements to the ground, place the gear shift lever in neutral, stop the engine and remove the key.

1. Allow the tractor time to cool off before working on or near the engine, muffler, radiator, etc.
2. Always stop the engine before refueling. Avoid spills and overfilling.
3. Do not smoke when working around battery or when refueling. Keep all sparks and flames away from battery and fuel tank. The battery presents an explosive hazard, because it gives off hydrogen and oxygen especially when recharging.
4. Before "jump starting" a dead battery, read and follow all of the instructions. (See "JUMP STARTING" in "OPERATING THE ENGINE" section)

5. Keep first aid kit and fire extinguisher handy at all times.
6. Do not remove radiator cap while coolant is hot. When cool, slowly rotate cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely. If the tractor has a coolant recovery tank, add coolant or water to the tank, not the radiator. (See "CHECKING COOLANT LEVEL" in "MAINTENANCE" section)
7. Disconnect the battery's ground cable before working on or near electric components.
8. To avoid the possibility of battery explosion, do not use or charge the refillable type battery if the fluid level is below the LOWER (lower limit level) mark. Check the fluid level regularly and add distilled water as required so that the fluid level between the UPPER and LOWER levels.
9. To avoid sparks from an accidental short circuit, always disconnect the battery's ground cable (-) first and reconnect it last.

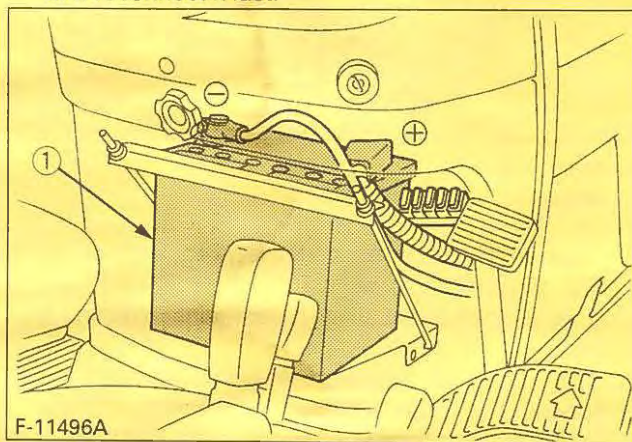


(1) Battery

10. Do not attempt to mount a tire on a rim. This should be done by a qualified person with the proper equipment.
11. Do not work under any hydraulically supported devices. They can settle, suddenly leak down, or be accidentally lowered. If necessary to work under tractor or any machine elements for servicing or adjustment, securely support them with stands or suitable blocking beforehand.

7. DANGER, WARNING AND CAUTION LABELS [BX1500]

(1) Part No. K2511-6557-1

 <p>K2511-65571</p>	<p>! WARNING</p> <p>TO AVOID PERSONAL INJURY OR DEATH FROM ROLL-OVER:</p>	<p>1. Kubota recommends the use of a Roll-Over Protective Structures (ROPS) and seat belt in almost all applications.</p> <p>2. Remove the ROPS only when it substantially interferes with operation or itself presents a safety risk. (Examples include work in orchards and vineyards.)</p>	<p>ALWAYS REINSTALL IT BEFORE USING THE TRACTOR IN OTHER APPLICATIONS.</p> <p>3. Never use just the seat belt or just the ROPS. They must be used together. For further details, consult your Operator's Manual or your local dealer.</p>
--	--	---	---

(2) Part No. K2561-6548-2

! CAUTION

TO AVOID PERSONAL INJURY:

1. Read and understand the operator's manual before operation.
2. Before starting the engine, make sure that everyone is at a safe distance from the tractor and that the PTO is OFF.
3. Do not allow passengers on the tractor at any time.
4. Before allowing other people to use the tractor, have them read the operator's manual.
5. Check the tightness of all nuts and bolts regularly.
6. Keep all shields in place and stay away from all moving parts.
7. Slow down for turns, or rough roads.
8. On public roads use SMV emblem and hazard lights, if required by local traffic and safety regulations.
9. Pull only from the hitch.
10. Before dismounting, lower the implement to the ground, set the parking brake, stop the engine and remove the key.
11. Securely support tractor and implements before working underneath.

(3) Part No. K2561-6556-1

! WARNING

TO AVOID PERSONAL INJURY:


1. Attach pulled or towed loads to the hitch only.
2. Use the 3-point hitch only with equipment designed for 3-point hitch usage.

(4) Part No. K2561-6549-1

Diesel fuel No fire only



(5) Part No. K2561-6554-1

	<p>! WARNING</p> <p>TO AVOID PERSONAL INJURY:</p> <ol style="list-style-type: none"> 1. Keep PTO shield in place at all times. 2. Do not operate the PTO at speeds faster than the speed recommended by the implement manufacturer. 3. For trailing PTO-driven implements, set hitch at towing position. (see operator's manual)
---	--

(6) Part No. K2561-6555-1

! CAUTION

TO AVOID PERSONAL INJURY FROM SEPARATION:




DO NOT EXTEND LIFT ROD BEYOND THE EDGE OF FLAT FACE ON THE THREADED ROD.

(7) Part No. 6C140-4746-1

! WARNING

TO AVOID PERSONAL INJURY:

Do not modify or repair a ROPS because welding, grinding, drilling or cutting any portion may weaken the structure.

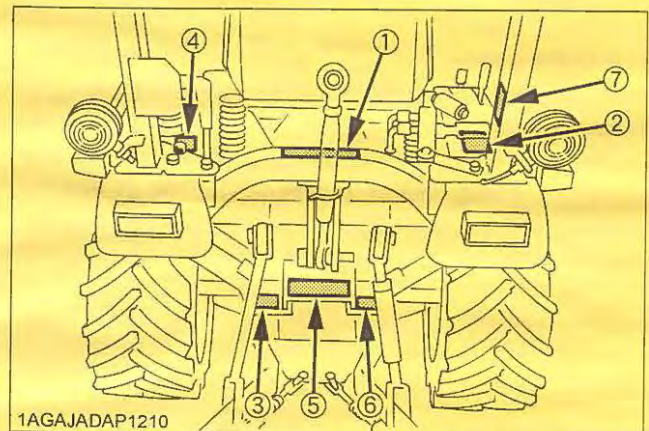


12. Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure shown in the operator's manual.



F-9382

13. Securely support the tractor when either changing wheels or adjusting the wheel tread width.
14. Make sure that wheel bolts have been tightened to the specified torque.
15. Escaping hydraulic fluid under pressure has sufficient force to penetrate skin, causing serious personal injury. Before disconnecting hydraulic lines, be sure to release all residual pressure. Before applying pressure to the hydraulic system, make sure that all connections are tight and that all lines, pipes, and hoses are free of damage.

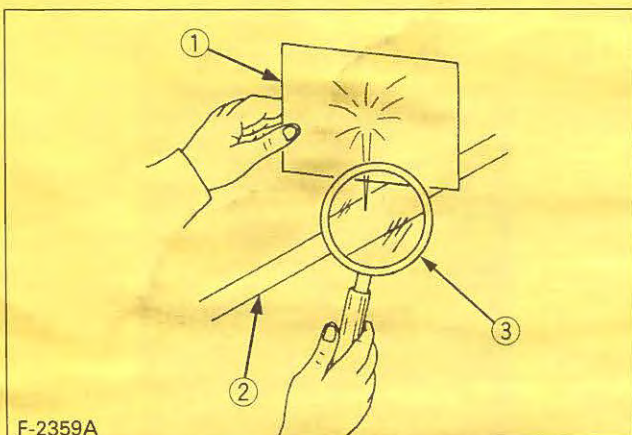

F-2359A

- (1) Cardboard
 (2) Hydraulic line
 (3) Magnifying glass

Fluid escaping from pinholes may be invisible. Do not use hands to search for suspected leaks; use a piece of cardboard or wood. Use of safety goggles or other eye protection is also highly recommended. If injured by escaping fluid, see a medical doctor at once. This fluid will produce gangrene or severe allergic reaction.

7. DANGER, WARNING AND CAUTION LABELS [BX1800, 2200]

(1) Part No. K2561-6557-1

⚠ WARNING**TO AVOID PERSONAL INJURY OR DEATH FROM ROLL-OVER:**

1. Kubota recommends the use of a Roll-Over Protective Structures (ROPS) and seat belt in almost all applications.
2. Remove the ROPS only when it substantially interferes with operation or itself presents a safety risk. (Examples include work in orchards and vineyards.) ALWAYS REINSTALL IT BEFORE USING THE TRACTOR IN OTHER APPLICATIONS.
3. Never use just the seat belt or just the ROPS. They must be used together. For further details, consult your Operator's Manual or your local dealer.

(2) Part No. K2561-6548-2

⚠ CAUTION**TO AVOID PERSONAL INJURY:**

1. Read and understand the operator's manual before operation.
2. Before starting the engine, make sure that everyone is at a safe distance from the tractor and that the PTO is OFF.
3. Do not allow passengers on the tractor at any time.
4. Before allowing other people to use the tractor, have them read the operator's manual.
5. Check the tightness of all nuts and bolts regularly.
6. Keep all shields in place and stay away from all moving parts.
7. Slow down for turns, or rough roads.
8. On public roads use SMV emblem and hazard lights, if required by local traffic and safety regulations.
9. Pull only from the hitch.
10. Before dismounting, lower the implement to the ground, set the parking brake, stop the engine and remove the key.
11. Securely support tractor and implements before working underneath.

(3) Part No. K2561-6556-1

⚠ WARNING**TO AVOID PERSONAL INJURY:**

1. Attach pulled or towed loads to the hitch only.
2. Use the 3-point hitch only with equipment designed for 3-point hitch usage.

(4) Part No. K2561-6552-2

Do not put hands under the rear fender.

⚠ WARNING**TO AVOID PERSONAL INJURY: KEEP HANDS AWAY FROM PINCH POINTS OF LIFT ARMS.**

(6) Part No. K2561-6554-1

⚠ WARNING**TO AVOID PERSONAL INJURY:**

1. Keep PTO shield in place at all times.
2. Do not operate the PTO at speeds faster than the speed recommended by the implement manufacturer.
3. For trailing PTO-driven implements, set hitch at towing position. (see operator's manual)




(5) Part No. K2561-6549-1

Diesel fuel No fire only




(7) Part No. K2561-6555-1

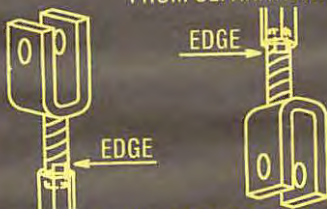⚠ CAUTION**TO AVOID PERSONAL INJURY FROM SEPARATION:****DO NOT EXTEND LIFT ROD BEYOND THE EDGE OF FLAT FACE ON THE THREADED ROD.**

(8) Part No. 6C140-4746-1

⚠ WARNING**TO AVOID PERSONAL INJURY:**

Do not modify or repair a ROPS because welding, grinding, drilling or cutting any portion may weaken the structure.

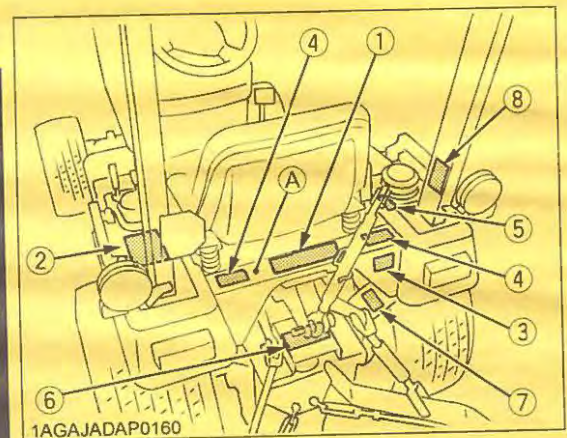

1AGA JADAP0160

(A) Rear cover

(1) Part No. K2561-6541-1



⚠ DANGER

TO AVOID POSSIBLE INJURY OR DEATH FROM A MACHINE RUNAWAY:

1. Do not start engine by shorting across starter terminals or bypassing the safety start switch. Machine may start in gear and move if normal starting circuitry is bypassed.
2. Start engine only from operator's seat with transmission and PTO OFF. Never start engine while standing on the ground.

(2) Part No. K2561-6543-1
Stay clear of engine fan and belt.



(3) Part No. K2561-6542-1




Do not touch hot surface like muffler, etc.



(4) Part No. K2561-6566-1

⚠ WARNING


TO AVOID PERSONAL INJURY DUE TO LOSS OF STEERING CONTROL:
Do not depress the DIFFERENTIAL LOCK PEDAL at high speed.

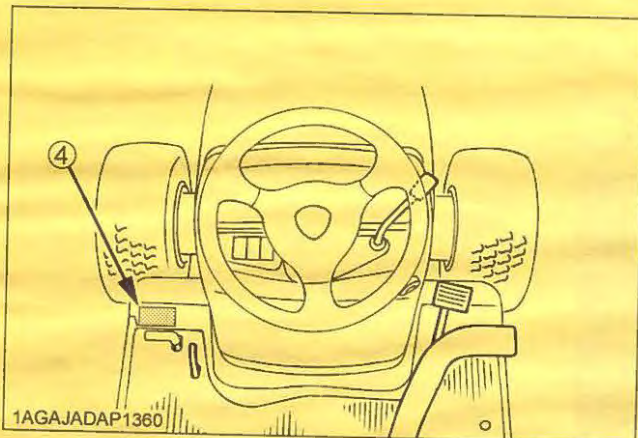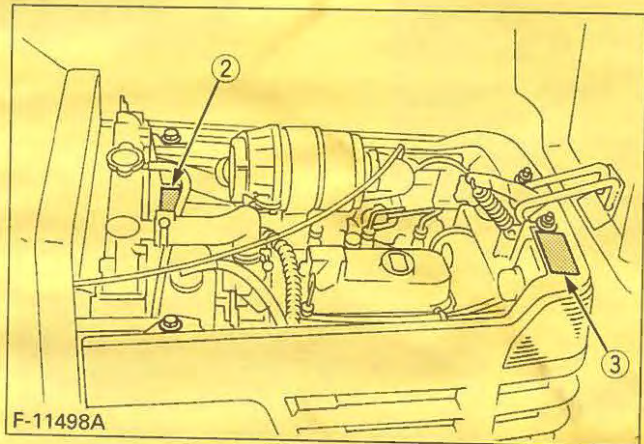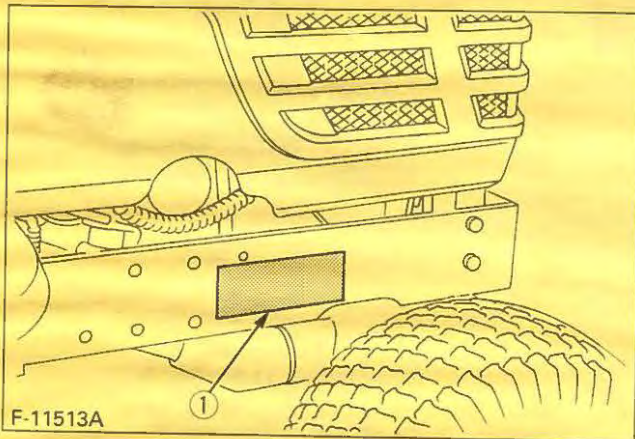

(1) Part No. K2561-6115-1



(2) Part No. K2561-6116-1

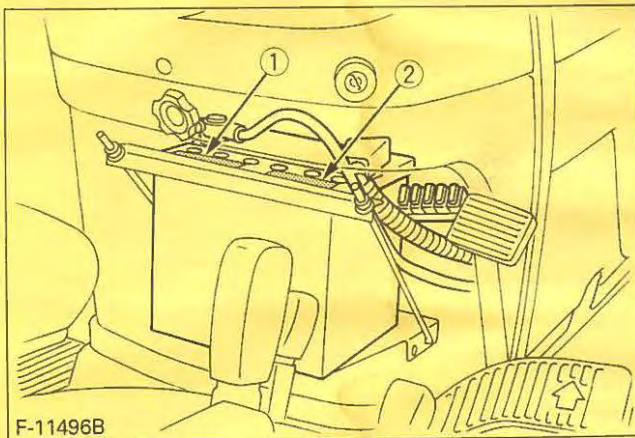

F-11496B

8. CARE OF DANGER, WARNING AND CAUTION LABELS

1. Keep danger, warning and caution labels clean and free from obstructing material.
2. Clean danger, warning and caution labels with soap and water, dry with a soft cloth.
3. Replace damaged or missing danger, warning and caution labels with new labels from your local KUBOTA Dealer.
4. If a component with danger, warning and caution label(s) affixed is replaced with new part, make sure new label(s) is(are) attached in the same location(s) as the replaced component.
5. Mount new danger, warning and caution labels by applying on a clean dry surface and pressing any bubbles to outside edge.

SERVICING OF TRACTOR





Your dealer is interested in your new tractor and has the desire to help you get the most value from it. After reading this manual thoroughly, you will find that you can do some of the regular maintenance yourself.

However, when in need of parts or major service, be sure to see your KUBOTA Dealer.

For service, contact the KUBOTA Dealership from which you purchased your tractor or your local KUBOTA Dealer. When in need of parts, be prepared to give your dealer both the tractor and engine serial numbers.

Locate the serial numbers now and record them in the space provided.

	Type	Serial No.
Tractor		
Engine		
Date of Purchase		
Name of Dealer		
(To be filled in by purchaser)		

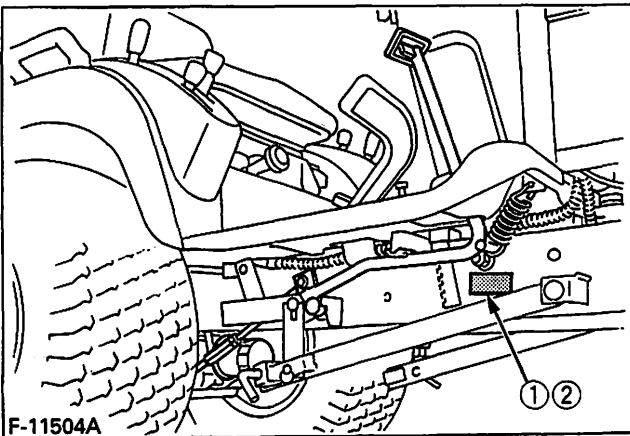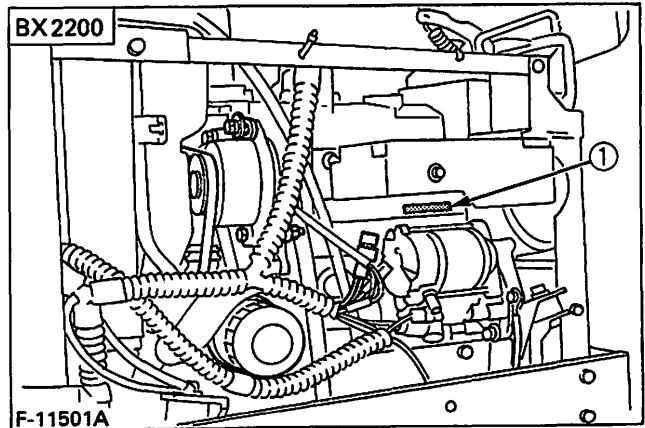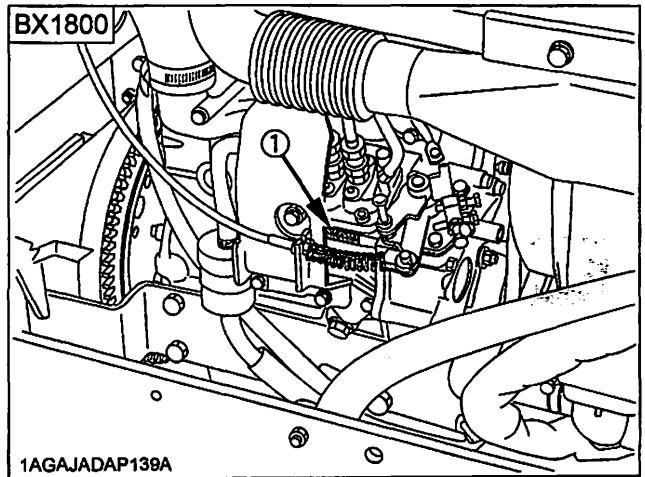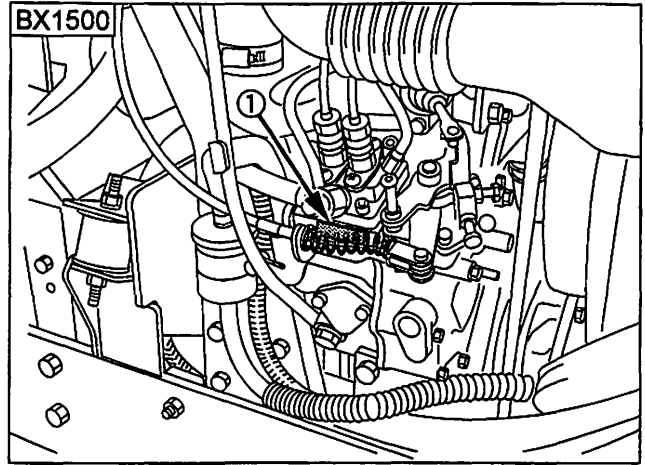

(1) Tractor identification plate
 (2) Tractor serial number

(1) Engine serial number

SPECIFICATIONS

SPECIFICATION TABLE

Model		BX1500	BX1800	BX2200		
PTO power		kW (HP)	7.9 (10.6)	10.2 (13.7)*	12.4 (16.7)*	
Engine	Maker	KUBOTA				
	Model	Z602-E	D722-E-BX	D905-E-BX		
	Type	Indirect injection vertical, water-cooled, 4-cycle diesel				
	Number of cylinders	2	3			
	Bore and stroke	mm (in.)	72x73.6 (2.83x2.90)	67x68 (2.64x2.68)	72x73.6 (2.83x2.90)	
	Total displacement	cm ³ (cu. in.)	599 (36.6)	719 (43.9)	898 (54.8)	
	Engine gross power	kW (HP)	11.2 (15.0)	13.4 (18.0)	16.4 (22.0)	
	Rated revolution	rpm	3200			
	Maximum torque	N-m (ft-lbs.)	35 (25.8)	41 (30.6)	55 (40.5)	
	Battery		12V,RC:62min,CCA:435A	12V,RC: 62min,CCA:435A 12V,RC:111min,CCA:490A	12V,RC:80min,CCA:535A 12V,RC:90min,CCA:550A	
	Fuel		Diesel fuel No.2[above -10 °C (14 °F)]Diesel fuel No.1[below -10 °C (14 °F)]			
Capacities	Fuel tank	L (U.S.gals.)	17 (4.5)	21 (5.5)		
	Engine crankcase (with filter)	L (U.S.qts.)	1.9 (2.0)		2.5 (2.6)	
	Engine coolant	L (U.S.qts.)	2.5 (2.6)		3.1 (3.3)	
	Recovery tank	L (U.S.qts.)	0.4 (0.4)			
	Transmission case	L (U.S.gals.)	10.1 (2.7)			
Dimensions	Overall length (without 3p)	mm (in.)	1905 (75.0)	2025 (79.7)		
	Overall length (with 3p)	mm	2225 (87.6)	2340 (92.1)		
	Overall width (min. tread)	mm (in.)	1145 (45.1)			
	Overall height	(with ROPS)	mm (in.)	1765 (69.5)	1800 (70.9)	
		(Top of steering wheel)	mm (in.)	1175 (46.3)	1200 (47.2)	
	Wheel base	mm (in.)	1340 (52.8)	1400 (55.1)		
	Min. ground clearance	mm	142 (5.6)	170 (6.7)		
	Tread	Front	mm (in.)	880 (34.6)	910 (35.8)	
Rear		mm	820 (32.2)			
Weight (with ROPS)	kg (lbs.)	550 (1213)	570 (1255)	590 (1300)		
Clutch		N / A				
Traveling system	Tire	Front	16x7.50-8 (Turf)	18x8.50-8 (Turf)		
		Rear	24x12.00-12 (Turf)	26x12.00-12 (Turf)		
	Steering		Hydrostatic type power steering			
	Transmission		Main:Hydraulic transmission, High-Low gear shift (2 forward, 2 reverse)			
	Brake		Wet disk type			
	Min. turning radius	m (feet)	2.18 (7.15)	2.3 (7.5)		
Hydraulic unit	Hydraulic control system		Directional control, auto-return lever system			
	Pump capacity	L/min (gals/min)	21.0 (5.5)			
	Three point hitch		SAE Category 1			
	Max. lift force	At lift points	N (lbs.)	5390 (1210)**		
24in. behind lift points		N (lbs.)	3040 (680)**			

Model		BX1500	BX1800	BX2200
PTO	Rear PTO	SAE 1-3/8,6 splines		
		Revolution	rpm	1 speed (540 rpm at 3068 engine rpm)
	MID-PTO (if equipped)	USA No.5(KUBOTA 10-tooth) involute spline		
		Revolution	rpm	1 speed (2500 rpm at 3125 engine rpm)

NOTE : * Manufacturer's estimate The company reserve the right to change the specifications without notice.
 **See and check IMPLEMENT LIMITATIONS.

TRAVELING SPEEDS

(At rated engine rpm)

Model		BX1500		BX1800,BX2200	
Tire size (Rear)		24 x 12.00 - 12		26 x 12.00 - 12	
	Range gear shift lever	km / h	mph	km / h	mph
Forward	Low	0 to 5.5	0 to 3.4	0 to 5.9	0 to 3.7
	High	0 to 12.0	0 to 7.5	0 to 13.0	0 to 8.1
Reverse	Low	0 to 4.5	0 to 2.8	0 to 4.5	0 to 2.8
	High	0 to 10.0	0 to 6.2	0 to 10.0	0 to 6.2

The company reserves the right to change the specification without notice.


IMPLEMENT LIMITATIONS

The KUBOTA Tractor has been thoroughly tested for proper performance with implements sold or approved by KUBOTA. Use with implements which are not sold or approved by KUBOTA and which exceed the maximum specifications listed below, or which are otherwise unfit for use with the KUBOTA Tractor may result in malfunctions or failures of the tractor, damage to other property and injury to the operator or others. [Any malfunctions or failures of the tractor resulting from use with improper implements are not covered by the warranty.]

	Tread (max. width)		Lower link end max. loading weight W_0
	Front	Rear	
BX1500	880 mm (34.6 in.)	820 mm (32.2 in.)	550 kg (1210 lbs.)
BX1800	910 mm (35.8 in.)		
BX2200			

Actual figures			
	Implement weight W_1 and / or size	Max. Hitch Load W_2	Trailer loading weight W_3 Max. capacity
BX1500	As in the following list (Shown on the next page)	250 kg (550 lbs.)	800 kg (1765 lbs.)
BX1800			
BX2200			

Lower-link end max. loading weight.....The max. allowable load which can be put on the lower link end : W_0
 Implement weight.....The implement's weight which can be put on the lower link : W_1
 Max. drawbar load..... W_2
 Trailer loading weightThe max. loading weight for trailer (without trailer's weight) : W_3

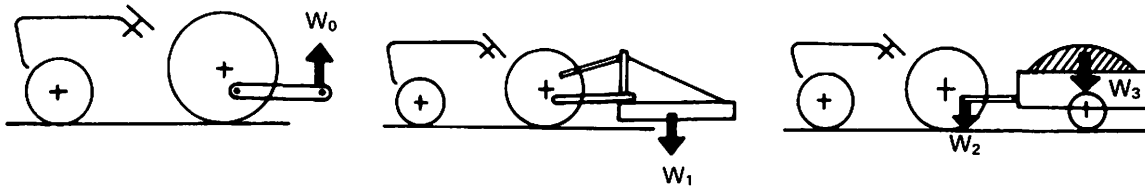

NOTE :
 ● Implement size may vary depending on soil operating conditions.


Implement		Remarks		BX1500	BX1800	BX2200
Mower	Mid-mount	Max. cutting width	cm(in.)	137 (54)	152 (60)	152 (60)
		Max. weight	kg(lbs.)	100 (220)	140 (300)	140 (300)
	Rotary-Cutter (1 Blade)	Max. cutting width	cm(in.)	107 (42)	107 (42)	107 (42)
		Max. weight	kg(lbs.)	140 (300)	140 (300)	140 (300)
	Rear-mount (2 or 3 Blade)	Max. cutting width	cm(in.)	122 (48)	152 (60)	152 (60)
		Max. weight	kg(lbs.)	115 (250)	140 (300)	140 (300)
Flail-mower	Max. cutting width	cm(in.)	107 (42)	107 (42)	107 (42)	
Sickle bar	Max. cutting width	cm(in.)	122 (48)	122 (48)	122 (48)	
Rotary tiller		Max. tilling width	cm(in.)	107 (42)	107 (42)	107 (42)
		Max. weight	kg(lbs.)	170 (375)	170 (375)	170 (375)
Bottom plow		Max. size	cm(in.)	30 (12) x 1	30 (12) x 1	36 (14) x 1
Disc plow		Max. size	cm(in.)	56 (22) x 1	56 (22) x 1	56 (22) x 1
Cultivator		Max. size	cm(in.)	122 (48) 1 Row	122 (48) 1 Row	122 (48) 1 Row
Disc harrow		Max. harrowing width	cm(in.)	122 (48)	122 (48)	137 (54)
		Max. weight	kg(lbs.)	120 (265)	120 (265)	140 (300)
Sprayer		Max. tank capacity	L(U.S.gals.)	150 (40)	150 (40)	150 (40)
Front blade		Max. cutting width	cm(in.)	137 (54)	137 (54)	152 (60)
		Sub frame		Necessary	Necessary	Necessary
Rear blade		Max. cutting width	cm(in.)	137 (54)	152 (60)	152 (60)
		Max. weight	kg(lbs.)	140 (300)	160 (350)	160 (350)
Front loader		Max. lifting capacity	kg(lbs.)	180 (400)	210 (460)	210 (460)
		Max. width	cm(in.)	122 (48)	122 (48)	122 (48)
		Sub frame		Necessary	Necessary	Necessary
Box blade		Max. cutting width	cm(in.)	122 (48)	122 (48)	122 (48)
		Max. weight	kg(lbs.)	170 (375)	170 (375)	170 (375)
Snow blower (Front)		Max. working width	cm(in.)	127 (50)	127 (50)	127 (50)
		Max. weight	kg(lbs.)	160 (350)	160 (350)	160 (350)
		Sub frame		Necessary	Necessary	Necessary
Post hole digger		Digging depth	cm(in.)	114 (45)	114 (45)	114 (45)
Rotary broom		Cleaning width	cm(in.)	119 (47)	119 (47)	119 (47)
Trailer		Max. load capacity	kg(lbs.)	800 (1765)*	800 (1765)*	800 (1765)*

NOTE :

- Implement size may vary depending on soil operating conditions.
- * Reduce speed and trailer loads when operating in slippery conditions or when operating on slopes and utilize front wheel drive.

INSTRUMENT PANEL AND CONTROLS

■ Instrument Panel, Switches and Hand Controls

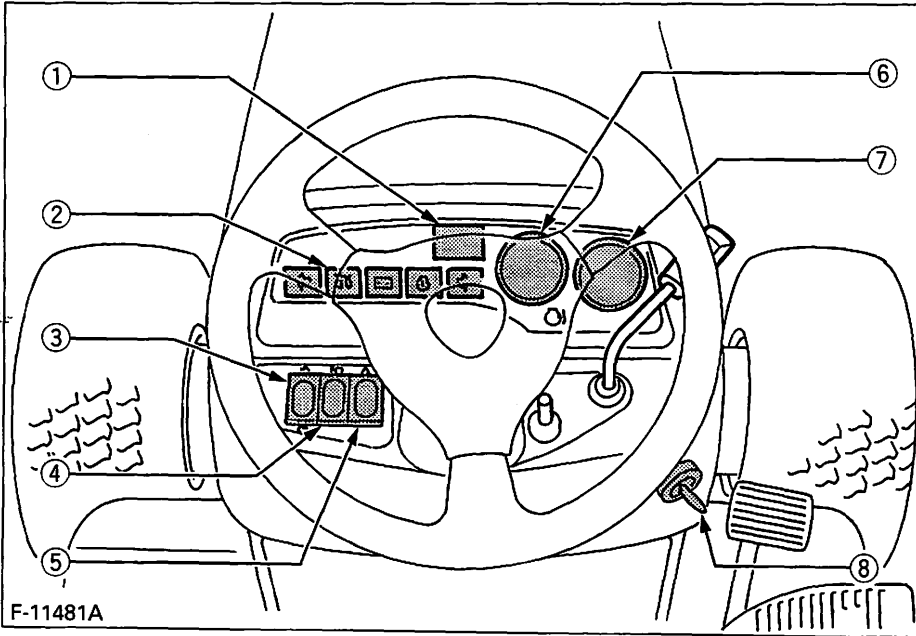


F-11481A

ILLUSTRATED CONTENTS

(1) Hourmeter.....	18
(2) Easy Checker™.....	11,17
(3) Turn signal light switch.....	14
(4) Head light switch.....	14
(5) Hazzard light switch.....	14
(6) Coolant temperature gauge.....	18
(7) Fuel warning lamp [BX1500].....	17
(7) Fuel gauge [BX1800, 2200].....	17
(8) Key switch.....	10

■ Foot and Hand Controls

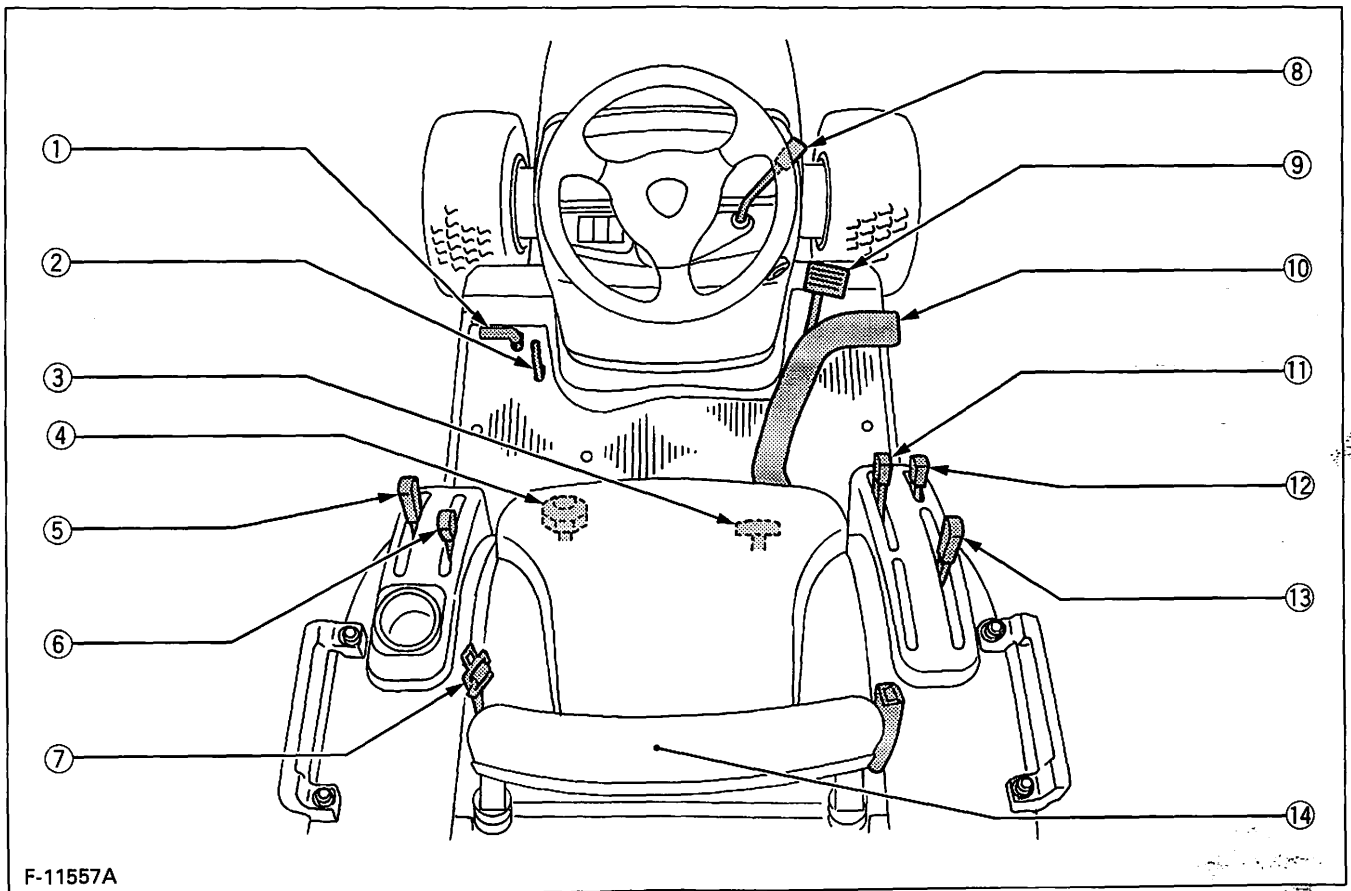

F-11557A

ILLUSTRATED CONTENTS

(1) Differential lock pedal.....	19
(2) Parking brake lock pedal.....	9,14,16,18
(3) 3-Point hitch lowering speed knob.....	27
(4) Cutting height control dial.....	28
(5) PTO select lever.....	21
(6) PTO clutch lever.....	9,22
(7) Seat belt.....	14
(8) Hand throttle lever.....	10,15
(9) Brake pedal.....	9,14,16,18
(10) Speed control pedal.....	9,16
(11) Hydraulic control lever.....	10,26,28
(12) Front wheel drive lever.....	15
(13) Range gear shift lever (Hi-Lo).....	9,15
(14) Operator's seat.....	13

PRE-OPERATION CHECK

DAILY CHECK

To prevent trouble from occurring, it is important to know the condition of the tractor well. Check it before starting.



CAUTION

To avoid personal injury:

- Be sure to check and service the tractor on a level surface with the engine shut off and the parking brake "ON" and implement lowered to the ground.

Check item

- Walk around inspection
- Check engine oil level
- Check transmission oil level
- Check coolant level
- Clean grill and radiator screen
- Check air cleaner evacuator valve
(When used in a dusty place)
- Check brake pedal
- Check indicators, gauges and meter
- Check lights
- Check wire harness
- Check seat belt and ROPS
- Refuel
(See "DAILY CHECK" in Periodic Service section)
- Care of danger, warning and caution labels
(See "DANGER, WARNING AND CAUTION LABELS"
in Safe Operation section)

OPERATING THE ENGINE



CAUTION

To avoid personal injury:

- Read "Safe Operation" in the front of this manual.
- Read the danger, warning and caution labels located on the tractor.
- To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.
- Never start engine while standing on ground. Start engine only from operator's seat.
- Make it a rule to set all shift levers to the "NEUTRAL" positions and to place PTO lever in "OFF" position before starting the engine.


IMPORTANT :

- Do not use starting fluid or ether.
- To protect the battery and the starter, make sure that the starter is not continuously turned for more than 10 seconds.

STARTING THE ENGINE

1. Make sure the parking brake is set.

1. To set the parking brake;
 - (1) Depress the brake pedal.
 - (2) Latch the brake pedal on pushing and holding the parking brake lock pedal then releasing pressure on the brake pedal.
2. To release the parking brake, depress the brake pedals again.

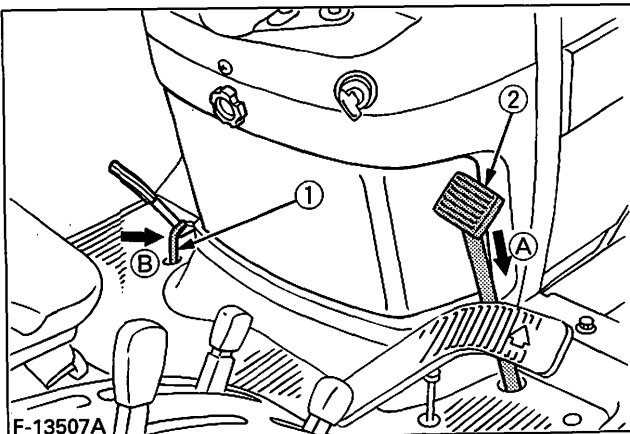


(1) Parking brake lock pedal
(2) Brake pedal

(A) "DEPRESS"
(B) PUSH FORWARD
WHILE DEPRESSING ②

NOTE :

- It is recommended that the operator practice engaging and disengaging the parking brake on a flat surface without the engine running before operating the tractor for the first time.

2. Place the PTO clutch lever in "OFF" position.
3. Place the speed control pedal in "NEUTRAL" position. Place the range gear shift lever (Hi-Lo) in "NEUTRAL" position.

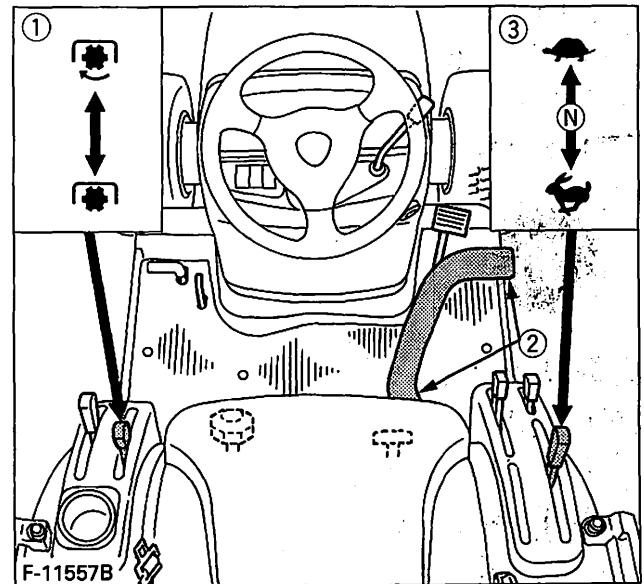

- (1) PTO clutch lever
(2) Speed control pedal
(3) Range gear shift lever
(Hi-Lo)

☐ "ON"
☐ "OFF"
☐ "Hi"
(N) "NEUTRAL POSITION"
☐ "Lo"


NOTE :

- The speed control pedal automatically returns to neutral when the operator's foot is released from the pedal.

4. Move the hydraulic control lever forward.

To lower implement, move the hydraulic control lever forward.


Hydraulic control lever is automatically returned to neutral position when implement is down at lowest position.

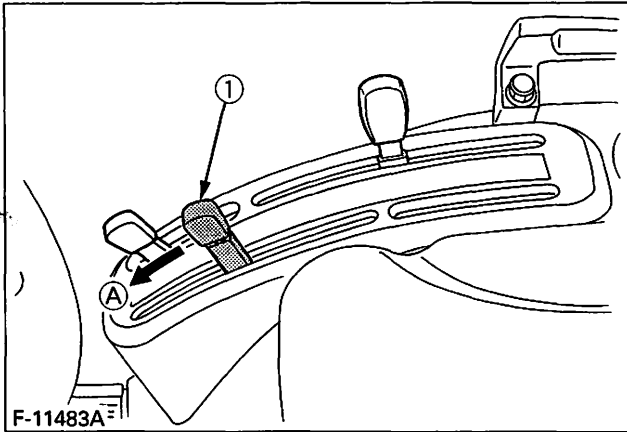

(1) Hydraulic control lever

(A) "DOWN"


5. Set the throttle lever to about 1/2 way.

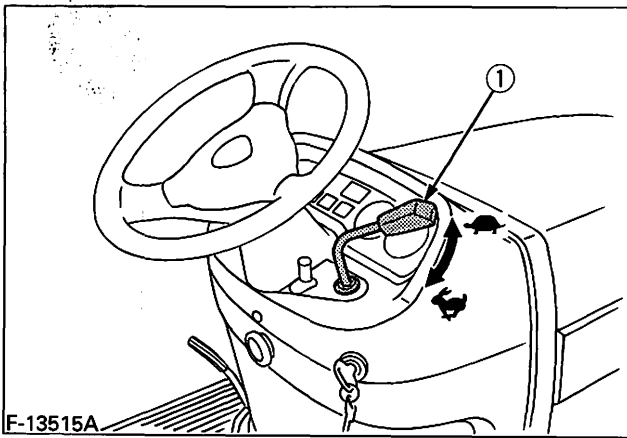



(1) Hand throttle lever

-  "INCREASE"
-  "DECREASE"

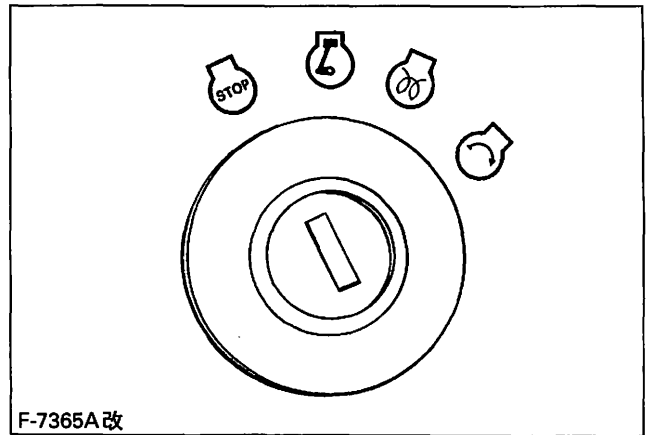6. Insert the key into the key switch and turn it "ON".





-  "OFF"
-  "ON"

-  "PREHEAT"
-  "START"

◆ **Check Easy Checker™ Lamps:**

1. When the key is turned "ON", lamps (3) (4), (6): [BX1500] only should come on. If trouble should occur at any location while the engine is running, the warning lamp corresponding to that location comes on.

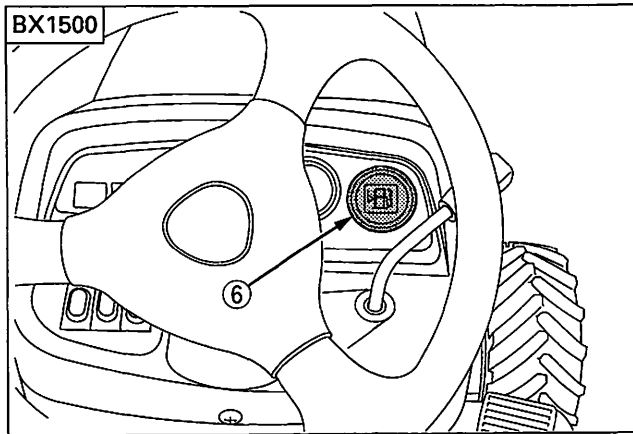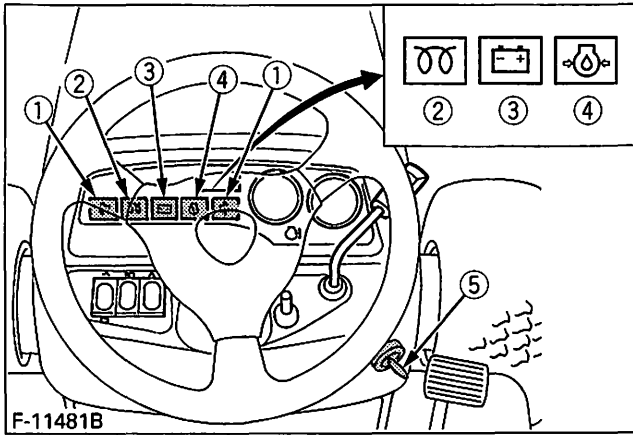

- (1) Turn signal/Hazard light indicator
- (2) Preheat
- (3) Electrical charge
- (4) Engine oil pressure
- (5) Key switch
- (6) Fuel warning lamp [BX1500 only]

IMPORTANT :

- Daily checks with the Easy Checker™ only, are not sufficient. Never fail to conduct daily checks carefully by referring to Daily Check section. (See "DAILY CHECK" in Periodic Service Section)

7. Turn the key to "PREHEAT" position and hold it for about 2 to 3 seconds.

For the appropriate preheating time, refer to the table below:

Temperature	Preheating Time
Over 0°C (32°F)	2 to 3 sec.
0 to -5°C (32 to 23°F)	5 sec.
-5 to -15°C (23 to 5°F)	10 sec.

NOTE :

- Glow plug indicator (2) comes on while engine is being preheated.

8. Turn the key to "START" position and release when the engine starts.

IMPORTANT :

- The engine will not start unless the range gear shift lever (Hi-Lo) and the PTO clutch lever are in the "NEUTRAL" and "OFF" positions respectively.

◆ **Cold Weather Starting**

When the ambient temperature is below -5°C (23°F) and the engine is very cold. If the engine fails to start after 10 seconds, turn off the key for 30 seconds. Then repeat steps 7 and 8. To protect the battery and the starter, make sure that the starter is not continuously turned for more than 30 seconds.

■ **Block Heater (Option)**

A block heater is available as an option from your dealer. It will assist you in starting your tractor when the ambient temperature is below -15°C (5°F).

9. Check to see that all the lamps on the Easy Checker™ are "OFF"

If the lamp is still on, immediately stop the engine and determine the cause.

STOPPING THE ENGINE

1. After slowing the engine to idle, turn the key to "OFF".
2. Remove the key.

WARMING UP



CAUTION

To avoid personal injury:

- Be sure to set the parking brake during warm-up.
- Be sure to set all shift levers to the "NEUTRAL" positions and to place PTO lever in "OFF" position during warm-up.

For five minutes after engine start-up, allow engine to warm up without applying any load, this is to allow oil to reach every engine part. If load should be applied to the engine without this warm-up period, trouble such as seizure, breakage or premature wear may develop.

■ Warm-up and Transmission Oil in the Low Temperature Range

Hydraulic oil serves as transmission fluid. In cold weather, the oil may be cold with increased viscosity. This can cause delayed oil circulation or abnormally low hydraulic pressure for some time after engine start-up. This in turn can result in premature wear in the hydraulic system or malfunctions such as resistance in the speed control pedal and difficulty engaging the range gear shift lever. To prevent the above, observe the following instructions: Warm up the engine at about 50% of rated rpm according to the table below:

Ambient temperature	Warm-up time requirement
Above 0°C (32°F)	At least 5 minutes
0 to -10°C (32 to 14°F)	5 to 10 minutes
-10 to -20°C (14 to -4°F)	10 to 15 minutes
Below -20°C (-4°F)	More than 15 minutes

IMPORTANT :

- Do not operate the tractor under full load condition until it is sufficiently warmed up.

JUMP STARTING




CAUTION

To avoid personal injury:

- Battery gases can explode. Keep cigarettes, sparks, and flames away from battery.
- If tractor battery is frozen, do not jump start engine.
- Do not connect other end of negative (-) jumper cable to negative (-) terminal of tractor battery.

When jump starting engine, follow the instructions below to safely start the engine.

1. Bring helper vehicle with a battery of the same voltage as disabled tractor within easy cable reach. "THE VEHICLES MUST NOT TOUCH".
2. Engage the parking brakes of both vehicles and put the shift levers in neutral. Shut both engines off.
3. Put on safety goggles and rubber gloves.
4. Ensure the vent caps are securely in place. (if equipped)
5. Cover vent holes with damp rags. Do not allow the rag to touch the battery terminals.
6. Attach the red clamp to the positive (red, (+) or pos.) terminal of the dead battery and clamp the other end of the same cable to the positive (red, (+) or pos.) terminal of the helper battery.
7. Clamp the other cable to the negative (black, (-) or neg.) terminal of the helper battery.
8. Clamp the other end to the engine block or frame of the disabled tractor as far from the dead battery as possible.
9. Start the helper vehicle and let its engine run for a few moments. Start the disabled tractor.
10. Disconnect the jumper cables in the exact reverse order of attachment. (Steps 8, 7 and 6).
11. Remove and discard the damp rags.

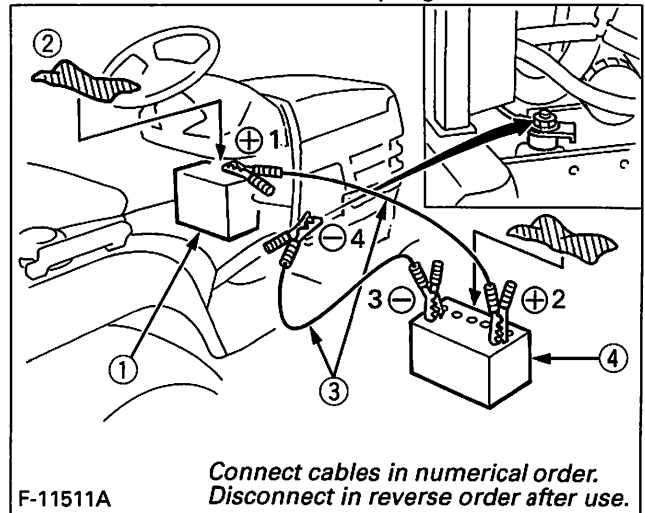

- (1) Dead battery
 (2) Lay a damp rag over the vent caps
 (3) Jumper cables
 (4) Helper battery

IMPORTANT :

- This machine has a 12volt negative (-) ground starting system.
 - Use only same voltage for jump starting.
 - Use of a higher voltage source on tractors electrical system could result in severe damage to tractors electrical system.
- Use only matching voltage source when "Jump starting" a low or dead battery condition.

OPERATING THE TRACTOR

OPERATING NEW TRACTOR

How a new tractor is handled and maintained determines the life of the tractor.

A new tractor just off the factory production line has been, of course, tested, but the various parts are not accustomed to each other, so care should be taken to operate the tractor for the first 50 hours at a slower speed and avoid excessive work or operation until the various parts become "broken-in." The manner in which the tractor is handled during the "breaking-in" period greatly affects the life of your tractor. Therefore, to obtain the maximum performance and the longest life of the tractor, it is very important to properly break-in your tractor. In handling a new tractor, the following precautions should be observed.

■ Do not Operate the Tractor at Full Speed for the First 50 Hours.

- Do not start quickly or apply the brakes suddenly.
 - In winter, operate the tractor after fully warming up the engine.
 - Do not run the engine at speeds faster than necessary.
 - On rough roads, slow down to suitable speeds.
- Do not operate the tractor at fast speed.

The above precautions are not limited only to new tractors, but to all tractors. But it should be especially observed in the case of new tractors.

■ Changing Lubricating Oil for New Tractors

The lubricating oil is especially important in the case of a new tractor. The various parts are not "broken-in" and are not accustomed to each other; small metal grit may develop during the operation of the tractor; and this may wear out or damage the parts. Therefore, care should be taken to change the lubricating oil a little earlier than would ordinarily be required.

For further details of change interval hours.
(See "MAINTENANCE" section)

STARTING

1. Adjusting the operator's position.

■ Operator's Seat




CAUTION

To avoid personal injury:

- Make sure that the seat is completely secured after each adjustment.
- Do not allow any person other than the driver to ride on the tractor.

◆ Travel adjustment

Pull out the position adjust lever and slide the seat backward or forward, as required. The seat will lock in position when the lever is released.

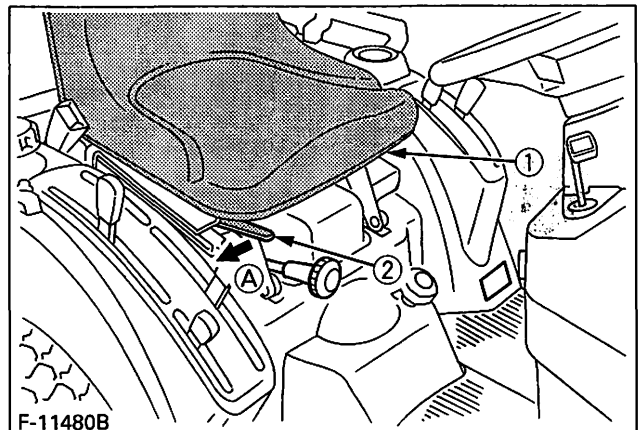

(1) Seat

(2) Position adjust lever

(A) "PULL OUT"

IMPORTANT :

- After adjusting the operator's seat, be sure to check that the seat is properly locked.


■ Seat Belt

⚠ CAUTION

To avoid personal injury:

- Always use the seat belt when the ROPS is installed.
- Do not use the seat belt if the tractor is not equipped with ROPS.

Adjust the seat belt for proper fit and connect to the buckle. The seat belt is auto-locking retractable type.

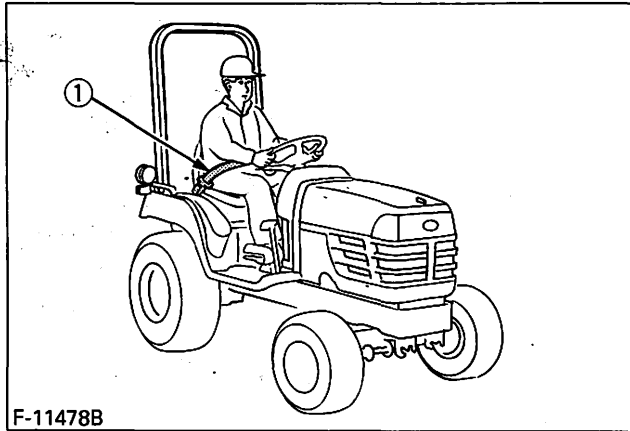

F-11478B

(1) Seat belt

2. Selecting Light Switch Positions.

■ Head Light Switch

- (A) Head lights ON.
- (B) Head lights OFF.

■ Hazard Light Switch

When hazard light switch is pushed down forward, the hazard lights flash along with the indicator on the instrument panel. Push the switch down backward to turn off the light.


- (A) Hazard lights ON.
- (B) Hazard lights OFF.

■ Turn Signal Light Switch

To indicate a right turn, push down forward.
 To indicate a left turn, push down backward.
 When the left or right turn signal is activated in combination with the hazard lights, the indicated turning light will flash and the other will stay on.

NOTE :

- Be sure to return switch to center position after turning.

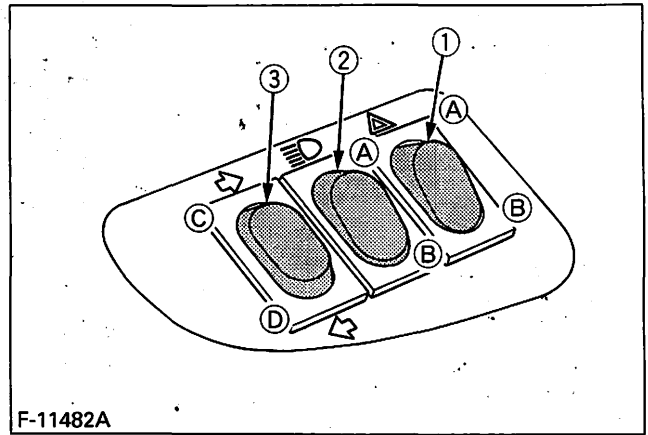

F-11482A

- (1) Hazard light switch
- (2) Head light switch
- (3) Turn signal light switch
- (A) "ON"
- (B) "OFF"
- (C) "RIGHT TURN"
- (D) "LEFT TURN"

3. Checking the Brake Pedal.


■ Brake Pedal

Make sure to latch the brake pedal with the parking brake lock pedal. Use both right and left feet for the procedure.

⚠ CAUTION

To avoid personal injury:

- An accident may occur if the tractor is suddenly braked, such as by heavy towed loads shifting forward or loss of control.
- The braking characteristics are different between two and four wheel drive. Be aware of the difference and use carefully.
- When driving on icy, wet or loose surfaces, make sure the tractor is correctly ballasted to avoid skidding and loss of steering control. Operate at reduced speed.

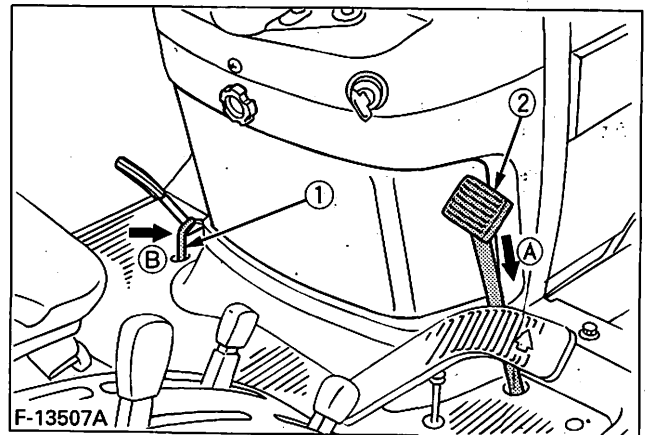


F-13507A

- (1) Parking brake lock pedal
- (2) Brake pedal
- (A) "DEPRESS"
- (B) "PUSH FORWARD WHILE DEPRESSING ②"

4. Raise the Implement.
(see "HYDRAULIC UNIT" section)

Move the hydraulic control lever rearward.

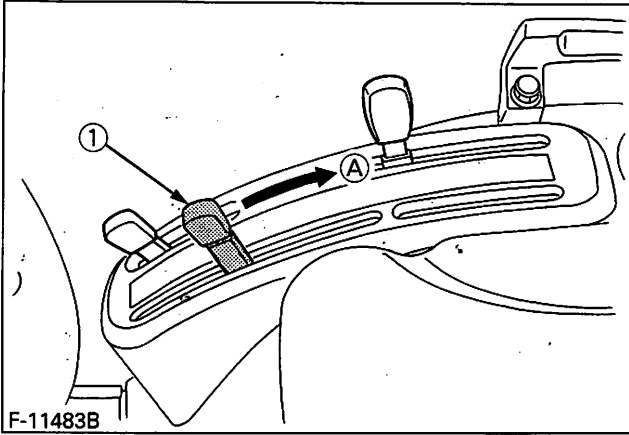

(1) Hydraulic control lever (A) "UP"

Hydraulic control lever is automatically returned to neutral position when the implement is raised to the fully up.

5. Selecting the Travel Speed.

Range Gear Shift Lever (Hi-Lo)

The range gear shift can only be shifted when tractor is completely stopped.

CAUTION

To avoid personal injury:


- Make sure the range shift lever is fully engaged into the "H" or "L" position before climbing or descending a slope.
- When the range shift lever should be disengaged.

IMPORTANT :

Do not force the range gear shift lever.

- If it is difficult to shift the range shift lever into neutral position;
 - (1) Depress the brake pedal firmly for several seconds.
 - (2) Without reducing the brake pedal force, shift the range shift lever.
- If it is difficult to shift the range shift lever into "L" or "H" from neutral position;
 - (1) Slightly depress the speed control pedal to rotate the gears inside of transmission.
 - (2) Release the speed control pedal to neutral position.
 - (3) Shift the range shift lever.

- To avoid damage of transmission, stop tractor before shifting between ranges.

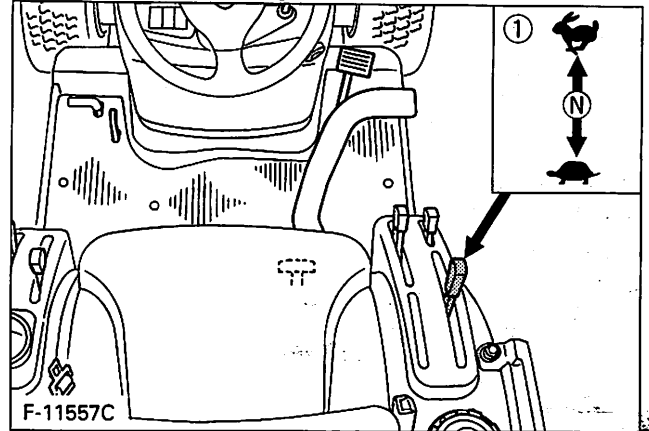

(1) Range gear shift lever (Hi-Lo)
 "HIGH"
 (N) "NEUTRAL POSITION"
 "LOW"

NOTE :

- When you stand up from the seat with the range gear shift lever at "HIGH" or "LOW", the engine will stop regardless of whether the machine is moving or not. This is because the tractor is equipped with Operator Presence Control system (OPC).

Front Wheel Drive Lever




CAUTION

To avoid personal injury:

- Do not engage the front wheel drive when traveling at road speed.
- When driving on icy, wet or loose surfaces, make sure the tractor is correctly ballasted to avoid skidding and loss of steering control. Operate at reduced speed and engage front wheel drive.
- An accident may occur if the tractor is suddenly braked, such as by heavy towed loads shifting forward or loss of control.
- The braking characteristics are different between two and four wheel drive. Be aware of the difference and use carefully.

Use the lever to engage the front wheels with the tractor stopped. Shift the lever to "ON" to engage the front wheel drive.

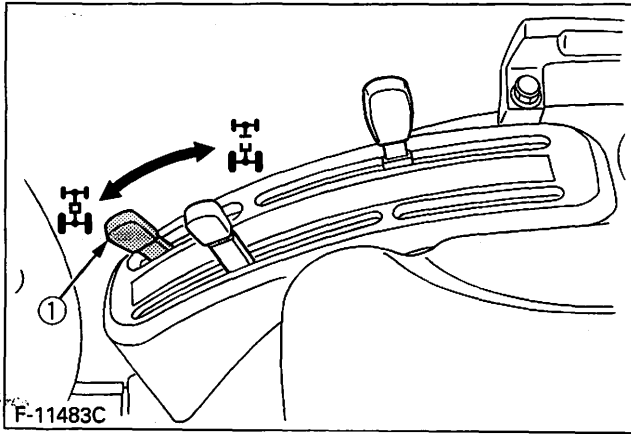

(1) Front wheel drive lever "ON" "OFF"


IMPORTANT:

- To avoid damage of transmission, when front wheel drive lever is not smoothly shifted, slightly step forward or rearward on speed control pedal.
- Tires will wear quickly if front wheel drive is engaged on paved roads.
- ◆ Front wheel drive is effective for the following jobs:
 1. When greater pulling force is needed, such as working in a wet field, when pulling a trailer, or when working with a front-end loader.
 2. When working in sandy soil.
 3. When working on a hard soil where a rotary tiller might push the tractor forward.
 4. Additional braking at reduced speed.

6. Accelerate the Engine.

■ Hand Throttle Lever

Pulling the throttle lever back increases engine speed, and pushing it forward decreases engine speed.

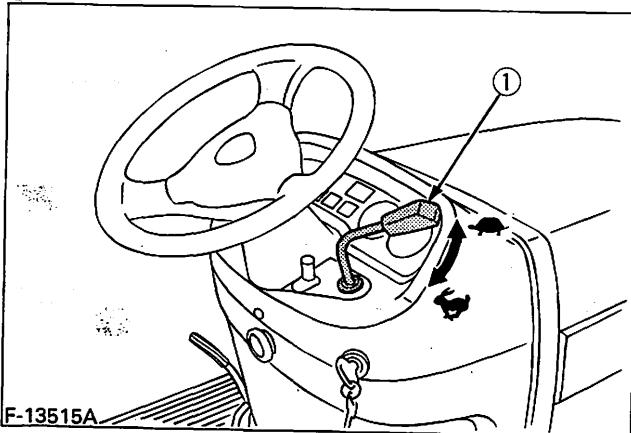


(1) Hand Throttle lever "INCREASE" "DECREASE"

7. Unlock the Parking Brake.

■ Parking Brake Pedal

To release the parking brake, depress the brake pedal again.

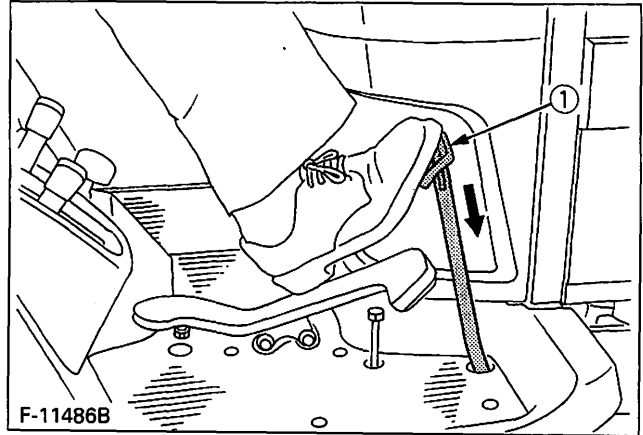

(1) Brake pedal

8. Depress the Speed Control Pedal.

■ Speed Control Pedal

! WARNING

To avoid personal injury:


- Do not operate if tractor moves on level ground with foot off Speed Control Pedal.

Forward Pedal

Depress the forward pedal with the toe of your right foot to move forward.

Reverse Pedal

Depress the reverse pedal with the heel of your right foot to move backward.

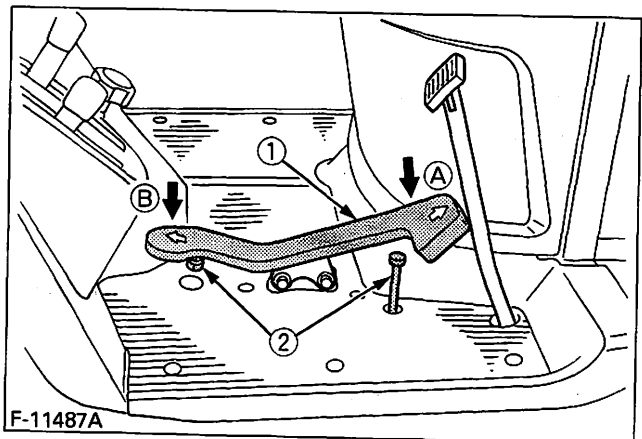

(1) Speed control pedal (A) "FORWARD"
(2) Stopper bolts (B) "REVERSE"

IMPORTANT :

- To prevent serious damage to the HST, do not adjust the stopper bolts.

STOPPING

■ Stopping


1. Slow the engine down.
2. Step on the brake pedal.
3. After the tractor has stopped, disengage the PTO, lower the implement to the ground, shift the transmission to neutral and set the parking brake.

CHECK DURING DRIVING

■ Immediately Stop the Engine if:

- The engine suddenly slows down or accelerates,
- Unusual noises suddenly are heard,
- Exhaust fumes suddenly become very dark,

While driving, make the following checks to see that all the parts are functioning normally.

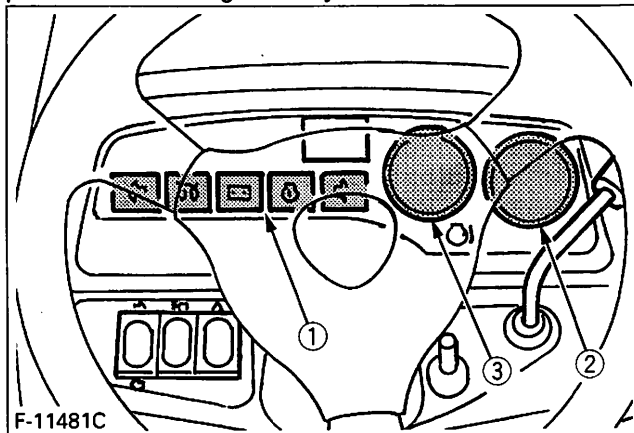

- (1) Easy checker™
- (2) Fuel gauge [BX1800,2200]
Fuel warning lamp [BX1500]
- (3) Coolant temperature gauge

■ Easy Checker(TM)

If the warning lamps in the Easy Checker™ come on during operation, immediately stop the engine; and find the cause as shown below.

Never operate the tractor while Easy Checker™ lamp is on.

- ⚙ Engine oil pressure
If the oil pressure in the engine goes below the prescribed level, the indicator in the Easy Checker™ will come on.
If this should happen during operation, and it does not go off when the engine is accelerated to more than 1000 rpm, check level of engine oil.
(See "Checking Engine Oil Level" in daily check in Periodic Service section)

- ⚡ Electrical charge
If the alternator is not charging the battery, the indicator in the Easy Checker™ will come on.
If this should happen during operation, check the electrical charging system or consult your local KUBOTA Dealer.


NOTE :
● For checking and servicing of your tractor, consult your local KUBOTA Dealer for instructions.

■ Fuel Gauge[BX1800/2200]

When the key switch is on, the fuel gauge indicates the fuel level.

Be careful not to empty the fuel tank. Otherwise air may enter the fuel system.


Should this happen, the system should be bled (See "Bleeding Fuel System" in as required in Periodic Service Section)

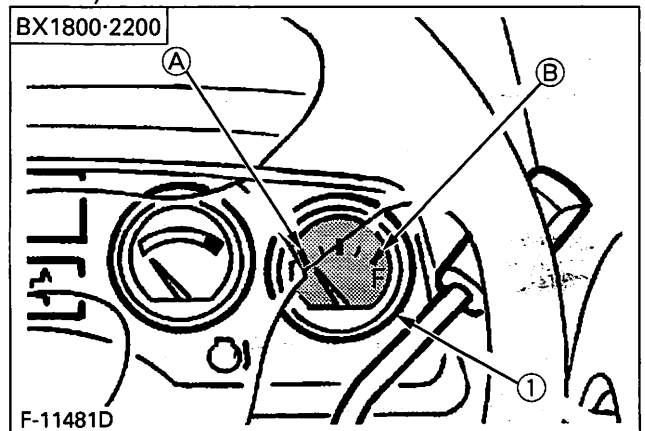

- (1) Fuel gauge
- (A) "EMPTY"
- (B) "FULL"

■ Fuel Warning Lamp[BX1500]

When the fuel level is low, the warning lamp will come on.

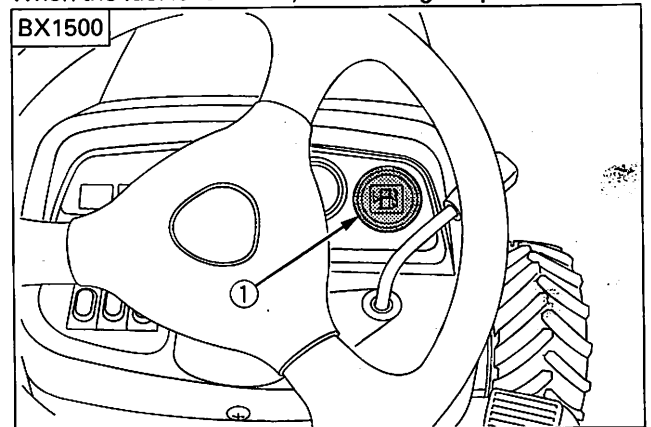

- (1) Fuel warning lamp

■ **Coolant Temperature Gauge**

CAUTION

To avoid personal injury:


- Do not remove radiator cap until coolant temperature is well below its boiling point. Then loosen cap slightly to the stop to relieve any pressure before removing cap completely.

If the indicator reaches red zone,

1. Place the PTO clutch lever in the "OFF" (DISENGAGE) position.
2. Move the machine to the level surface, and apply the parking brake.
3. Place the throttle lever in the engine idle position, and let the engine run for a few minutes.
4. Check the Cooling System, after it has sufficient time to cool down.

Check the following items:


1. Shortage or leakage of the coolant.
 2. Foreign matter on the radiator net or dust and dirt between the radiator fins.
 3. Looseness of fan belt.
 4. Blockage in the radiator tube.
- (See "PERIODIC SERVICE" section.)

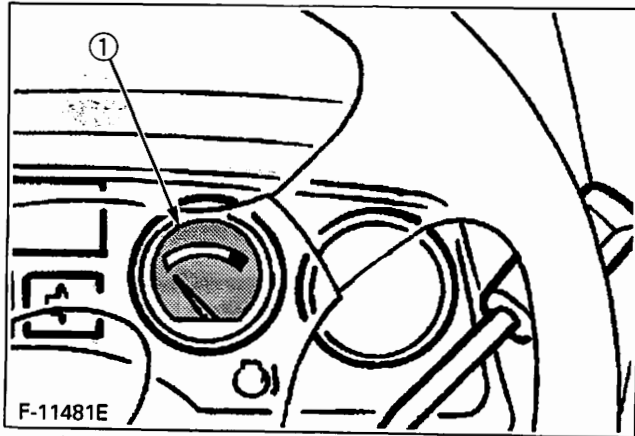

(1) Coolant temperature gauge

■ **Hourmeter**

The hourmeter indicates in five digits the hours the tractor has been used; the last digit indicates 1/10 of an hour.

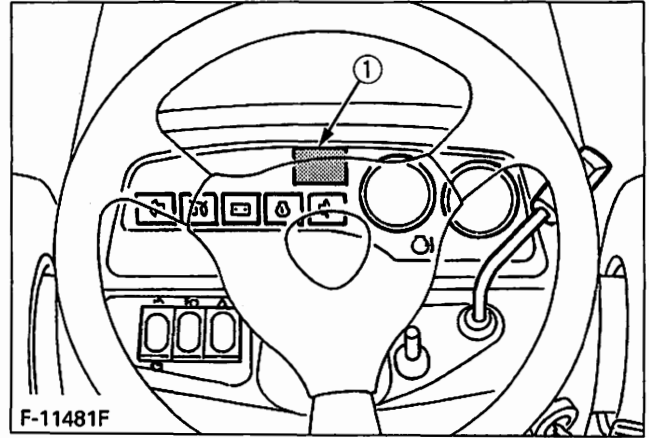

(1) Hours used

PARKING


■ **Parking**

CAUTION

To avoid personal injury:

- Always set the parking brake, stop the engine and remove the key before leaving the tractor seat.

1. When parking, be sure to set the parking brake. To set the parking brake;
 - (1) Depress the brake pedal.
 - (2) Latch the brake pedal with the parking brake lock pedal.

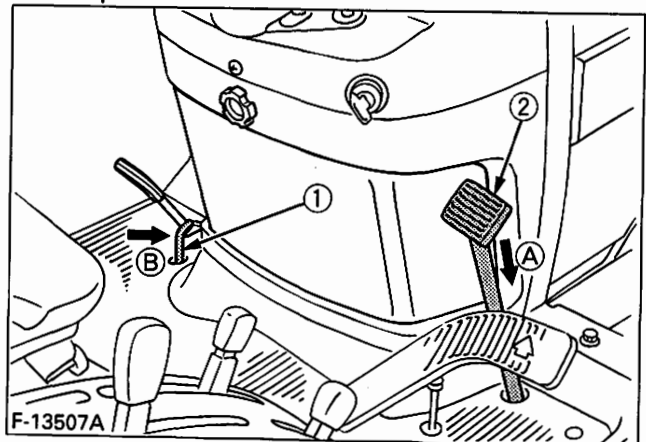

(1) Parking brake lock pedal (A) "DEPRESS"
 (2) Brake pedal (B) PUSH FORWARD WHILE DEPRESSING ②

2. Before getting off the tractor, disengage the PTO, lower all implements to the ground, place all control levers in their neutral positions, set the parking brake, stop the engine and remove the key.
3. If it is necessary to park on an incline, be sure to chock the wheels to prevent accidental rolling of the machine.

OPERATING TECHNIQUES

■ Differential Lock


WARNING

To avoid personal injury due to loss of steering control:

- Do not operate the tractor at high speed with differential lock engaged.
- Do not attempt to turn with the differential lock engaged.
- Be sure to release the differential lock before making a turn in field conditions.

If one of the rear wheels should slip, step on the differential lock pedal. Both wheels will then turn together, reducing slippage.

Differential lock is maintained only while the pedal is depressed.

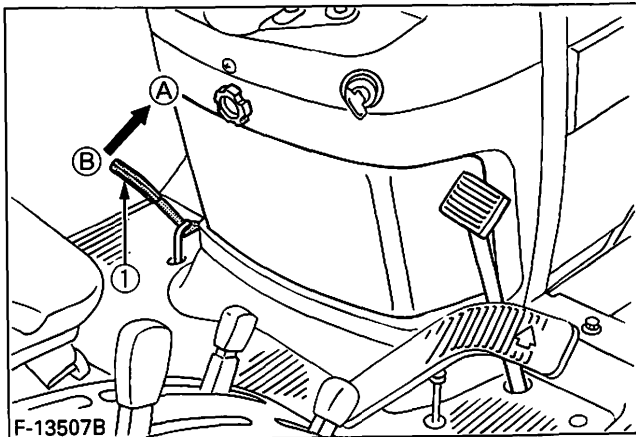

(1) Differential lock pedal

(A) "Press to "ENGAGE"

(B) Release to "DISENGAGE"

IMPORTANT :

- When using the differential lock, always slow the engine down.
- To prevent damage to power train, do not engage differential lock when one wheel is spinning and the other is completely stopped.
- If the differential lock cannot be released in the above manner, alternately press speed control pedal forward and backward slightly.

■ Operating the Tractor on a Road


CAUTION

To avoid personal injury:

- When traveling on road with 3-point hitch mounted implement attached, be sure to have sufficient front weight on the tractor to maintain steering ability.

Be sure SMV emblem and warning lamps are clean and visible. If towed or rear-mounted equipment obstructs these safety devices, install SMV emblem and warning lamps on equipment.

Consult your local KUBOTA Dealer for further details.

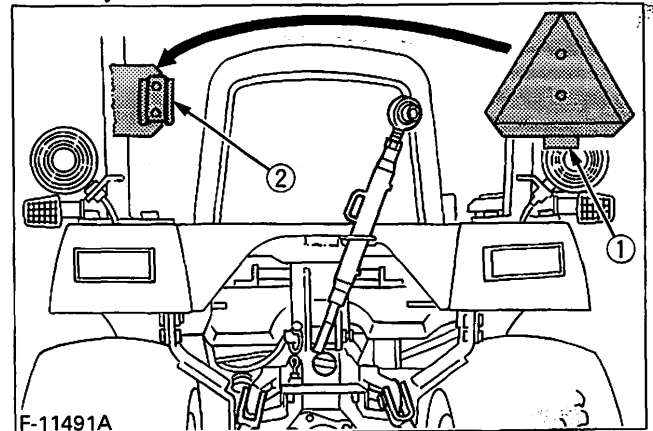

(1) SMV emblem

(2) Bracket

■ Operating on a Slopes and Rough Terrain



CAUTION

To avoid personal injury:

- Always back up when going up a steep slope. Driving forward could cause the tractor to tip over backward. Stay off hills and slopes too steep for safe operation.
 - Avoid changing gears when climbing or descending a slope.
 - If operating on a slope, never disengage shift levers to neutral. Doing so could cause machine and loss of control.
 - Do not drive the tractor close to the edges of ditches or banks which may collapse under the weight of the tractor. Especially when the ground is loose or wet.
1. Slow down for slopes, rough ground, and sharp turns, especially when transporting heavy, rear mounted equipment.
 2. Before descending a slope, be sure that the range lever is in the low "L" so that speed can be controlled without using brakes.

■ Directions for Use of Power Steering

1. Power steering is activated only while the engine is running. While the engine is stopped, the tractor functions in the same manner as tractors without power steering.
2. When the steering wheel is turned all the way to the stop, the relief valve is activated. Do not hold the steering wheel in this position for a long period of time.
3. Avoid turning the steering wheel while the tractor is stopped, or tires may wear out sooner.
4. The power steering mechanism makes the steering easier. Be careful when driving on a road at high speeds.

PTO

PTO OPERATION



WARNING

To avoid personal injury:

- Before operation, be sure to select the correct PTO lever (mid, mid/rear, rear).




CAUTION

To avoid personal injury:

- Disengage PTO, stop engine, and allow all rotating components to come to a complete stop before connecting, disconnecting, adjusting, or cleaning any PTO driven equipment.

■ PTO Select Lever

The tractor has a 540 rpm rear PTO speed and a 2500 rpm mid-PTO speed.

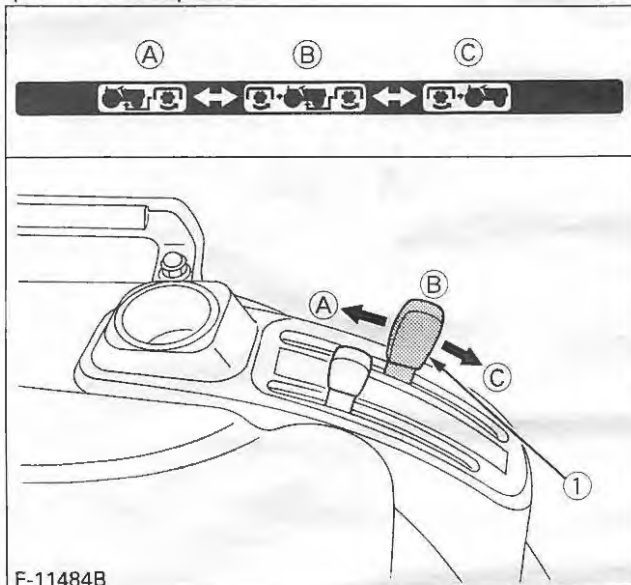

F-11484B

(1) PTO select lever

(A) Mid-PTO position
(B) Mid-Rear-PTO position
(C) Rear-PTO position

◆ Mid-PTO

To use Mid-PTO, shift the PTO select lever to Mid-PTO position and the PTO clutch lever to "ON" position.

◆ Mid-Rear PTO

To use mid and rear PTO at the same time, shift the PTO select lever to mid-rear PTO position and the PTO clutch lever to "ON" position.

◆ Rear PTO


To use rear PTO, shift the PTO select lever to rear PTO position and the PTO clutch lever to "ON" position.

IMPORTANT:

- To avoid shock loads to the PTO, reduce engine throttle from full to half speed by pushing up on engine throttle when engaging the PTO, then open the throttle to the recommended speed.
- To avoid damage of transmission, when PTO select lever is not smoothly shifted, slightly shift PTO clutch lever.

◆ Mid-PTO

The Mid-PTO is available for KUBOTA approved implements.

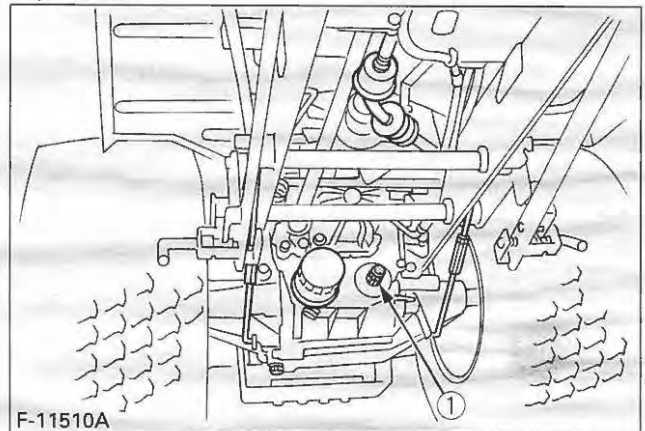


F-11510A

(1) Mid-PTO

■PTO Clutch Lever

1. The PTO clutch lever engages or disengages the PTO clutch which gives the PTO independent control.
2. Shift the lever to "ON" to engage the PTO clutch. Shift the lever to "OFF" to disengage the PTO clutch.

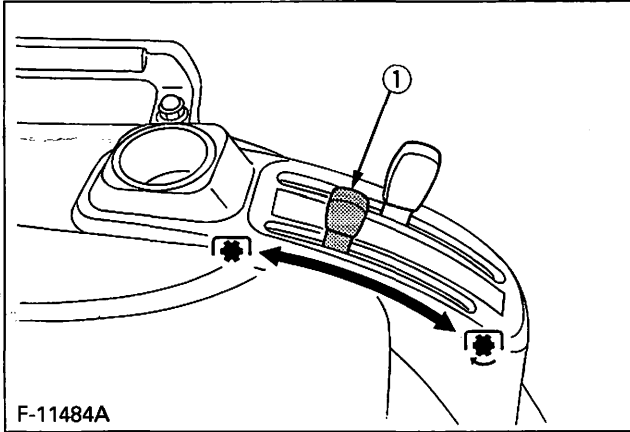

F-11484A

- (1) PTO clutch lever
- ☑ "ON" "ENGAGE"
☑ "OFF" "DISENGAGE"

IMPORTANT :


- To avoid shock loads to the PTO, reduce engine throttle from full to half speed by pushing up on engine throttle when engaging the PTO, then re-engage the engine to full.
- To avoid damage to PTO clutch and implement, shift the PTO clutch lever slowly, when engaging the PTO clutch. Do not keep the PTO clutch lever half way.

NOTE :

- Tractor engine will not start if the PTO clutch lever is in the engaged "ON" position.
 - When you stand up from the seat with the PTO clutch lever at "ON" position, the engine will stop regardless of the position of the PTO select lever.
- This is because the tractor is equipped with Operator Presence Control system (OPC).

■PTO Shaft Cover and Shaft Cap

Keep the PTO shaft cover in place at all times. Replace the PTO shaft cap when the PTO is not in use. Before connecting or disconnecting a drive shaft to PTO shaft, be sure engine is "OFF" and raise up the PTO shaft cover. Afterward be sure to return the PTO shaft cover to the "NORMAL POSITION".

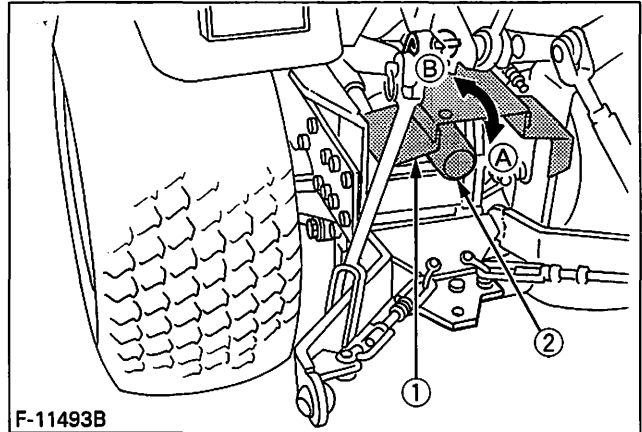


F-11493B

- (1) PTO shaft cover
- (2) PTO shaft cap
- (A) "NORMAL POSITION"
(B) "RAISED POSITION"

■ Stationary PTO

To park the tractor and use the PTO system (for chipper or pump, for example), start the PTO system in the following steps.

1. Apply the parking brakes and place blocks at the tires.
2. Make sure the shift levers are at NEUTRAL, and start the engine.
3. Set the PTO select lever to rear only position.
4. Dismount the seat and tilt up.
5. Set the PTO clutch lever to engage "ON".
6. Set the engine speed to provide recommended rear PTO speed.

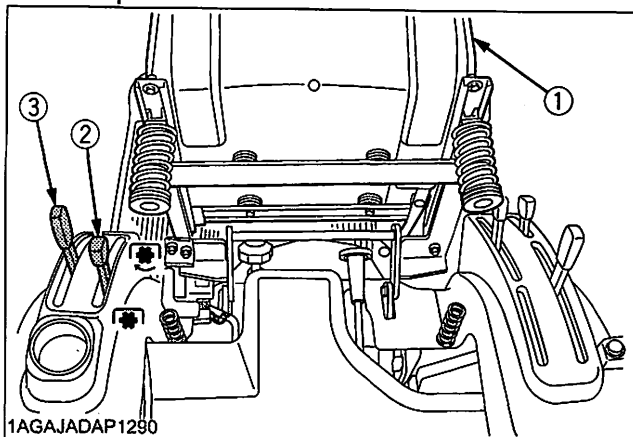

- (1) Seat
 (2) Clutch control lever
 (3) PTO select lever


☐ "ON"
 ☐ "OFF"

NOTE :

- If the PTO clutch lever is shifted to "ON"(Engaged) position under the following condition, the engine will stop itself.


- (1) The range gear shift lever (Hi-Lo) is not at "NEUTRAL" position.
- (2) The PTO select lever is not at "REAR PTO" position.
- (3) The seat is not tilted forward.

■ PTO Drive Shaft

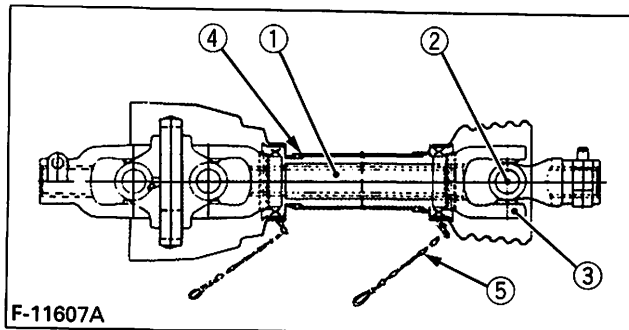


- (1) Inner and outer sliding profile tubes
 (2) Journal cross assy
 (3) Fitting yoke
 (4) Safety guard (In, Out)
 (5) Chain

1. When using a PTO drive shaft, you should read the operator's manuals of implement manufacturers before operating the implement. PTO drive shafts are designed for specific machines and power requirement.
2. To adjust the length of PTO drive shaft, refer the following instructions.
 - (1) To adjust the length, hold the half shafts next to each other in the shortest working position and mark them.
 - (2) Shorten inner and outer guard tubes equally.
 - (3) Shorten inner and outer sliding profiles tube by the same length as the guard tubes.
 - (4) Round off all sharp edges and remove burrs. Grease sliding profiles.

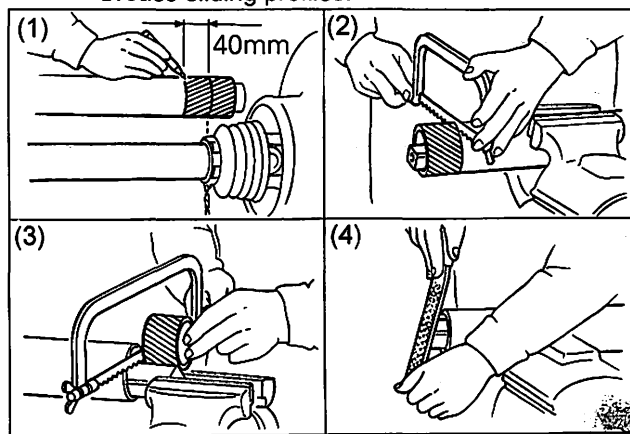


3. Ensure that the PTO drive shaft is securely connected at both ends before operating.

THREE-POINT HITCH & DRAWBAR

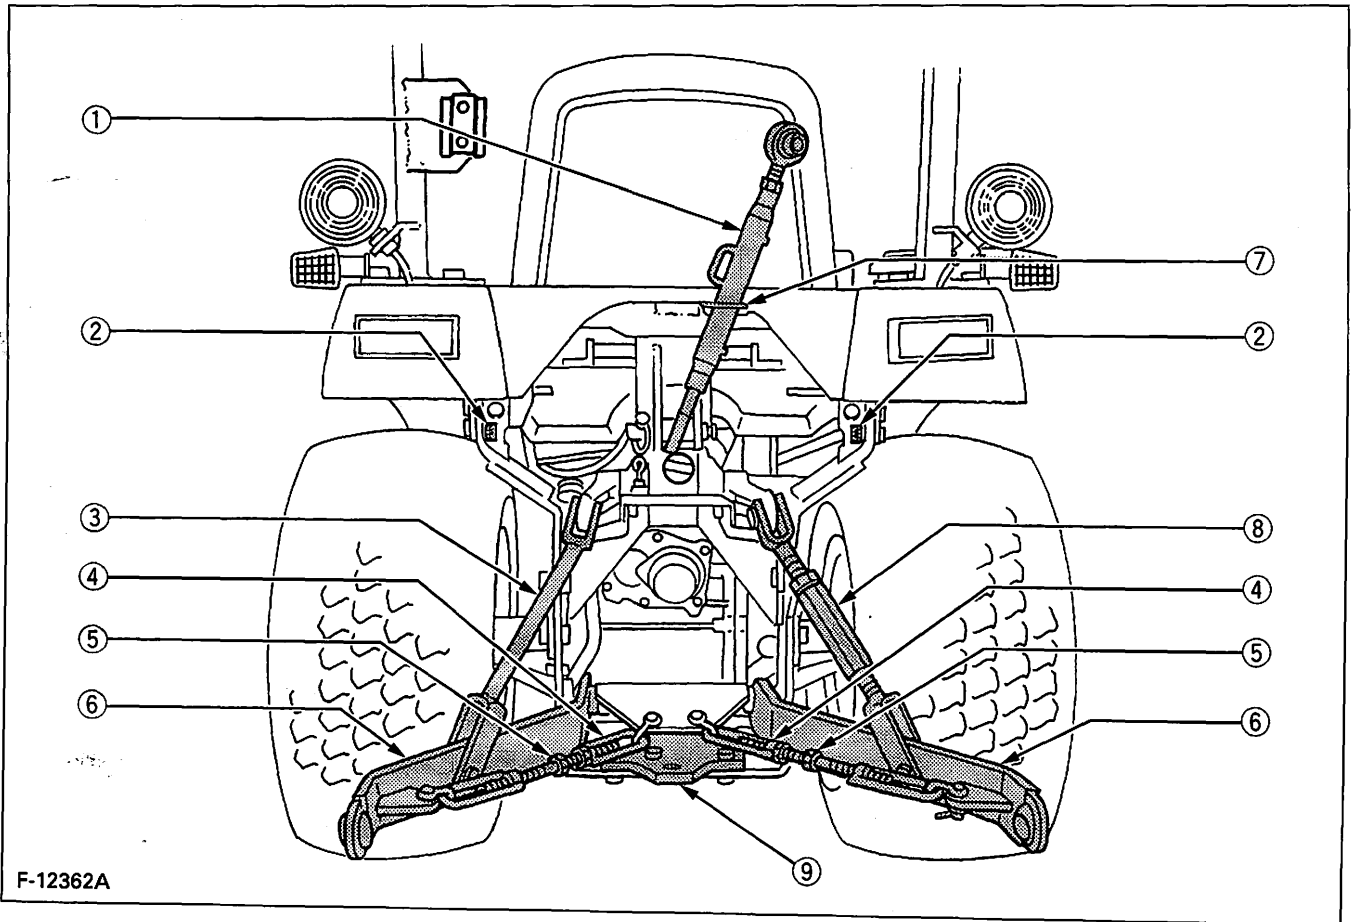

Use holder hole to hold lower link higher while mowing with mid-mount mower only over uneven terrain.

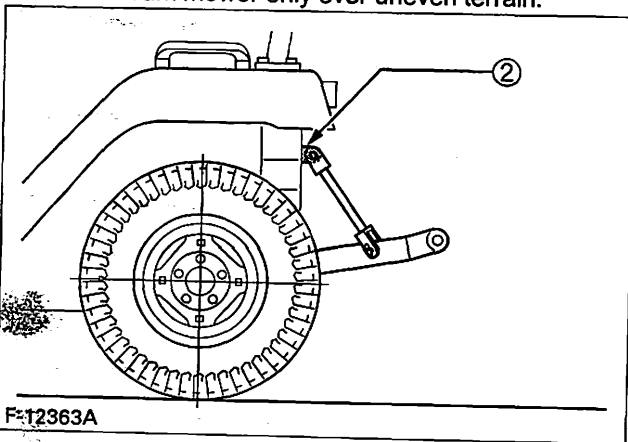

(2) Holder hole

- (1) Top link
- (2) Holder hole
- (3) Lifting rod (Left)
- (4) Check chains
- (5) Turnbuckle
- (6) Lower link
- (7) Top link holder
- (8) Lifting rod (Right)
- (9) Hitch

3-POINT HITCH

■ Attaching and detaching implements

⚠ CAUTION


To avoid personal injury:

- Be sure to stop the engine and remove the key.
- Do not stand between tractor and implement unless parking brake is applied.
- Before attaching or detaching implement, locate the tractor and implement on a firm, flat and level surface.
- Whenever an implement or other attachment is connected to the tractor 3-point hitch, slowly move the 3-point hitch through the full range of operation and check for interference, binding or PTO separation before operating the machine.

■ Lifting Rod (Right)

Level a 3-point mounted implement from side to side by turning the adjusting turnbuckle to shorten or lengthen the adjustable lifting rod with the implement on the ground.

After adjustment, tighten the lock nut securely.

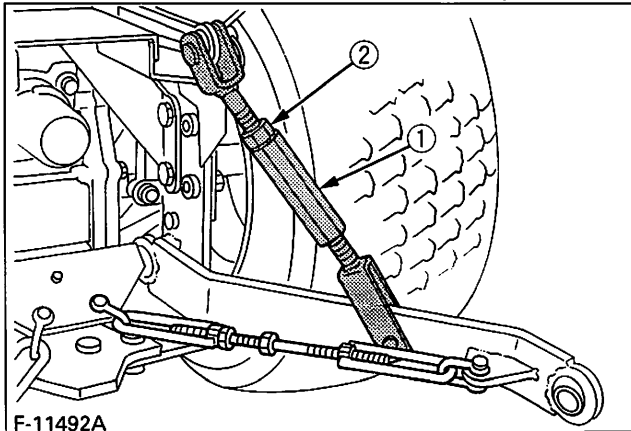

(1) Adjusting turnbuckle
(2) Lock nut

⚠ CAUTION

To avoid personal injury from separation:

- Do not extend lift rod beyond the edge of flat face on the threaded rod. See the illustration that is on the safety label part K2561-65551.


■ Top Link

1. Adjust the angle of the implement to the desired position by shortening or lengthening the top link.
2. The proper length of the top link varies according to the type of implement being used.

■ Check Chains

Adjust the turnbuckle to control horizontal sway of the implement.

After adjustment, retighten the lock nut.

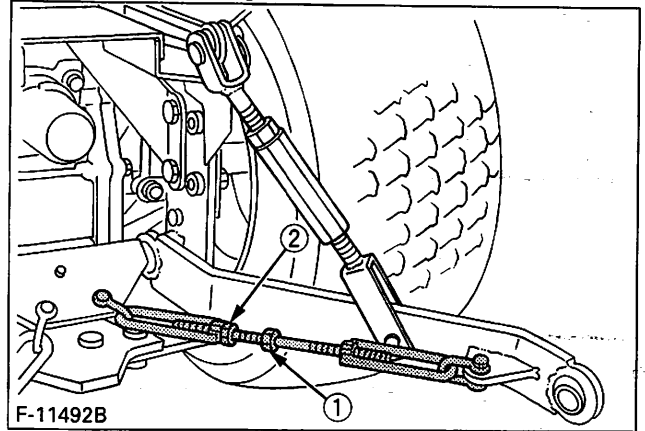


(1) Turnbuckle
(2) Lock nut

HITCH

⚠ WARNING

To avoid personal injury:

- Never pull from the top link, the rear axle or any point above the hitch. Doing so could cause the tractor to tip over rearward causing personal injury or death.

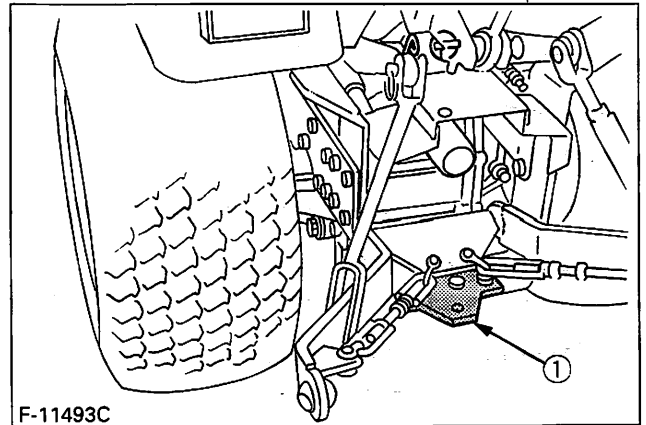

(1) Hitch

HYDRAULIC UNIT


3-POINT HITCH CONTROL SYSTEM

■Hydraulic Control

Operating the hydraulic control lever actuates the hydraulic lift arm, which controls the elevation of 3-point hitch mounted implement.

To lower implement, move the hydraulic control lever forward; to raise it, move the hydraulic control lever rearward.

Hydraulic control lever is automatically returned to neutral position when the implement is raised at top position or down at lowest position.

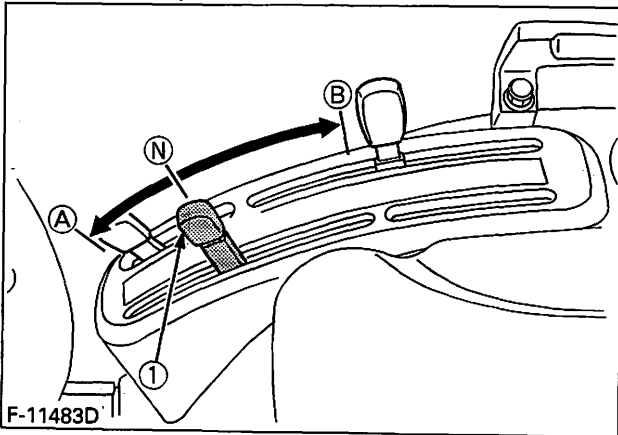


- (1) Hydraulic control lever
 (A) "DOWN"
 (N) "NEUTRAL"
 (B) "UP"

IMPORTANT :

- If the 3-point hitch can not be raised by setting the hydraulic control lever to the UP position after long term storage or when changing the transmission oil, follow these air bleeding procedures.
 - (1) Stop the engine.
 - (2) Set the hydraulic control lever to the down position and start the engine.
 - (3) Operate the engine at low idle speed for at least 30 seconds to bleed air from the system.
- Do not operate until the engine is warmed up. If operation is attempted when the engine is still cold, the hydraulic system may be damaged.
- If noises are heard when implement is lifting after the hydraulic control lever has been activated, the hydraulic mechanism is not adjusted properly. Unless corrected the unit will be damaged. Contact your KUBOTA Dealer for adjustment.

■Implement Lowering Limit

The implement lowering limit can be changed by shifting the locker.

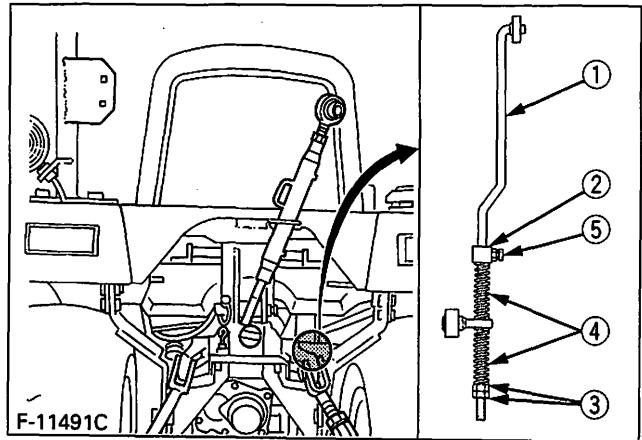

- (1) Feedback rod (2) Locker (3) Nuts
 (4) Spring (5) Bolt

● Lower Limit

The lower limit can be changed by adjusting the position of locker. Shifting the locker backward raises the lower limit and shifting it forward lowers the lower limit.

■ 3-point Hitch Lowering Speed




CAUTION

To avoid personal injury:

- Fast lowering speed may cause damage or injury. Lowering speed of implement should be adjusted to two or more seconds.

The lowering speed of the 3-point hitch can be controlled or locked in similar fashion to a water faucet, turn toward (A) to increase (B) to reduce and (C) firmly to the stop for lock.

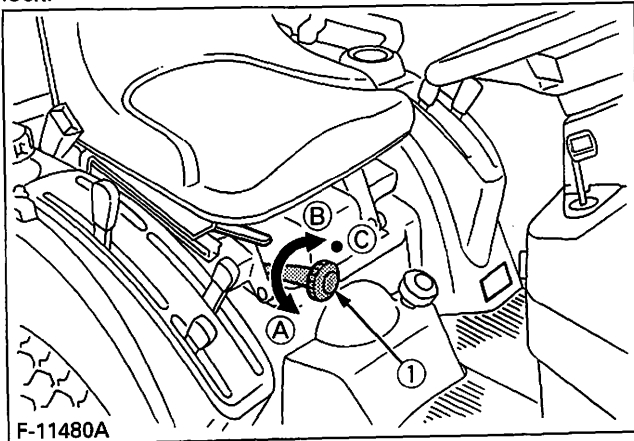

(1) 3-Point lowering speed knob (A) "FAST"
(B) "SLOW"
(C) "LOCK"

AUXILIARY HYDRAULICS


On the tractor hydraulic outlet is provided.

■ Hydraulic Outlet


Hydraulic outlet is useful when adding hydraulically operated equipment such as front end loader, front blade, etc.

When implement is attached

1. Remove the block cover.
2. Attach the block outlet cover. (option)
(The block outlet cover is standard part for KUBOTA Implements)
3. Route the implement inlet, outlet and return pipes (hoses) as shown in the illustration.

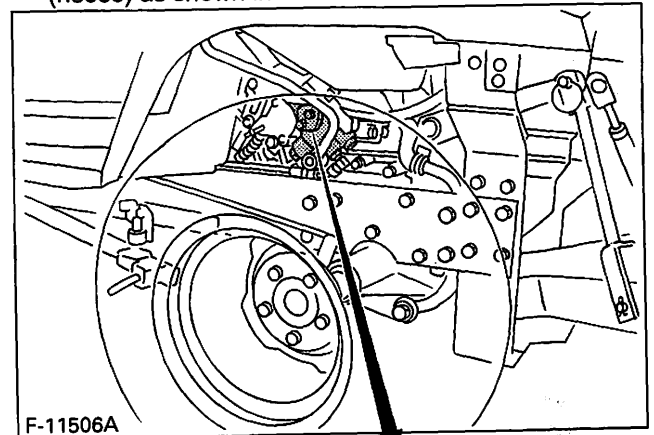

F-11506A

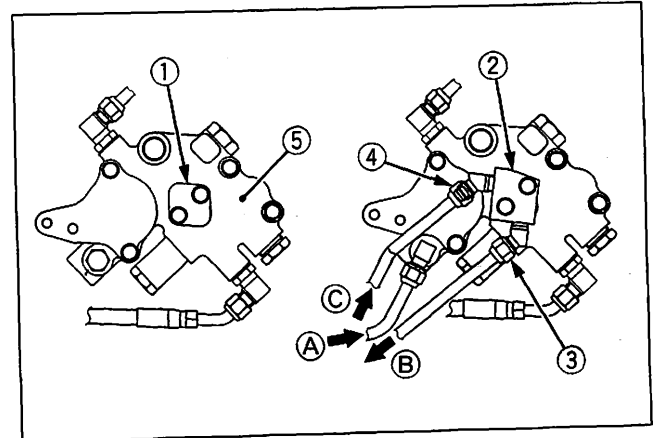


- | | |
|---------------------------------|---|
| (1) Block cover | (A) Return port |
| (2) Block outlet cover (option) | (B) To implement (outlet) |
| (3) Outlet | Max. flow |
| (4) Inlet | 17 L/min |
| (5) Hydraulic control valve | (4.5 U.S.gals./min) |
| | No relief valve in the hydraulic block. |
| | (C) From implement (inlet) |

IMPORTANT :


- For hydraulic outlet, be sure to use the control valve of the "Power beyond type" (with relief valve) and third line return to tank for the operation of hydraulic block.

MOWER LIFT LINKAGE SYSTEM

■ Cutting Height Control Dial

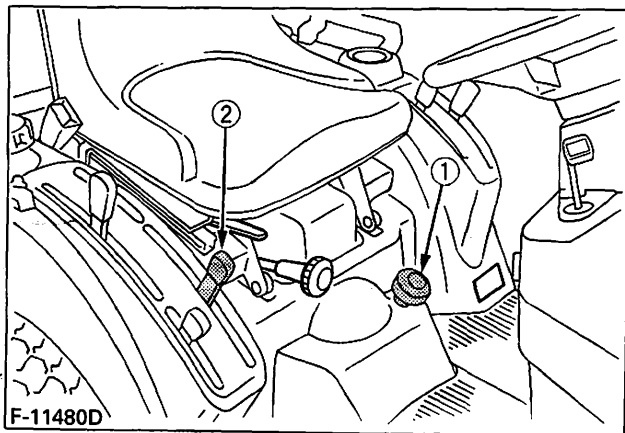

(1) Cutting height control dial
(2) Hydraulic control lever

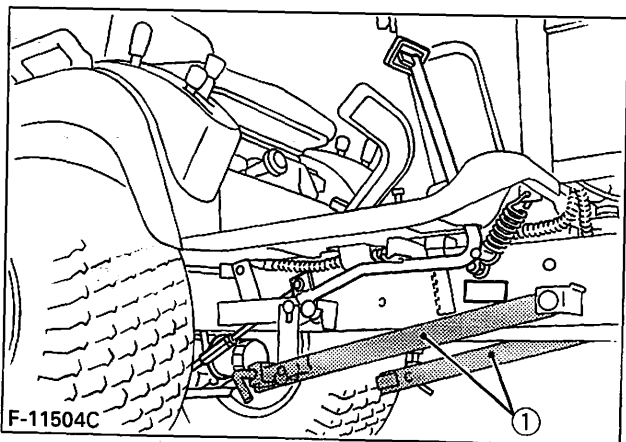

(1) Mower rear link

When mounting the Mid-mount mower, turn the cutting height control dial to the desired height.

For further details, refer to the operator's manual of ROTARY MOWER RCK60B-22BX, RCK54-22BX, RCK54-15BX and RCK48-15BX.




IMPORTANT :

When operating the tractor without Mid-mount mower:

1. Move the hydraulic lever rearward to raise the mower rear links to the highest position.
 2. Set the cutting height control dial to "TOP" position.
- Failure to do so could result in damage to the mower rear links.

Hydraulic Control Unit Use Reference Chart

In order to handle the hydraulics properly, the operator must be familiar with the following. Though this information may not be applicable to all types of implements and soil conditions, it is useful for general conditions.

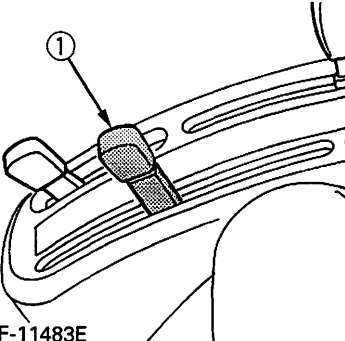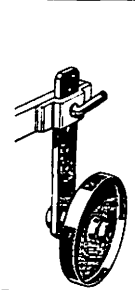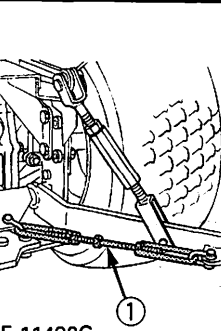Implement	Soil condition	 F-11483E (1) Hydraulic control lever	 F-2016A Gauge wheel	 F-11492C (1) Check chains	Remarks
Moldboard plow	Light soil Medium soil heavy soil	Hydraulic control	YES/NO	Loose	Adjust the check chains so that the implement can move 5 to 6 cm (2.0 to 2.4 in.) laterally. Check chains should be tight enough to prevent excessive implement movement when implement is in raised position.
Disc plow	—				
Harrower (spike, springtooth, disc type)	—				
Sub-soiler.....	—				
Weeder, ridger	—		YES		
Earthmover, digger scraper, manure fork rear carrier.....	—		YES/NO	Tighten	For implements with gauge wheels, lower the position control lever all way.
Mower (mid-and rear-mount type) Hayrake, tedder.....	—				

TIRES, WHEELS AND BALLAST

TIRES



WARNING

To avoid personal injury:

- Do not attempt to mount a tire on a rim. This should be done by a qualified person with the proper equipment.
- Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure shown in the operator's manual.

IMPORTANT :

- Do not use tires other than those approved by KUBOTA.
- When you intend to mount different size of tires from equipped ones, consult your dealer about front drive gear ratio for details. Excessive wear of tires may occur due to improper gear ratio.

■ Inflation Pressure

Though the tire pressure is factory-set to the prescribed level, it naturally drops slowly in the course of time. Thus, check it everyday and inflate as necessary.

[BX1500]

	Tire sizes	Inflation Pressure
Rear	24x12.00-12 Turf 24x12.00-12 Bar	100kPa(1.0kgf/cm ² , 14psi) 120kPa(1.2kgf/cm ² , 17psi)
Front	16x7.50-8 Turf 16x7.50-8 Bar	120kPa(1.2kgf/cm ² , 17psi) 180kPa(1.8kgf/cm ² , 25psi)

[BX1800, 2200]

	Tire sizes	Inflation Pressure
Rear	26x12.00-12 Turf 26x12.00-12 Bar	100kPa(1.0kgf/cm ² , 14psi) 120kPa(1.2kgf/cm ² , 17psi)
Front	18x8.50-8 Turf 18x8.50-8 Bar	120kPa(1.2kgf/cm ² , 17psi) 180kPa(1.8kgf/cm ² , 25psi)

NOTE :

- Maintain the maximum pressure in front tires, if using a front loader or when equipped with a full load of front weight.

WHEEL TREAD



CAUTION

To avoid personal injury:



- Support tractor securely on stands before removing a wheel.
- Never operate tractor with a loose rim, wheel, or axle.

■ Front Wheels

Front tread can not be adjusted.

IMPORTANT :

- Do not turn front discs to obtain wider tread.

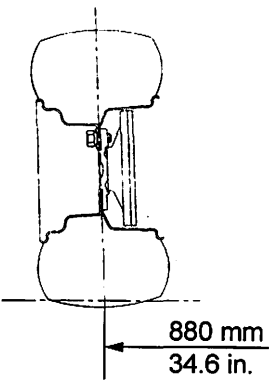
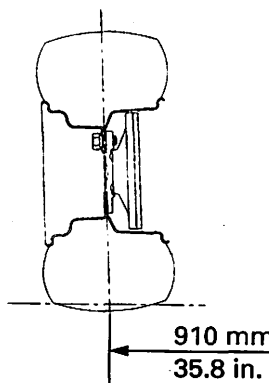
Models	BX1500	BX1800, BX2200
Tire	16x7.50-8 Turf, 16x7.50-8 Bar	18x8.50-8 Turf, 18x8.50-8 Bar
Tread	 <p>880 mm 34.6 in.</p>	 <p>910 mm 35.8 in.</p>

■ Rear Wheels

Rear tread width can not be adjusted.

IMPORTANT :

- Do not turn rear discs to obtain wider tread.

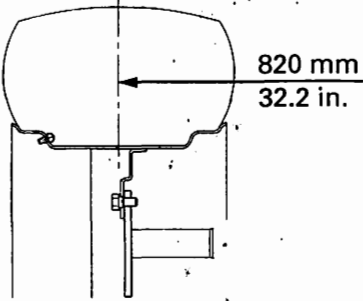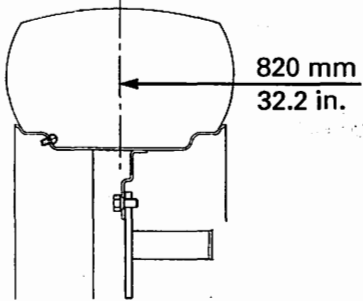
Models	BX1500	BX1800, BX2200
Tire	24x12.00-12 Turf, 24x12.00-12 Bar	26x12.00-12 Turf, 26x12.00-12 Bar
Tread		

IMPORTANT :

- Always attach tires as shown in the drawings.
- If not attached as illustrated, transmission parts may be damaged. When re-fitting or adjusting a wheel, tighten the bolts to the following torques then recheck after driving the tractor 200m (200yards), after one day (8hours) and thereafter every 50 hours (as per maintenance chart).

NOTE :

- Use the tapered bolts for wheels with beveled or tapered holes.

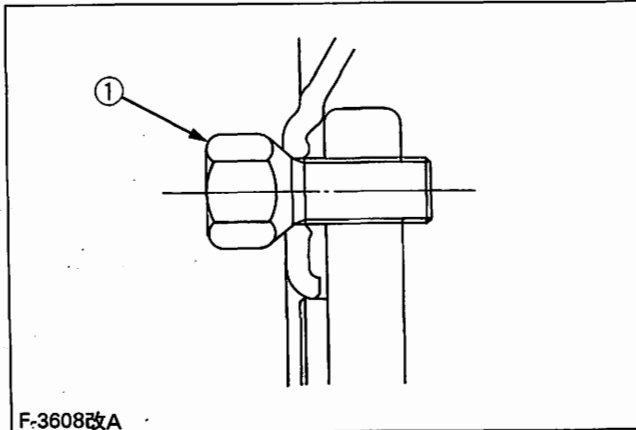

F-3608改A

(1) Bolt

Front 149.2 to 179.0 N-m
 (15.2 to 18.3 kgf-m)
 (110 to 132 ft-lbs.)
 Rear 108.5 to 130.2 N-m
 (11.1 to 13.3 kgf-m)
 (80 to 96 ft-lbs.)

BALLAST



CAUTION

To avoid personal injury:

- Additional ballast will be needed for transporting heavy implements. When the implement is raised, drive slowly over rough ground, regardless of how much ballast is used.
- Do not fill the front wheels with liquid to maintain steering control.

Front Ballast


Add weights if needed for stability and improve traction. Heavy pulling and heavy rear mounted implements tend to lift front wheels. Add enough ballast to maintain steering control and prevent tip over. Remove weight when no longer needed.

◆ Front End Weights (option)

The front end weights can be attached to the bumper. See your implement operator's manual for required number of weights or consult your local KUBOTA Dealer to use.

NOTE :

- Besides the weight, a front weight bracket and mounting bolt kit(s) are required for mounting the weight.

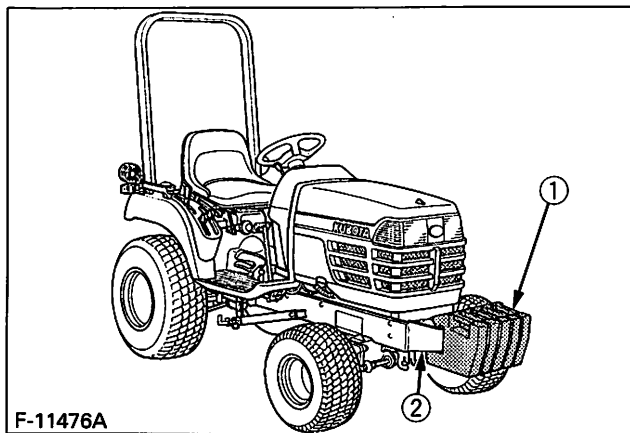

- (1) Front end weights
(2) Front weight bracket (option)

IMPORTANT :

- Do not overload tires.
- Add no more weight than indicated in chart.

Maximum weight	125 kg (275 lbs.)
----------------	-------------------

Rear Ballast

Add weight to rear wheels if needed to improve traction or for stability. The amount of rear ballast should be matched to job and the ballast should be removed when it is not needed.

The weight should be added to the tractor in the form of liquid ballast.


◆ Liquid Ballast in Rear Tires

Water and calcium chloride solution provides safe economical ballast. Used properly, it will not damage tires, tubes or rims. The addition of calcium chloride is recommended to prevent the water from freezing. Use of this method of weighting the wheels has the full approval of the tire companies. See your tire dealer for this service. Liquid weight per tire (75 percent filled)

Tire sizes	24x12.00-12 (BX1500)	26x12.00-12 (BX1800, 2200)
Slush free at -10°C (14°F) Solid at -30°C (-22°F) [Approx. 1 kg (2 lbs.) Cacl ₂ per 4 L (1 gal) of water]	35 kg (77 lbs.)	45 kg (99 lbs.)
Slush free at -24°C (-11°F) Solid at -47°C (-52°F) [Approx. 1.5 kg (3.5 lbs.) Cacl ₂ per 4 L (1 gal) of water]	38 kg (84 lbs.)	50 kg (110 lbs.)
Slush free at -47°C (-52°F) Solid at -52°C (-62°F) [Approx. 2.25 kg (5 lbs.) Cacl ₂ per 4 L (1 gal) of water]	44 kg (97 lbs.)	56 kg (123 lbs.)

IMPORTANT :

- Do not fill tires with water or solution more than 75% of full capacity (to the level of valve stem at 12 o'clock position).

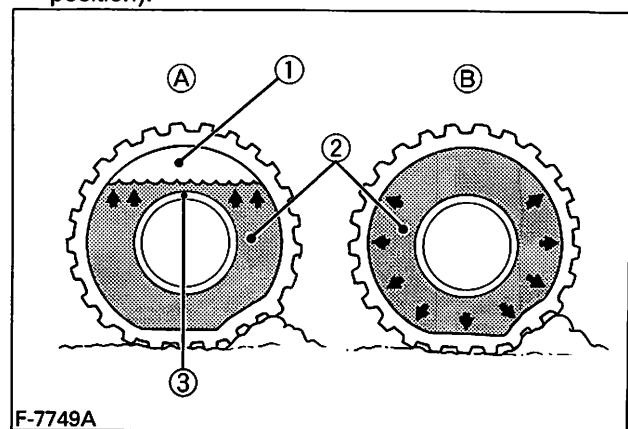

- (1) Air
(2) Water
(3) Valve stem
- (A) Correct : 75% Full
Air compresses like a cushion
(B) Incorrect : 100% Full
Water can not be compressed

- To avoid damage of transmission, do not use rear wheel weights and liquid ballast at the same time.

MAINTENANCE

SERVICE INTERVALS

No.	Items		Indication on hour meter								Since then	Ref. page				
			50	100	150	200	250	300	350	400					450	
1	Engine oil	Change	☉	○		○		○		○		○	every 100 Hr	44		
2	Engine oil filter	Replace	☉			○						○	every 200 Hr	48		
3	Transmission oil filter	Replace	☉							○			every 300 Hr	51		
4	Transmission fluid	Change	☉							○			every 300 Hr	50		
5	Transmission strainer	Clean								○			every 300 Hr	51		
6	Front axle case oil	Change								○			every 300 Hr	52		
7	Front axle pivot	Adjust										○	every 400 Hr	52		
8	Engine start system	Check	○	○	○	○	○	○	○	○	○	○	every 50 Hr	40		
9	Greasing	--	○	○	○	○	○	○	○	○	○	○	every 50 Hr	41		
10	Wheel bolt torque	Check	○	○	○	○	○	○	○	○	○	○	every 50 Hr	42		
11	Battery condition	Check		○		○			○			○	every 100 Hr	42	*5	
12	Air cleaner element	Clean		○		○			○			○	every 100 Hr	45	*1	@
		Replace											every 1 year	53	*2	
13	Fuel filter element	Check		○		○			○			○	every 100 Hr	45		@
		Replace											every 500 Hr	52		
14	Fan belt	Adjust		○		○			○			○	every 100 Hr	46		
15	HST neutral spring	Adjust		○		○			○			○	every 100 Hr	46		
16	Brake	Adjust		○		○			○			○	every 100 Hr	47		
17	Radiator hose and clamp	Check				○						○	every 200 Hr	48		
		Replace											every 2 year	54		
18	Power steering oil line	Check				○						○	every 200 Hr	50		
		Replace											every 2 year	54		
19	Fuel line	Check		○		○			○			○	every 100 Hr	45		@
		Replace											every 2 year	54		
20	Intake air line	Check				○						○	every 200 Hr	49		@
		Replace											every 2 year	54	*3	
21	Toe-in	Adjust				○						○	every 200 Hr	49		
22	Engine valve clearance	Adjust											every 800 Hr	52	*4	
23	Fuel injection nozzle Injection pressure	Check											every 1500 Hr	53	*4	@
24	Injection pump	Check											every 3000 Hr	53	*4	@
25	Cooling system	Flush											every 2 year	53		
26	Coolant	Change											every 2 year	53		
27	Fuel system	Bleed												54		
28	Fuse	Replace											Service as required	55		
29	Light bulb	Replace											Service as required	55		

No.	Items		Indication on hour meter					Since then	Ref. page		
			500	550	600	650	700				
1	Engine oil	Change	○		○		○	every 100 Hr	44		
2	Engine oil filter	Replace			○			every 200 Hr	48		
3	Transmission oil filter	Replace			○			every 300 Hr	51		
4	Transmission fluid	Change			○			every 300 Hr	50		
5	Transmission strainer	Clean			○			every 300 Hr	51		
6	Front axle case oil	Change			○			every 300 Hr	52		
7	Front axle pivot	Adjust						every 400 Hr	52		
8	Engine start system	Check	○	○	○	○	○	every 50 Hr	40		
9	Greasing	-	○	○	○	○	○	every 50 Hr	41		
10	Wheel bolt torque	Check	○	○	○	○	○	every 50 Hr	42		
11	Battery condition	Check	○		○		○	every 100 Hr	42	*5	
12	Air cleaner element	Clean	○		○		○	every 100 Hr	45	*1	@
		Replace						every 1 year	53	*2	
13	Fuel filter element	Check	○		○		○	every 100 Hr	45		@
		Replace	○					every 500 Hr	52		
14	Fan belt	Adjust	○		○		○	every 100 Hr	46		
15	HST neutral spring	Adjust	○		○		○	every 100 Hr	46		
16	Brake	Adjust	○		○		○	every 100 Hr	47		
17	Radiator hose and clamp	Check			○			every 200 Hr	48		
		Replace						every 2 year	54		
18	Power steering oil line	Check			○			every 200 Hr	50		
		Replace						every 2 year	54		
19	Fuel line	Check	○		○		○	every 100 Hr	45		@
		Replace						every 2 year	54		
20	Intake air line	Check			○			every 200 Hr	49		@
		Replace						every 2 year	54	*3	
21	Toe-in	Adjust			○			every 200 Hr	49		
22	Engine valve clearance	Adjust						every 800 Hr	52	*4	
23	Fuel injection nozzle injection pressure	Check						every 1500 Hr	53	*4	@
24	Injection pump	Check						every 3000 Hr	53	*4	@
25	Cooling system	Flush						every 2 year	53		
26	Coolant	Change						every 2 year	53		
27	Fuel system	Bleed							54		
28	Fuse	Replace						Service as required	55		
29	Light bulb	Replace							55		

IMPORTANT :

- The jobs indicated by ⊙ must be done after the first 50 hours of operation.
- *1 Air cleaner should be cleaned more often in dusty conditions than in normal conditions.
- *2 Every year or every 6 times of cleaning.
- *3 Replace only if necessary.
- *4 Consult your local KUBOTA Dealer for this service.
- *5 When the battery is used for less than 100 hours per year, check the battery condition by reading the indicator annually.
- The items listed above (@ marked) are registered as emission related critical parts by KUBOTA in the U.S.EPA nonroad emission regulation. As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the above instruction.
Please see Warranty Statement in detail.

LUBRICANTS

No.	Locations	Capacities			Lubricants	
		BX1500	BX1800	BX2200		
1	Fuel	17 L (4.5 U.S.gals.)	21 L (5.5 U.S.gals.)		No. 2-D diesel fuel No. 1-D diesel fuel if temperature is below -10 °C (14 °F)	
2	Coolant (with recovery tank)	2.9 L (3.1 U.S.qts.)		3.5 L (3.7 U.S.qts.)	Fresh clean water with anti-freeze	
3	Engine crankcase	1.9 L (2.0 U.S.qts.)		2.5 L (2.6 U.S.qts.)	• Engine oil : API Service Classification CD, CE or CF	
					Above 25 °C (77 °F)	SAE30, SAE10W-30 or 10W-40
					0 to 25 °C (32 to 77 °F)	SAE20, SAE10W-30 or 10W-40
					Below 0 °C (32 °F)	SAE10W, SAE10W-30 or 10W-40
4	Transmission case	10.1 L (2.7 U.S.gals.)			• KUBOTA SUPER UDT fluid*	
5	Front axle case (4WD only)	2.3 L (2.4 U.S.qts.)	4.7 L (5.0 U.S.qts.)		• KUBOTA SUPER UDT fluid* or SAE 80 - SAE90 gear oil	
6	Greasing	No. of greasing points			Capacity	Type of grease
	Battery terminal	2			moderate amount	Multipurpose type grease
	Speed control pedal	1			until grease overflow	

NOTE: *KUBOTA SUPER UDT --- KUBOTA original transmission hydraulic fluid

NOTE :

- **Engine Oil:**
Oil used in the engine should have an American Petroleum Institute (API) service classification and Proper SAE Engine Oil according to the ambient temperatures as shown above:
- **Transmission oil:**
The oil used to lubricate the transmission is also used as hydraulic fluid. To insure proper operation of the hydraulic system and complete lubrication of the transmission, it is important that a multi-grade transmission fluid be used in this system. We recommend the use of **KUBOTA SUPER UDT** fluid for optimum protection and performance.
(Consult your local KUBOTA Dealer for further detail.)
Do not mix different brands or grades.
- Indicated capacity of water and oil are manufacturer's estimate.

PERIODIC SERVICE

CAUTION

To avoid personal injury:

- Do not work under any hydraulically supported devices. They can settle, suddenly leak down, or be accidentally lowered. If necessary to work under tractor or any machine elements for servicing or adjustment, securely support them with stands or suitable blocking beforehand.

HOW TO OPEN THE HOOD


CAUTION

To avoid personal injury from contact with moving parts;

- Never open the hood or engine side cover while the engine is running.
- Do not touch muffler or exhaust pipes while they are hot;
Severe burns could result.

■ Hood

To open the hood, pull the knob to release the latch and open the hood.

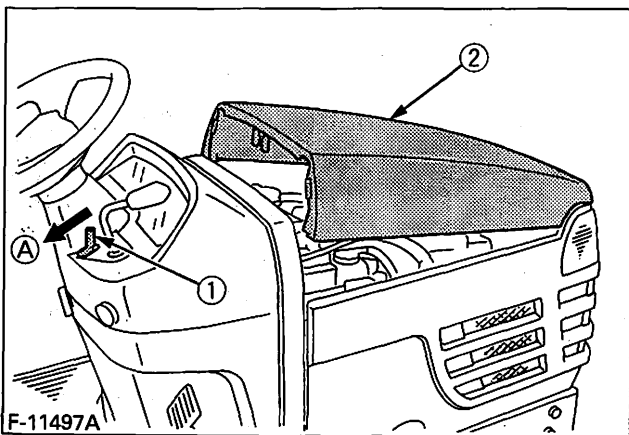


(1) Knob
(2) Hood


(A) "PULL"

■ Engine Cover

To remove the engine cover, remove the bolts, loosen the nuts and pull forward as indicated by arrows below. It is not necessary to detach the engine cover for daily check.

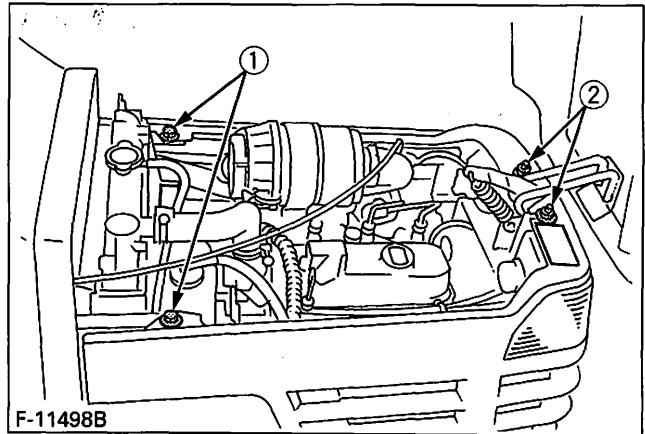

(1) Bolts
(2) Nuts

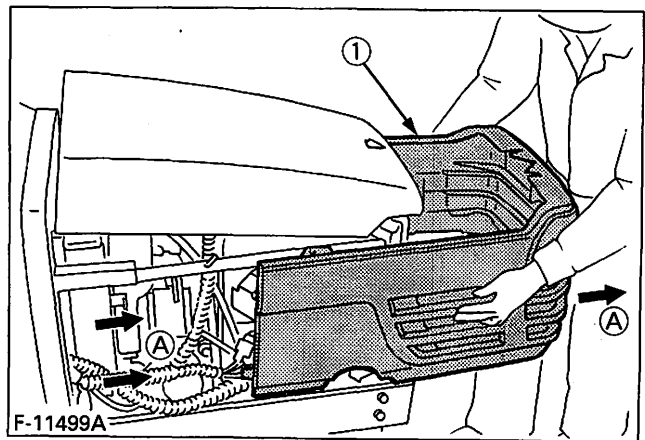

(1) Engine cover

(A) "PULL"

NOTE :

- When reinstall the engine cover, tighten the bolts and nuts to the following torques.
- 3.9 to 5.8 N-m (0.4 to 0.6 kgf-m, 2.9 to 4.3 ft-lbs)

DAILY CHECK

For your own safety and maximum service life of the machine, make a thorough daily inspection before operating the machine or starting the engine.



CAUTION

To avoid personal injury:

- Be sure to check and service the tractor on a firm, flat and level surface with the engine stopped and the parking brake "ON" and implements lowered to the ground.

Walk Around Inspection

Look around and under the tractor for such items as loose bolts, trash build-up, oil or coolant leaks, broken or worn parts.

Checking and Refueling



CAUTION



To avoid personal injury:

- Do not smoke while refueling.
- Be sure to stop the engine and remove the key before refueling.

To avoid allergic skin reaction:

- Wash hands immediately after contact with diesel fuel.

1. Turn the key switch to "ON", check the amount of fuel by fuel gauge.
2. Fill fuel tank when fuel gauge shows 1/4 or less fuel in tank.
3. Use grade No.2-Diesel fuel at temperatures above -10 °C (14 °F).
Use grade No.1-Diesel fuel at temperatures below -10 °C (14 °F).

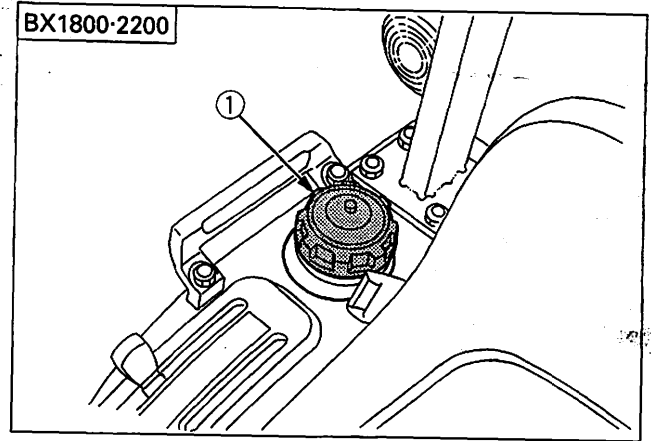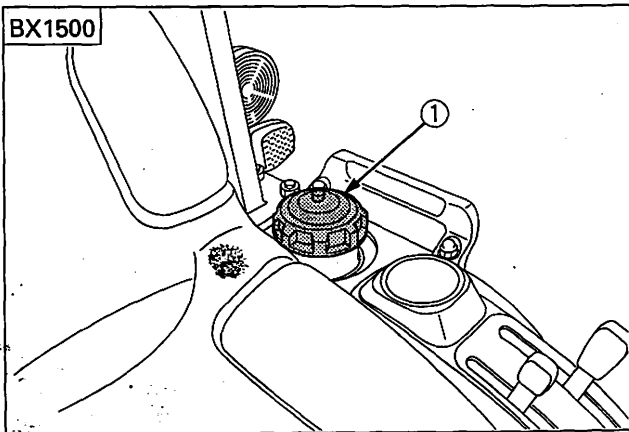

(1) Fuel tank cap

Fuel tank capacity	BX1500	17L (4.5 U.S.gals.)
	BX1800 BX2200	21L (5.5 U.S.gals.)

IMPORTANT :

- Do not permit dirt or trash or water to get into the fuel system.
- Be careful not to let the fuel tank become empty, otherwise air will enter the fuel system, necessitating bleeding before next engine start.
- Be careful not to spill fuel during refueling. If a spill should occur, wipe it off at once, or it may cause a fire.
- To prevent condensation (water accumulation) in the fuel tank, fill the tank before parking overnight.

NOTE :

- No.2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service.
- Grade of Diesel Fuel Oil According to ASTM D975 (SAE J313 JUN87)

Flash Point, °C (°F)	Water and Sediment, volume %	Carbon Residue on, 10 percent Residuum, %	Ash, weight %
Min	Max	Max	Max
52 (125)	0.05	0.35	0.01

Distillation Temperatures, °C (°F) 90% Point		Viscosity Kinematic cSt or mm ² /s at 40 °C		Viscosity Saybolt, SUS at 100 °F		Sulfur weight %	Copper-Strip Corrosion	Cetane Number
Min	Max	Min	Max	Min	Max	Max	Max	Min
282 (540)	338 (640)	1.9	4.1	32.6	40.1	0.50	No.3	40



■ Checking Engine Oil Level

CAUTION

To avoid personal injury:

- Be sure to stop the engine and remove the key before checking the oil level.


1. Park the machine on a firm, flat and level surface.
2. Check engine oil before starting the engine, or, after 5 minutes or more when the engine has been stopped.
3. To check the oil level, draw out the dipstick, wipe it clean, replace it, and draw it out again. Check to see that the oil level lies between the two notches. If the level is too low, add new oil to the prescribed level at the oil inlet.
(See "LUBRICANTS" in Maintenance section)

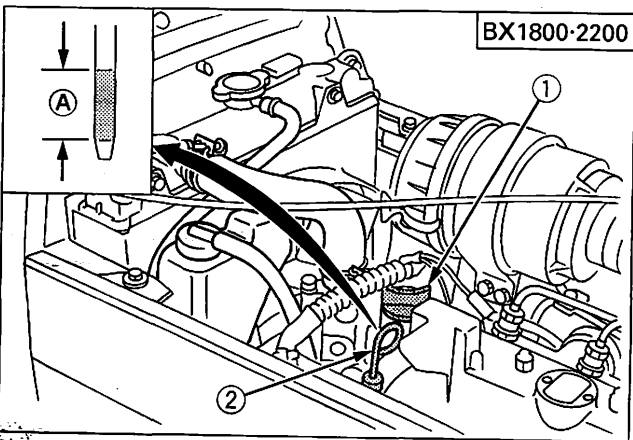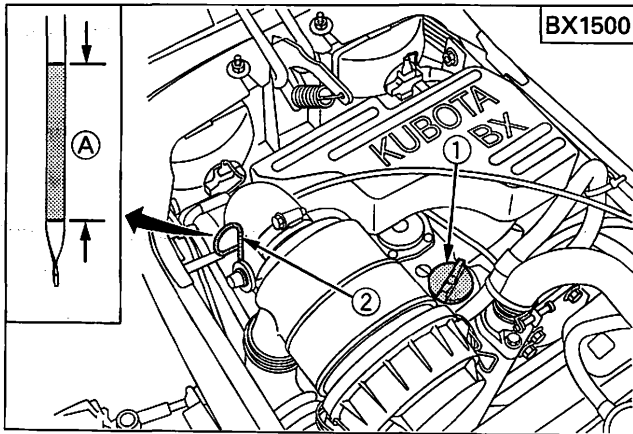

(1) Oil inlet (A) Oil level is acceptable within this range.
(2) Dipstick

■ Checking Transmission Fluid Level

1. Park the machine on a flat surface, lower the implement and shut off engine.
2. To check the oil level, draw out the dipstick, wipe it clean, replace it, and draw it out again. Check to see that the oil level lies between the two notches. If the level is too low, add new oil to the prescribed level at the oil inlet.
(See "LUBRICANTS" in Maintenance section)

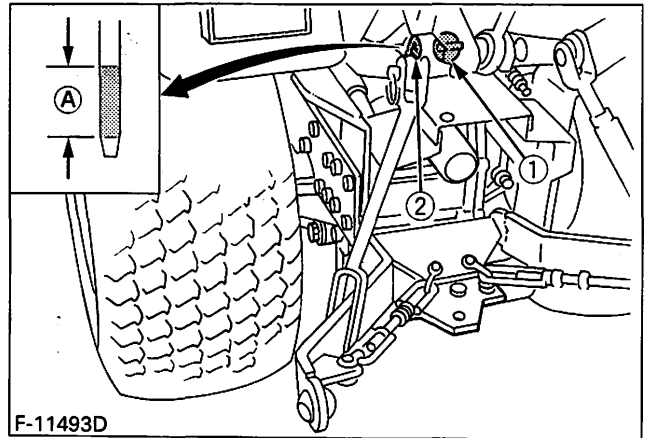

(1) Oil inlet (A) Oil level is acceptable within this range.
(2) Oil inlet

IMPORTANT :

- If oil level is low, do not run engine.

IMPORTANT :

- When using an oil of different maker or viscosity from the previous one, remove all of the old oil and oil filter. Never mix two different types of oil.
- If oil level is low, do not run engine.

■ Checking Coolant Level

IMPORTANT :

- If the radiator cap has to be removed, follow the caution above and securely retighten the cap.
- Use clean, fresh water and anti-freeze to fill the recovery tank.
- If water should leak, consult your local KUBOTA Dealer.




CAUTION

To avoid personal injury:

- Be sure to stop the engine and remove the key before checking coolant level.
- Do not remove the radiator cap while coolant is hot. When cool, slowly rotate cap to the first stop and allow sufficient time for excess pressure to escape before removing cap completely.

1. Check to see that the coolant level is between the "H" and "L" marks of recovery tank.
2. When the coolant level drops due to evaporation, add water only. In case of leakage, add antifreeze and water in the specified mixing ratio up to the "H" level. (See "Flush Cooling System and Changing Coolant" in every 2 years maintenance)

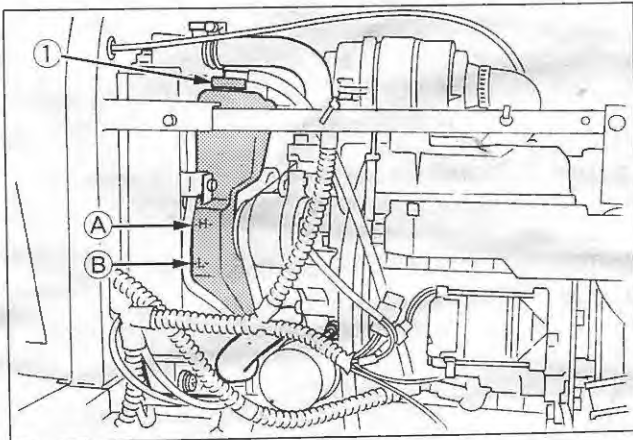

(1) Radiator cap (A) "H" (B) "L"

IMPORTANT :

- If the radiator cap has to be removed, follow the caution above and securely retighten the cap.
- Use clean, fresh water and anti-freeze to fill the radiator.
- If water should leak, consult your local KUBOTA Dealer.

■ Cleaning Panel and Radiator Screen




CAUTION

To avoid personal injury:

- Be sure to stop the engine and remove the key before removing the screen.
1. Check panel screen to be sure they are clean from debris.
 2. Detach the radiator screen, and then remove all the foreign material.

NOTE :


- If the dust or chaff is accumulated in the battery compartment, open the panel and clean completely.

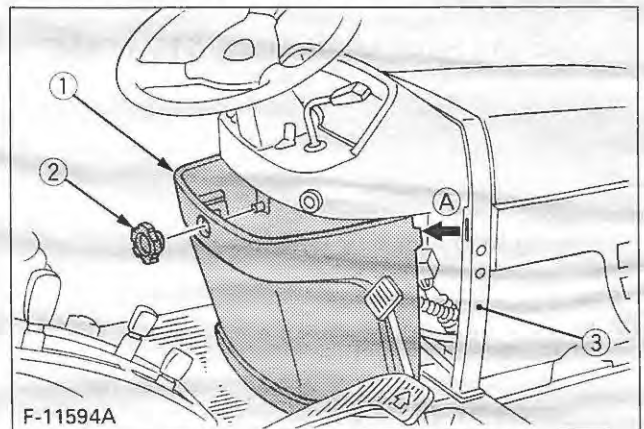

F-11594A

- (1) Panel
(2) Knob
(3) Center pillar

(A) "DETACH"

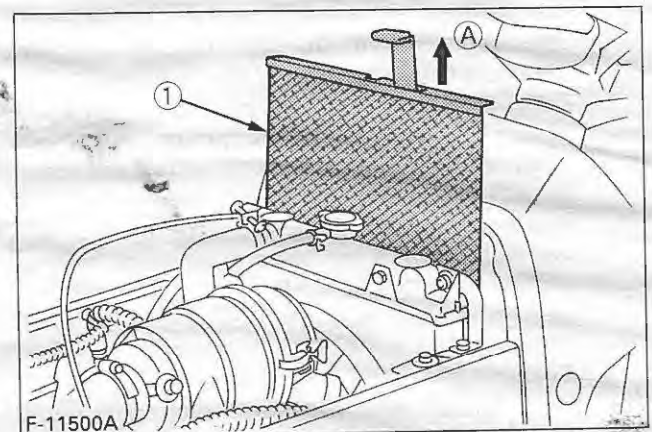

F-11500A

- (1) Radiator screen

(A) "DETACH"

IMPORTANT :

- Panel and radiator screen must be clean from debris to prevent engine from overheating and to allow good air intake for air cleaner.
- Be sure to reinstall the panel on the pillar completely to prevent the invasion of dust.

■ Checking Brake Pedal

1. Inspect the brake pedal for free travel, and smooth operation.
2. Adjust if incorrect measurement is found:
(See "Adjusting Brake Pedal" in every 100 hours maintenance.)

■ Checking Gauges, Meter and Easy Checker

1. Inspect the instrument panel for broken gauge(s), meter(s) and Easy Checker™ lamps.
2. Replace if broken.

■ Checking Head Light, Hazard Light etc.

1. Inspect the lights for broken bulbs and lenses.
2. Replace if broken.

■ Checking and Cleaning of Electrical Wiring and Battery Cables



CAUTION

To avoid personal injury:

- A loosened terminal or connector, or damaged wire may affect the performance of electrical components or cause short circuits. Leakage of electricity could result in a fire hazard, a dead battery or damage to electrical components. Replace damaged wires or connections promptly. If a fuse blows soon after replacement, **DO NOT USE A LARGER THAN RECOMMENDED FUSE OR BYPASS THE FUSE SYSTEM.** Many wiring connections are protected by waterproof plugs, plug and unplug these connections carefully and make sure they are sealed correctly after assembly. Accumulation of dust, chaff or spilled fuel deposits around the battery, electrical wiring, engine or exhaust system are a fire hazard. **CLEAN THESE AREAS BEFORE STARTING WORK.**

To avoid premature electrical malfunctions **DO NOT APPLY** high pressure water directly to battery, wiring, connectors, electrical components or instrument panel.

Inspect the following Regularly:

1. Check wiring for chafed or cracked insulation.
2. Check wiring harness clamps. Replace if necessary.
3. Check connectors and terminals for looseness, contamination or overheated (discolored) connections.
4. Check instrument panel for correct operation of switches and gauges.

Consult your Kubota Dealer regarding maintenance, diagnosis and repair.

■ Checking Seat Belt and ROPS

1. Always check condition of seat belt and ROPS attaching hardware before operating tractor.
2. Replace if damaged.

EVERY 50 HOURS

■ Checking Engine Start System



CAUTION

To avoid personal injury:

- Do not allow anyone near the tractor while testing.
- If the tractor does not pass the test do not operate the tractor.

◆ Preparation before testing.


1. Sit on operator's seat.
2. Set the parking brake and stop the engine.
3. Shift the range gear shift lever in "NEUTRAL" position.
4. Shift the PTO clutch lever to "OFF" position.

◆ Test 1: Switch for the range gear shift lever

1. Shift the range gear shift lever to "LOW" or "HIGH" position.
2. Turn the key to "START" position.
3. The engine must not crank.
4. If it cranks, consult your local KUBOTA Dealer for this service.

◆ **Test 2: Switch for the PTO clutch lever**

1. Shift the range gear shift lever to "NEUTRAL" position.
2. Shift the PTO clutch lever to "ON" position.
3. Turn the key to "START" position.
4. The engine must not crank.
5. If it cranks, consult your local KUBOTA Dealer for this service.

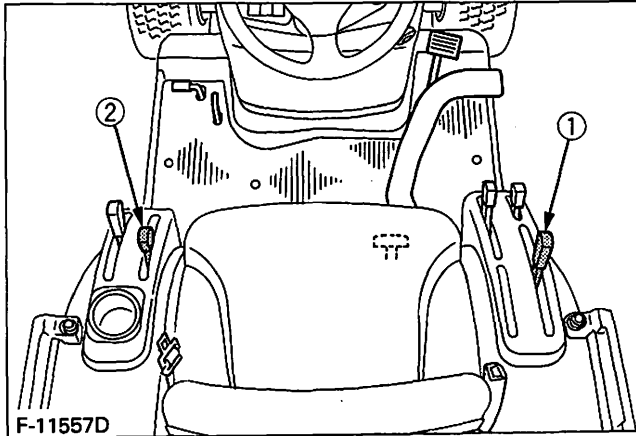

- (1) Range gear shift lever (Hi-Lo)
- (2) PTO clutch control lever

◆ **Test 3: Switches for the operator's seat and the range gear shift lever**


1. Sit on the operator's seat.
2. Start the engine.
3. Shift the range gear shift lever to "HIGH" or "LOW" position.
4. Stand up. (Do not get off the machine.)
5. The engine must shut off after approximately 1 second.
6. If it does not stop, consult your local KUBOTA Dealer for this service.

◆ **Test 4: Switches for the operator's seat and the PTO clutch lever**


1. Sit on the operator's seat.
2. Start the engine.
3. Engage the PTO clutch lever.
4. Stand up. (Do not get off the machine.)
5. The engine must shut off after approximately 1 second.
6. If it does not stop, consult your local KUBOTA Dealer for this service.

■ **Lubricating Grease Fittings**

Apply a small amount of multipurpose grease to the following points every 50 hours.

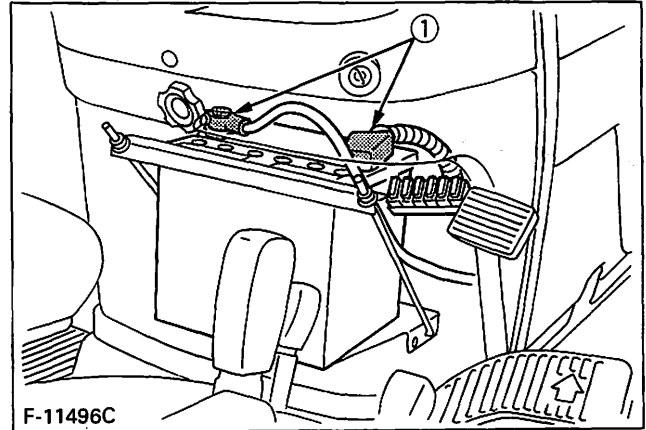

- (1) Battery terminals

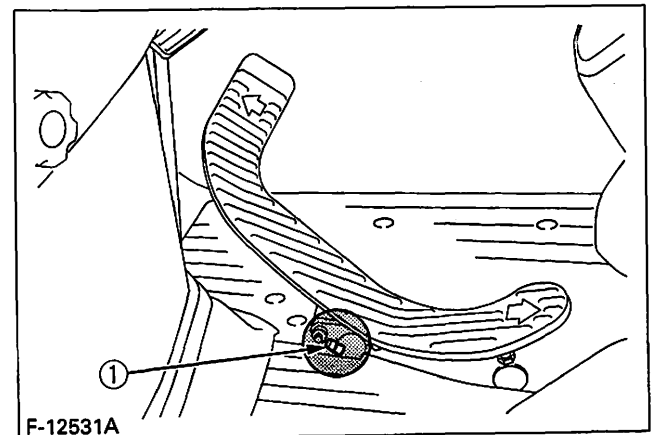

- (1) Grease fitting (Speed control pedal)


■ **Checking Wheel Bolt Torque**

CAUTION


To avoid personal injury:

- Never operate tractor with a loose rim, wheel, or axle.
- Any time bolts are loosened, retighten to specified torque.
- Check all bolts frequently and keep them tight.

Check wheel bolts regularly especially when new. If they are loose, tighten them as follows.

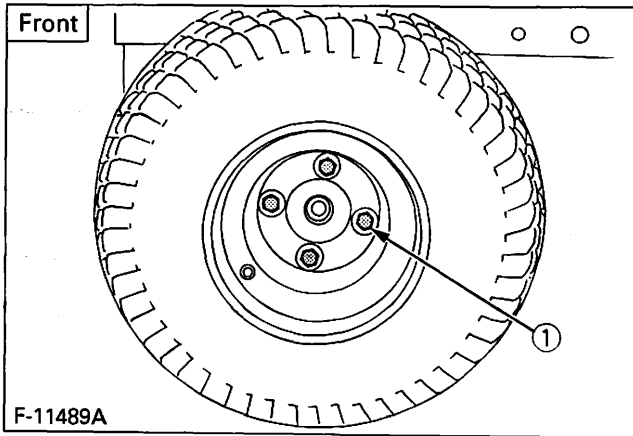

(1) 149.2 to 179.0 N-m (15.2 to 18.3 kgf-m, 110 to 132 ft-lbs.)

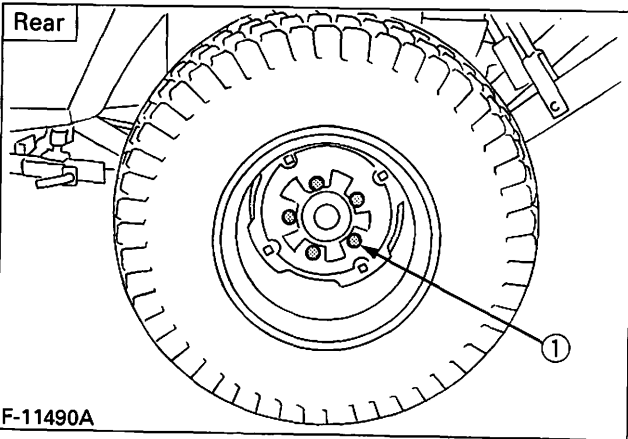

(1) 108.5 to 130.2 N-m (11.1 to 13.3 kgf-m, 80 to 96 ft-lbs.)

EVERY 100 HOURS

■ **Battery**

DANGER

To avoid the possibility of battery explosion:

For the refillable type battery, follow the instructions below.

- Do not use or charge the refillable type battery if the fluid level is below the LOWER (lower limit level) mark. Otherwise, the battery component parts may prematurely deteriorate, which may shorten the battery's service life or cause an explosion. Check the fluid level regularly and add distilled water as required so that the fluid level is between the UPPER and LOWER levels.

CAUTION


To avoid personal injury:

- Never remove the vent caps while the engine is running.
- Keep electrolyte away from eyes, hands and clothes. If you are splattered with it, wash it away completely with water immediately and get medical attention.
- Wear eye protection and rubber gloves when working around the battery.

Mishandling the battery shortens the service life and adds to maintenance costs.

The original battery is maintenance free, but needs some servicing.

If the battery is weak, the engine will be difficult to start and the lights will be dim. It is important to check the battery periodically.

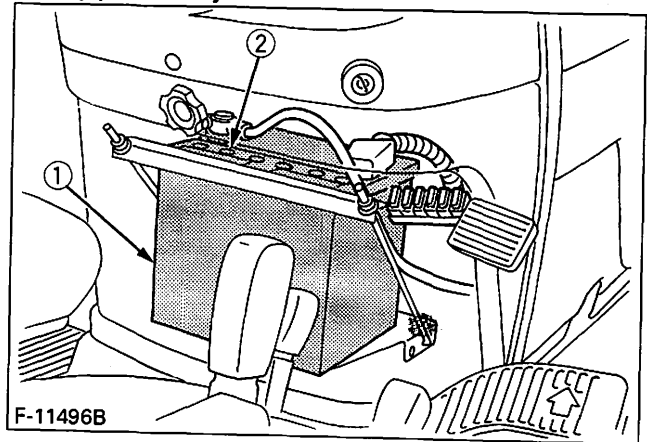

(1) Battery
(2) Vent cap

◆ **How to read the indicator (65D23L, 75D23L)**

Check the battery condition by reading the indicator.

State of indicator display	
Green	Specific gravity of electrolyte and quality of electrolyte are both in good condition.
Black	Needs charging battery.
White	Needs changing battery.

When the indicator turns white, do not charge the battery but replace it with new one.

◆ **Battery Charging**




CAUTION

To avoid personal injury:

- When the battery is being activated, hydrogen and oxygen gases in the battery are extremely explosive. Keep open sparks and flames away from the battery at all times, especially when charging the battery.
- When charging the battery, ensure the vent caps are securely in place. (if equipped)
- When disconnecting the cable from the battery, start with the negative terminal first.
- When connecting the cable to the battery, start with the positive terminal first.
- Never check battery charge by placing a metal object across the posts.
Use a voltmeter or hydrometer.
(For accessible maintainable type batteries with removable vent caps.)

1. Make sure each electrolyte level is to the bottom of vent wells, if necessary add distilled water in a well-ventilated area.

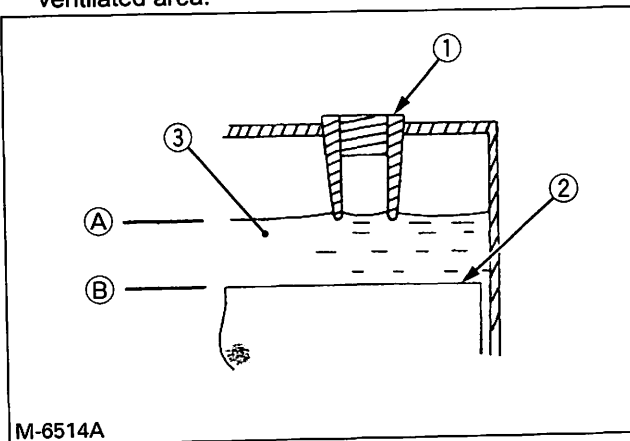

M-6514A

- (1) Vent well
- (2) Separator
- (3) Electrolyte

- (A) Highest level
- (B) Lowest level

2. The water in the electrolyte evaporates during recharging. Liquid shortage damages the battery. Excessive liquid spills over and damages the tractor body.
3. To slow charge the battery, connect the battery positive terminal to the charger positive terminal and the negative to the negative, then recharge in the standard fashion.
4. A boost charge is only for emergencies. It will partially charge the battery at a high rate and in a short time. When using a boost-charged battery, it is necessary to recharge the battery as early as possible. Failure to do this will shorten the battery's service life.
5. When the specific gravity of electrolyte is between 1.27 and 1.29 the charging is completed.
6. When exchanging an old battery for a new one, use battery of equal specification shown in Table 1.

Table 1

Tractor Type	Battery Type	Volts (V)	Reserve Capacity (min)	Cold Cranking Amps
BX1500	26/26R	12	62	435
BX1800				
	65D23L*	12	111	490
BX2200	526RA	12	80	535
	75D23L*	12	90	550

◆ **Battery for storage**

1. When storing the tractor for a long period, remove the battery from tractor, adjust the electrolyte to the proper level and store in a dry place out of direct sunlight.
2. The battery self-discharges while it is stored. Recharge it once every three months in hot seasons and once every six months in cold seasons.
3. (For non-accessible maintenance-free type batteries.) Maintenance-free, non-accessible batteries are designed to eliminate the need to add water. Yet the volume of electrolyte above plates may eventually become depleted due to abnormal conditions such as high heat or improper regulator setting. Use a voltmeter to check the state of charge. (See reference chart below to determine if charging is necessary.)

Battery voltage	Reference state of charge
12.6	100%(Full charge)
12.4	75%
12.2	50%
12.0	25%
11.8	0%

■ Changing Engine Oil



CAUTION

To avoid personal injury:


- Be sure to stop the engine and remove the key before changing the oil.
- Allow engine to cool down sufficiently, oil can be hot and can burn.

1. To drain the used oil, remove the drain plug at the bottom of the engine and drain the oil completely into the oil pan.
All the used oil can be drained out easily when the engine is still warm.
2. After draining reinstall the drain plug.
3. Fill with the new oil up to the upper notch on the dipstick.
(See "LUBRICANTS" in Maintenance section)
4. Properly dispose of used oil.

Oil capacity with filter	BX1500 BX1800	1.9 L (2.0 U.S.qts.)
	BX2200	2.5 L (2.6 U.S.qts.)

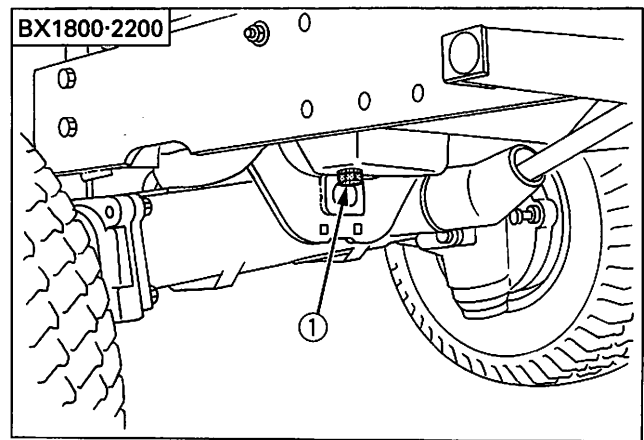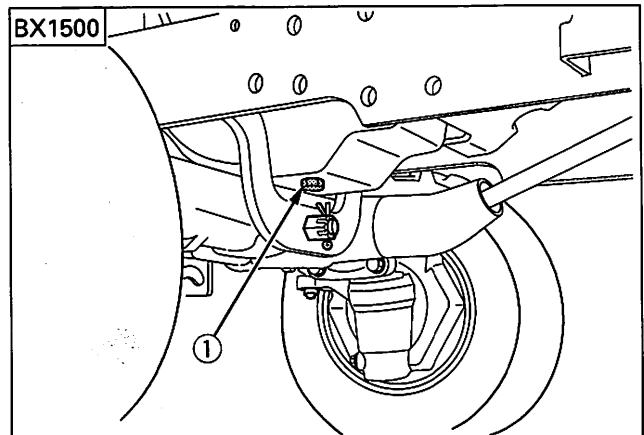

(1) Drain plug

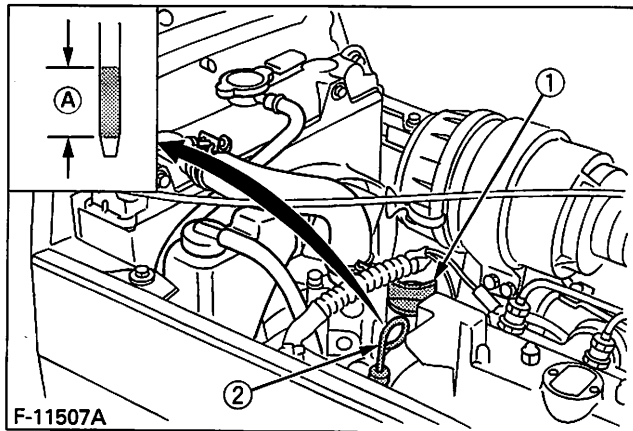

F-11507A

(1) Oil inlet
(2) Dipstick

(A) Oil level is acceptable within this range

■ Cleaning Air Cleaner Element

CAUTION


To avoid personal injury:

- Be sure to stop the engine and remove the key before cleaning air cleaner element.

1. Remove the air cleaner cover and the element.
2. Clean the element:
 - (1) When dry dust adheres to the element, blow compressed air from the inside, turning the element. Pressure of compressed air must be under 205kPa (2.1kgf/cm², 30psi).
 - (2) When carbon or oil adheres to the element, soak the element in detergent for 15 minutes then wash it several times in water, rinse with clean water and dry it naturally. After element is fully dried, inspect inside of the element with a light and check if it is damaged or not. (referring to the instructions on the label attached to the case.)
3. Replace air cleaner element:
Once yearly or after every sixth cleaning, whichever comes first.

NOTE :

- Checked to see if the evacuator valve is blocked with dust.

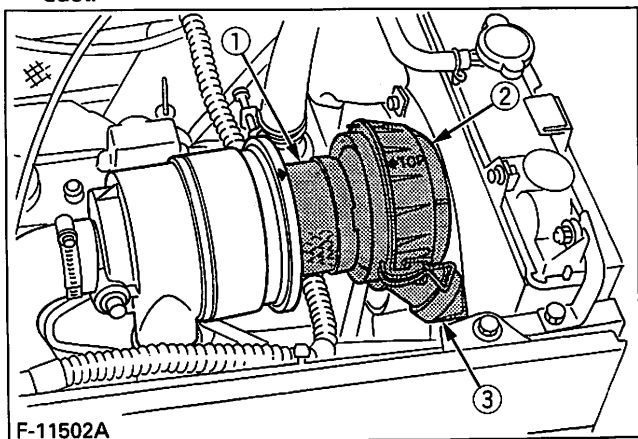

- (1) Element
(2) Cover
(3) Evacuator valve

IMPORTANT :

- The air cleaner uses a dry element, never apply oil.
- Do not run the engine with filter element removed.
- Align the arrow marks when reinstalling the cover. If the cover is improperly fitted, dust passes by the baffle and directly adheres to the element.

◆ Evacuator Valve

Open the evacuator valve once a week under ordinary conditions - or daily when used in a dusty place - to get rid of large particles of dust and dirt.

■ Checking Fuel Lines and Fuel Filter

CAUTION

To avoid personal injury:



- Stop the engine and remove the key before checking fuel lines and fuel filter.
- Check the fuel lines periodically. The fuel lines are subject to wear and aging. Fuel may leak out onto the running engine, causing a fire.


The fuel line connections should be checked annually or every 100 service hours, whichever occurs first.

1. The fuel line is made of rubber and ages regardless of service period.
2. After inspection, if the fuel line and clamps are found damaged or deteriorated, replace them.
3. Check fuel filter, if it is clogged by debris or contaminated by water, replace it.


IMPORTANT :

- When the fuel line is disconnected for maintenance or repair, plug both ends of the fuel line with a clean plug of suitable size to prevent dust and dirt from entering. Particular care must be taken not to admit dust and dirt into the fuel system. Entrance of dust and dirt causes malfunction of the fuel pump.

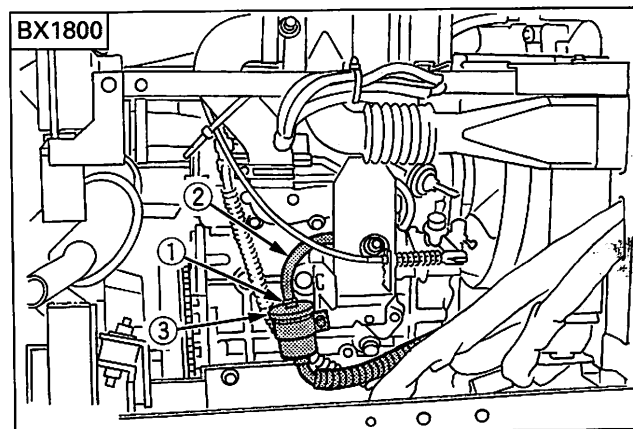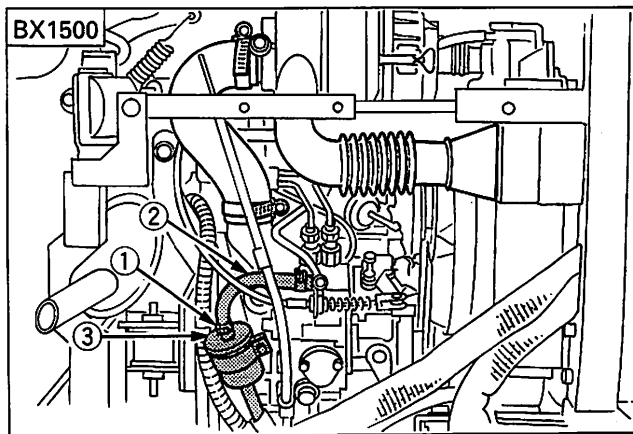

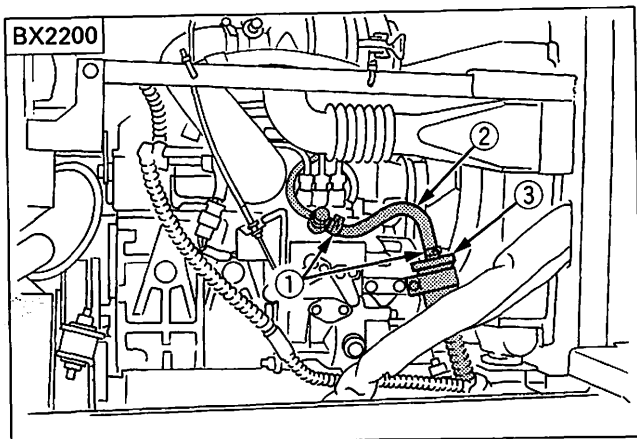

- (1) Pipe clamps
- (2) Fuel line
- (3) Fuel filter

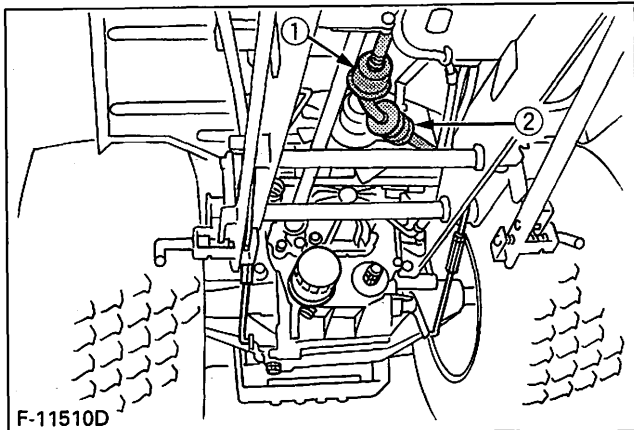

- (1) Fuel pump
- (2) Fuel filter

NOTE :

- If the fuel line is removed, be sure to properly bleed the fuel system.
(See "Bleeding Fuel System" in service as required)

■ Adjusting Fan Belt Tension



CAUTION


To avoid personal injury:

- Be sure to stop the engine and remove the key before checking belt tension.

Proper fan belt tension	A deflection of between 7 to 9 mm (1/4 to 3/8 in.) when the belt is pressed in the middle of the span.
-------------------------	--

1. Stop the engine and remove the key.
2. Apply moderate thumb pressure to belt between pulleys.

3. If tension is incorrect, loosen the alternator mounting bolts and, using a lever placed between the alternator and the engine block, pull the alternator out until the deflection of the belt falls within acceptable limits.
4. Replace fan belt if it is damaged.

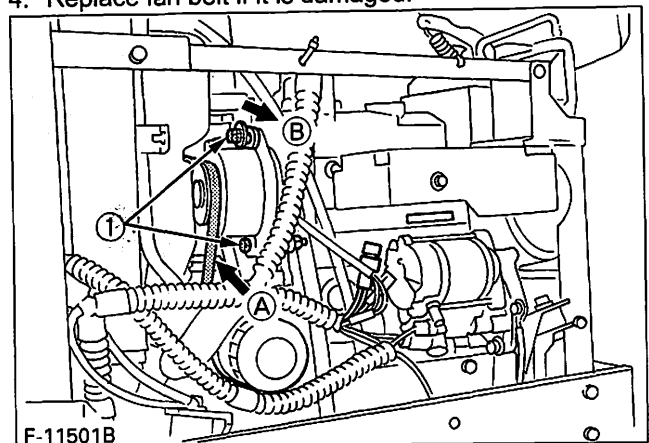

- (1) Bolt
- (A) Check the belt tension
- (B) To tighten

■ Adjusting HST Neutral Spring (for Speed Control Pedal)




WARNING

To avoid personal injury:

- Do not operate if tractor moves on level ground with foot off speed control pedal.
- If tractor moves on level ground with foot off the pedal, or, if the pedal is too slow in returning to neutral position when removing the foot from the pedal, consult your local KUBOTA Dealer.

The HST neutral spring located under the R.H. step can adjust returning speed of speed control pedal. Consult your local KUBOTA Dealer for service.

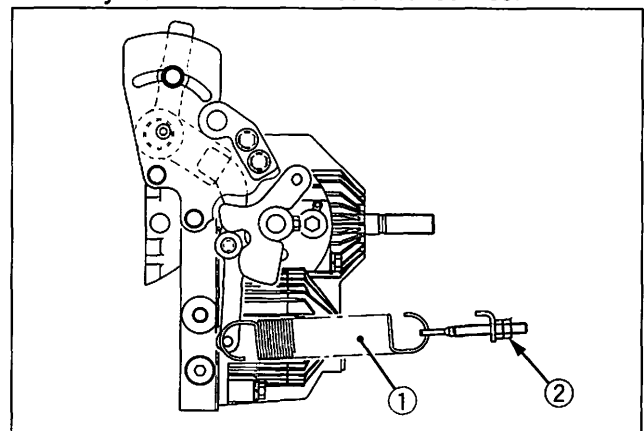

- (1) HST neutral spring
- (2) Adjusting nut

■ Adjusting Brake Pedal



CAUTION


To avoid personal injury:

- Stop the engine, remove the key, lower the implement to the ground, and chock the wheels before checking brake pedal.
- Even if the brake pedal free travel is within the limitation, adjust the brake pedal following the procedure below.
- If you are not able to adjust, consult your local KUBOTA Dealer.

Proper brake pedal free travel	20 to 30 mm (13/16 to 1-3/16 in.) on the pedal
--------------------------------	--

[BX1500]

1. Release the parking brake.
2. Loosen the lock nut and turn the turnbuckle to adjust the rod length so that the brake pedal free travel is 10 mm (7/16 in.).
3. Extend the turnbuckle one additional turn.
4. Retighten the lock nut.
5. Depress the brake pedal several times and make sure the brake pedal free travel is from 20 to 30 mm (13/16 to 1-3/16 in.).


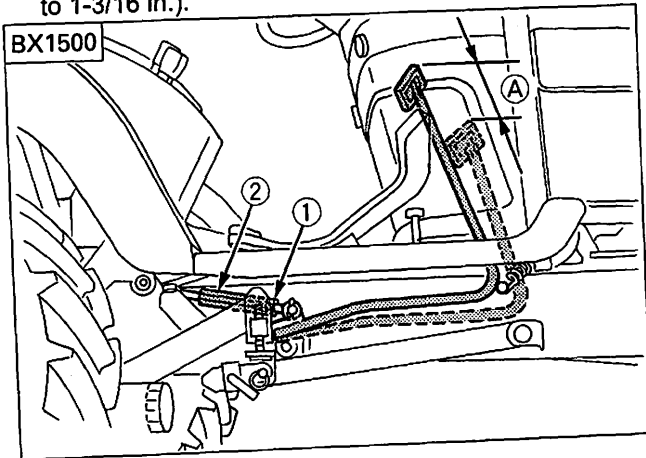


(1) Lock nut
(2) Turnbuckle

(A) Free travel

[BX1800, BX2200]

1. Release the parking brake.
2. Loosen the RH lock nut and extend the RH turnbuckle to the end of the thread.
3. Loosen the LH lock nut and turn the LH turnbuckle to adjust the LH rod length so that the brake pedal free travel is 20 mm (13/16 in.).
4. Retighten the LH lock nut.
5. Adjust the RH rod length so that the brake pedal free travel is 10 mm (7/16 in.).
6. Extend the RH turnbuckle one additional turn.
7. Retighten the RH lock nut.
8. Depress the brake pedal several times and make sure the brake pedal free travel is from 20 to 30 mm (13/16 to 1-3/16 in.).

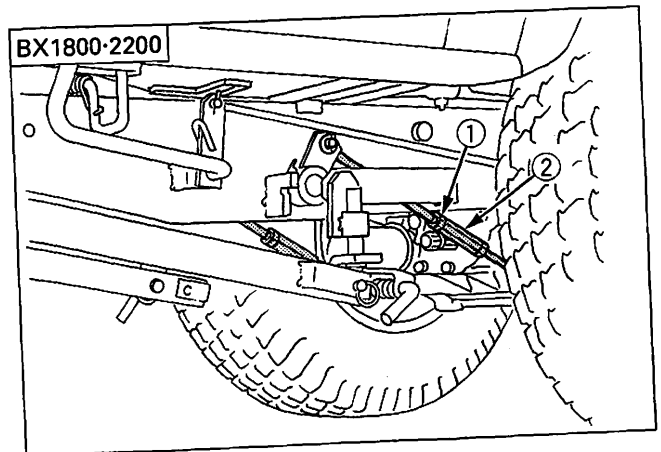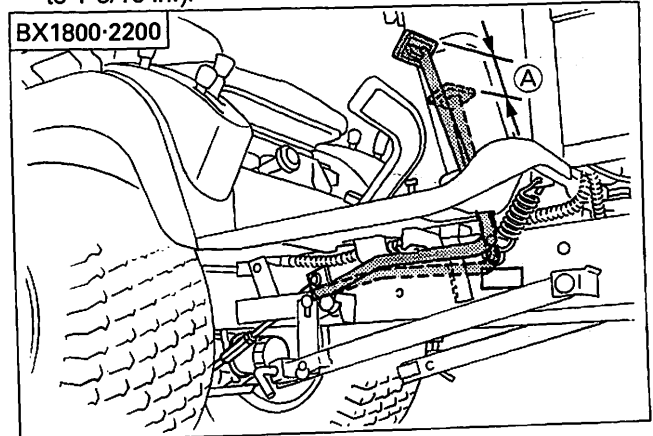

(1) Lock nut
(2) Turnbuckle

(A) Free travel

EVERY 200 HOURS

■ Replacing Engine Oil Filter




CAUTION

To avoid personal injury:

- Be sure to stop the engine and remove the key before changing the oil filter.
- Allow engine to cool down sufficiently, oil can be hot and can burn.

1. Remove the oil filter.
2. Put a film of clean engine oil on the rubber seal of the new filter.
3. Tighten the filter quickly until it contacts the mounting surface.
Tighten filter by hand an additional 1/2 turn only.
4. After the new filter has been replaced, the engine oil normally decreases a little. Make sure that the engine oil does not leak through the seal and be sure to check the oil level on the dipstick. Then, replenish the engine oil up to the prescribed level.
5. Properly dispose of used oil.

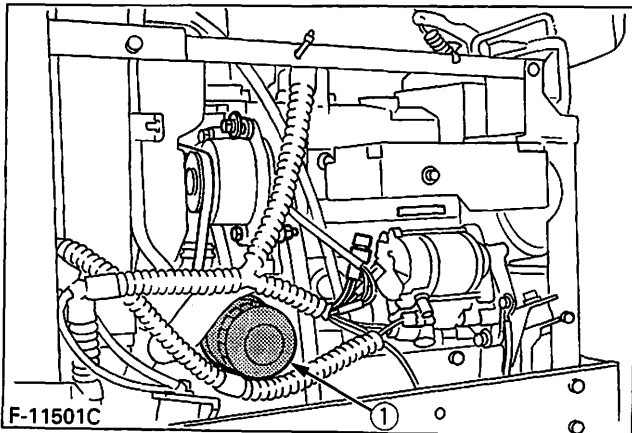

(1) Engine oil filter

IMPORTANT :

- To prevent serious damage to the engine, use only a KUBOTA genuine filter.

■ Checking Radiator Hoses and Clamps




CAUTION

To avoid personal injury:

- Be sure to stop the engine and remove the key before checking radiator hose and clamps.

Check to see if radiator hoses are properly secured every 200 hours of operation or six months, whichever comes first.

1. If hose clamps are loose or water leaks, tighten clamps securely.
 2. Replace hoses and tighten hose clamps securely, if radiator hoses are swollen, hardened or cracked.
 3. Properly dispose of used coolant.
- Replace hoses and hose clamps every 2 years or earlier if checked and found that hoses are swollen, hardened or cracked.

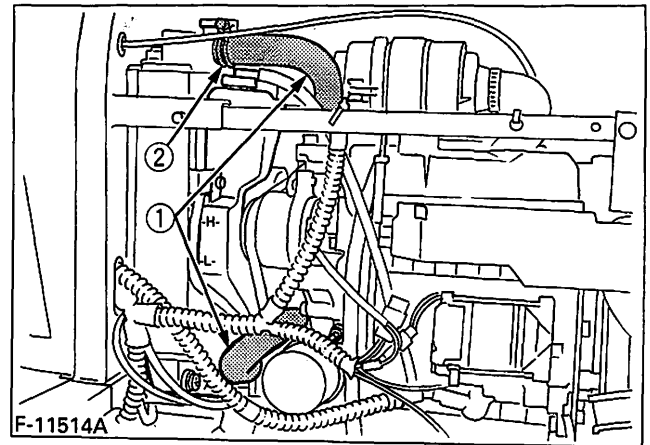

(1) Radiator hoses (2 pcs)

(2) Hose clamps (4 pcs)

◆ Precaution at Overheating

Take the following actions in the event the coolant temperature be nearly or more than the boiling point, what is called "Overheating"

1. Stop the machine operation in a safe place and keep the engine unloaded idling.
2. Don't stop the engine suddenly, but stop it after about 5 minutes of unloaded idling.
3. Keep yourself well away from the machine for further 10 minutes or while the steam blown out.
4. Checking that there is no danger such as burn, get rid of the causes of overheating according to the manual, see "Troubleshooting" section, and then, start again the engine.

■ Checking Intake Air Line






CAUTION

To avoid personal injury:

- Be sure to stop the engine and remove the key before checking intake air line.


1. Check to see that hoses and hose clamps are tight and not damaged.
2. If hoses and clamps are found to be worn or damaged, replace or repair them at once.

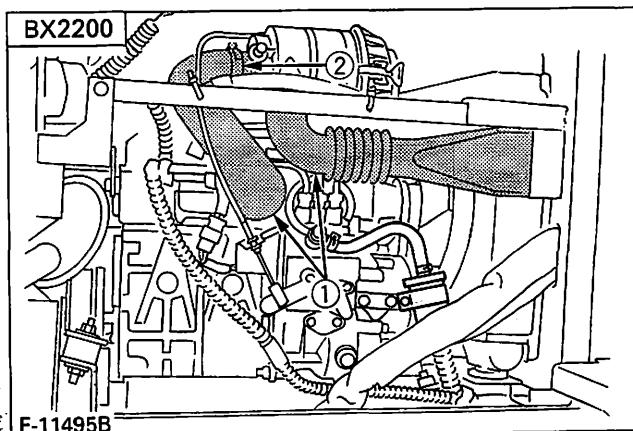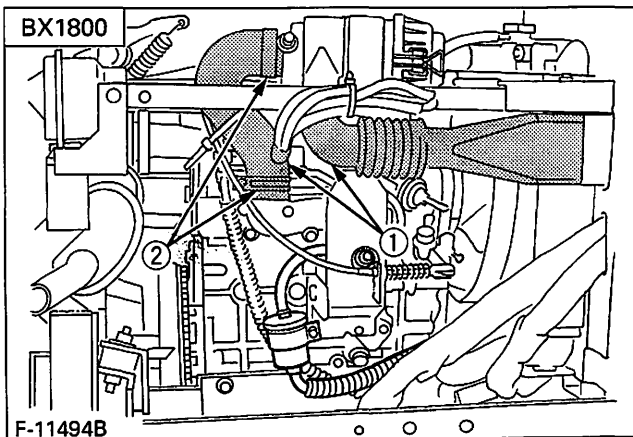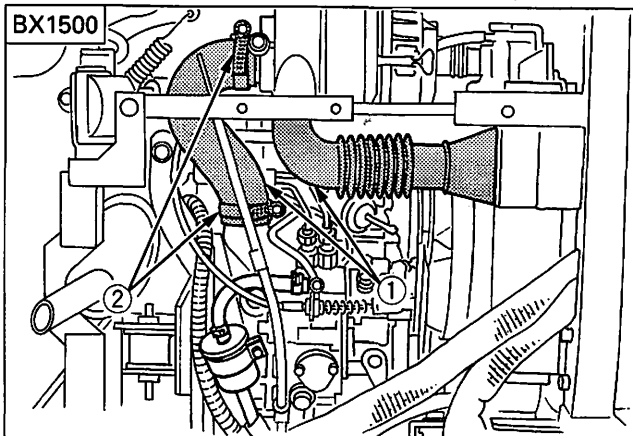

- (1) Hose
- (2) Hose clamp

■ Adjusting Toe-in

1. Park tractor on a firm, flat and level place.
2. Turn steering wheel so front wheels are in the straight ahead position.
3. Lower the implement to the ground, lock the parking brake, stop the engine and remove the key.
4. Measure distance between tire beads at front of tire at hub height.
5. Measure distance between tire beads at rear of tire, hub height.
6. Front distance should be 1 to 10mm (1/16 to 3/8 in.) less than rear distance. If not, adjust tie rod length.

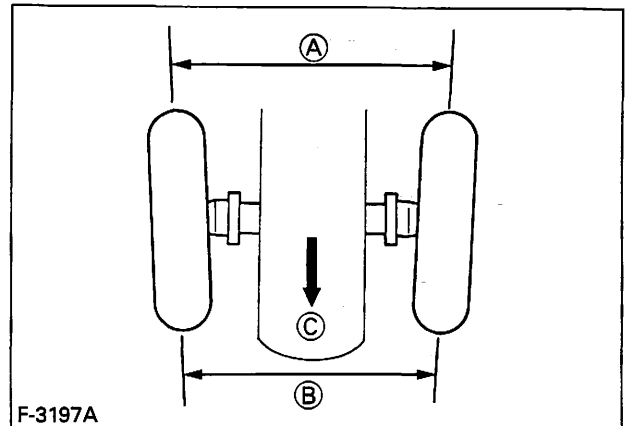


F-3197A

- (A) Wheel - to - wheel distance at rear
- (B) Wheel - to - wheel distance at front
- (C) "FRONT"

◆ Adjusting procedure

1. Loosen the lock nut and turn the tie rod to adjust the rod length until the proper toe-in measurement is obtained.
2. Retighten the lock nut.

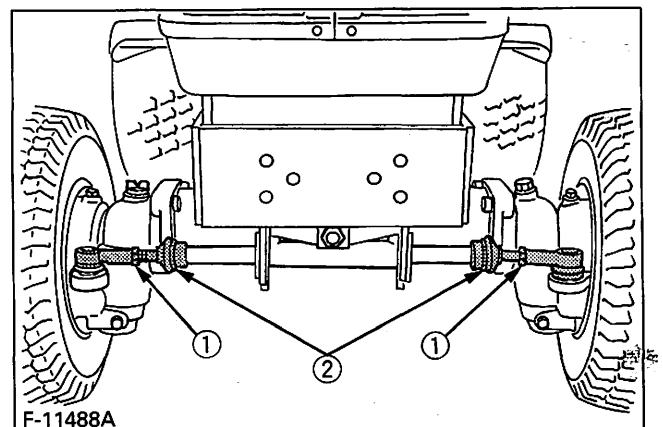

F-11488A

- (1) Lock nuts
- (2) Tie-rod


■ Checking Power Steering Line

CAUTION


To avoid personal injury:

- Be sure to stop the engine and remove the key before checking power steering line.

1. Check to see that all lines are tight and not damaged.
2. If hoses are found to be worn or damaged, replace or repair them at once.

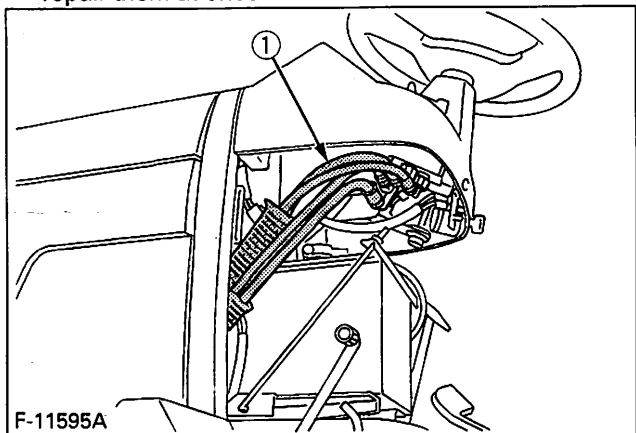

F-11595A

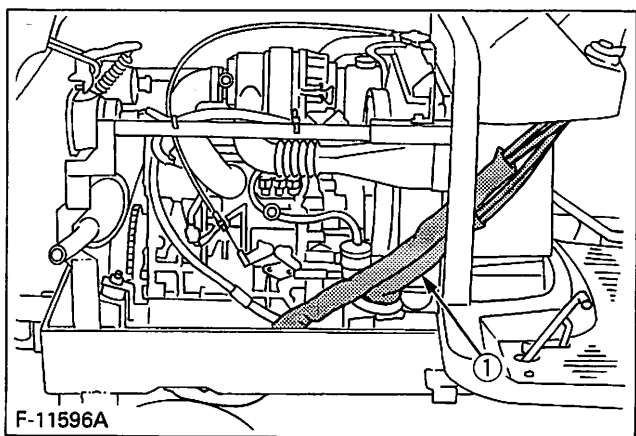

F-11596A

(1) Power steering pressure hoses

EVERY 300 HOURS

■ Changing Transmission Fluid


CAUTION

To avoid personal injury:

- Allow engine to cool down sufficiently, oil can be hot and can burn.


1. To drain the used oil, remove the drain plug at the bottom of the transmission case and drain the oil completely into the oil pan.
2. After draining reinstall the drain plug. Clean the transmission strainer. Fill with new KUBOTA SUPER UDT fluid up to the upper notch on the dipstick. (See "LUBRICANTS" and "DAILY CHECK" in Maintenance Section) After running the engine for a few minutes, stop it and check the oil level again, add oil to prescribed level. Properly dispose of used oil.

Oil capacity	BX1500 BX1800 BX2200	10.1 L (2.7 U.S.gals.)
--------------	----------------------------	------------------------

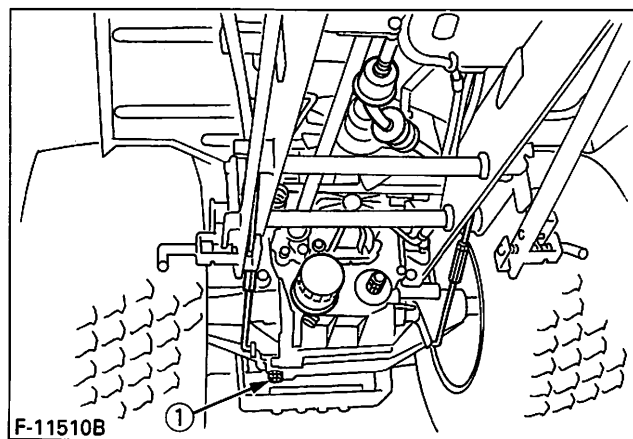

F-11510B

(1) Drain plug

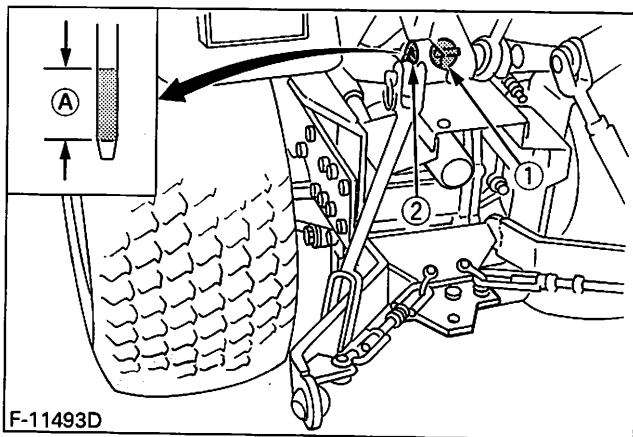

F-11493D

(1) Oil inlet
(2) Dipstick

(A) Oil level is acceptable within this range.


IMPORTANT :

- Do not operate the tractor immediately after changing the transmission fluid.
Run the engine at medium speed for a few minutes to prevent damage to the transmission.


◆ **Cleaning Transmission Strainer**

When changing the transmission fluid, disassemble and rinse the strainer with nonflammable solvent to completely clean off filings.

When reassembling be careful not to damage the parts.

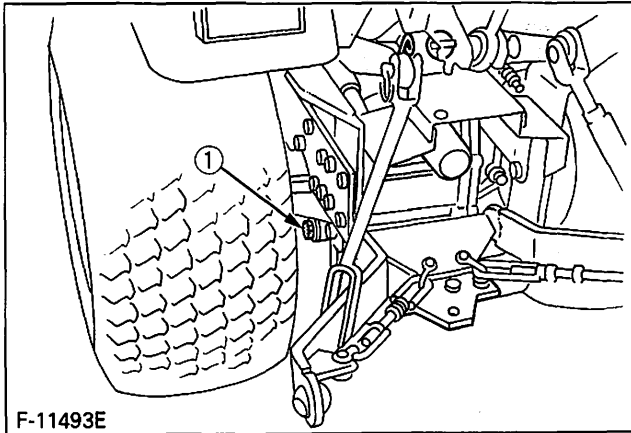

(1) Strainer

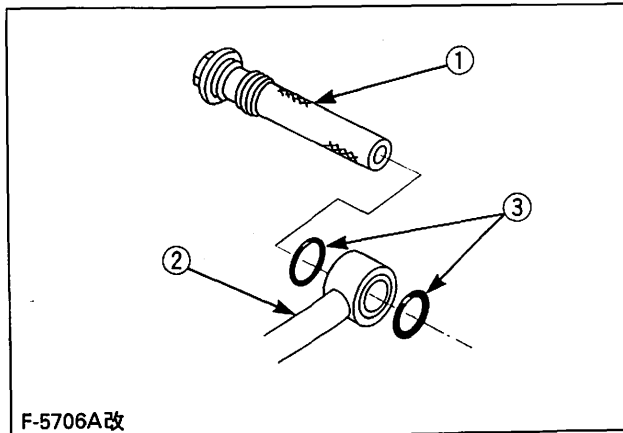

- (1) Strainer
- (2) Suction line
- (3) O-ring

NOTE :

- Since the fine filings in the oil can damage the precision component parts of the hydraulic system, the end of the suction line is provided with an oil strainer.

■ **Replacing Transmission Oil Filter**




CAUTION

To avoid personal injury:

- Allow engine to cool down sufficiently, oil can be hot and can burn.

1. Remove the oil filter.
2. Put a film of clean transmission oil on rubber seal of new filter.
3. Tighten the filter quickly until it contacts the mounting surface.
Tighten filter by hand an additional 1/2 turn only.
4. After the new filter has been replaced, the transmission fluid level will decrease a little. Make sure that the transmission fluid does not leak through the seal, and check the fluid level.
Top off if necessary.
5. Properly dispose of used oil.

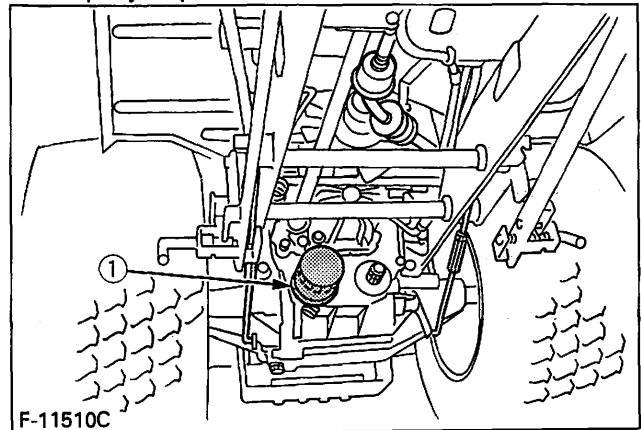

(1) Filter

IMPORTANT :

- To prevent serious damage to the hydraulic system, use only a KUBOTA genuine filter.


Changing Front Axle Case Oil

1. Park the machine on a firm, flat and level surface.
2. To drain the used oil, remove the right and left drain plugs and filling plug at the front axle case and drain the oil completely into the oil pan.
3. After draining reinstall the drain plugs.
4. Remove the right and left breather plugs.
5. Fill with new oil up to the upper notch on the dipstick. (See "LUBRICANTS" in Maintenance Section)

IMPORTANT:

- After ten minutes, check the oil level again; add oil to prescribed level.
6. After filling, reinstall the filling plug and breather plugs.

Oil capacity	BX1500	2.3 L (2.4 U.S.qts.)
	BX1800	4.7 L (5.0 U.S.qts.)
	BX2200	

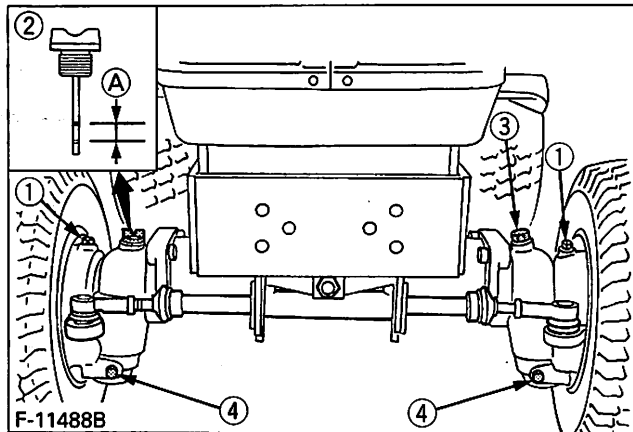

- (1) Breather plug
- (2) Filling plug with dipstick
- (3) Filling plug
- (4) Drain plug

(A) Oil level is acceptable within this range



EVERY 400 HOURS

Adjusting Front Axle Pivot

If the front axle pivot pin adjustment is not correct, front wheel vibration can occur causing vibration in the steering wheel.

Adjusting procedure

Remove the split pin, tighten the adjusting nut (tightening torque 20 N-m, 2.0 kgf-m, 15 lbs.-ft), then make sure that one of the nut slots aligns with the split pin hole, tighten the nut slightly if necessary to align. Replace the split pin.

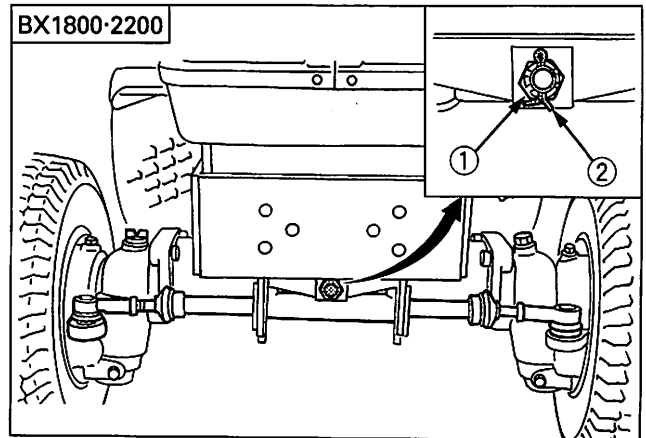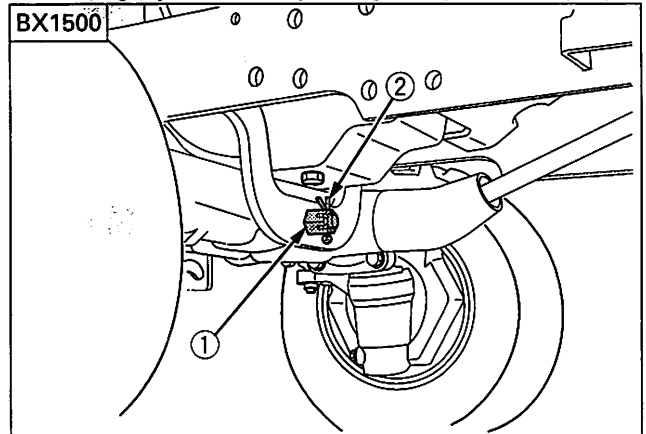

- (1) Adjusting nut
- (2) Split pin

EVERY 500 HOURS

Replacing Fuel Filter Element

Consult your local KUBOTA Dealer for this service.

EVERY 800 HOURS

Adjusting Engine Valve Clearance

Consult your local KUBOTA Dealer for this service.

EVERY 1500 HOURS

■ Checking Fuel Injection Nozzle Injection Pressure

Consult your local KUBOTA Dealer for this service.

EVERY 3000 HOURS

■ Checking Injection Pump

Consult your local KUBOTA Dealer for this service.

EVERY 1 YEAR

■ Replacing Air Cleaner Element

(See "Cleaning Air Cleaner Element" in every 100 hours maintenance)

EVERY 2 YEAR

■ Flush Cooling System and Changing Coolant



CAUTION


To avoid personal injury:

- Be sure to stop the engine and remove the key before checking coolant level.
- Do not remove the radiator cap while coolant is hot. When cool, slowly rotate cap to the first stop and allow sufficient time for excess pressure to escape before removing cap completely.

1. Stop the engine and let cool down.
2. To drain the coolant, remove the drain hose and radiator cap. The radiator cap must be removed to completely drain the coolant.
3. After all coolant is drained, reinstall the drain hose.
4. Fill with clean water and cooling system cleaner.
5. Follow directions of the cleaner instruction.
6. After flushing, fill with clean water and anti-freeze until the coolant level is just below the radiator cap. Install the radiator cap securely.
7. Fill with coolant up to the "H" mark on the recovery tank.
8. Start and operate the engine for few minutes.
9. Stop the engine and let cool.

10. Check coolant level of recovery tank and add coolant if necessary.

Coolant capacity (with recovery tank)	BX1500	2.9 L (3.1 U.S.qts.)
	BX1800	
	BX2200	3.5 L (3.7 U.S.qts.)

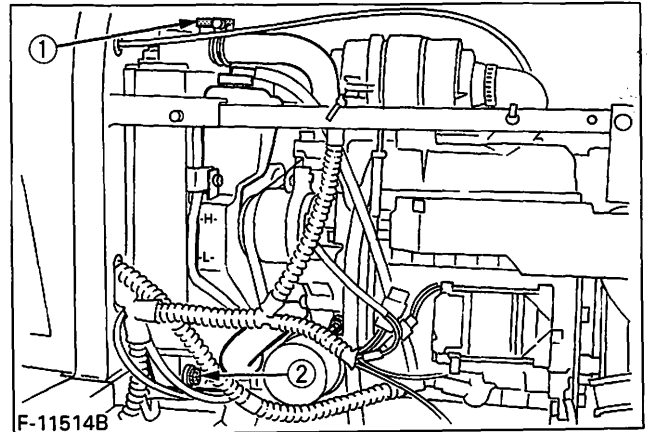

- (1) Radiator cap
(2) Drain plug

IMPORTANT :

- Do not start engine without coolant.
- Use clean, fresh water and anti-freeze to fill the radiator and recovery tank.
- When the anti-freeze is mixed with water, the anti-freeze mixing ratio must be less than 50%.
- Securely tighten radiator cap. If the cap is loose or improperly fitted, water may leak out and the engine could overheat.

■ Anti-Freeze

If cooling water freezes, it can damage the cylinders and radiator. It is necessary, if the ambient temperature falls below 0°C (32°F), to remove cooling water after operating or to add anti-freeze to it.

1. There are two types of anti-freeze available; use the permanent type (PT) for this engine.
2. Before adding anti-freeze for the first time, clean the radiator interior by pouring fresh water and draining it a few times.
3. The procedure for mixing of water and anti-freeze differs according to the make of the anti-freeze and the ambient temperature, basically it should be referred to SAE J1034 standard, more specifically also to SAE J814c.
4. Mix the anti-freeze with water, and then fill the radiator.

Vol % Anti-freeze	Freezing point		Boiling point*	
	°C	°F	°C	°F
40	-24	-12	106	222
50	-37	-34	108	226

* At 760mmHg pressure (atmospheric). A higher boiling point is obtained by using a radiator pressure cap which permits the development of pressure within the cooling system.

NOTE :

- The above data represents industry standards that necessitate a minimum glycol content in the concentrated anti-freeze.
- When the cooling water level drops due to evaporation, add water only. In case of leakage, add anti-freeze and water in the specified mixing ratio.
- Anti-freeze absorbs moisture. Keep unused anti-freeze in a tightly sealed container.
- Do not use radiator cleaning agents when anti-freeze has been added to the cooling water. (Anti-freeze contains an anti-corrosive agent, which will react with the radiator cleaning agent forming sludge which will affect the engine parts.)

■ Replacing Radiator Hose (Water pipes)

Replace the hoses and clamps.

(See "Checking Radiator Hose and Clamp" in every 200 hours maintenance)

■ Replacing Power Steering Hose

Replace the hoses and clamps.

(See "Checking Power Steering line" in every 200 hours maintenance)

■ Replacing Fuel Hose

Replace the hoses and clamps.

See "Checking Fuel line" in every 200 hours maintenance)

■ Replacing Intake Air Line

Consult your local KUBOTA Dealer for this service.

(See "Checking Intake Air Line" in every 200 hours maintenance)

SERVICE AS REQUIRED


■ Bleeding Fuel System

Air must be removed:

1. When the fuel filter or lines are removed.
2. When tank is completely empty.
3. After the tractor has not been used for a long period of time.

◆ Bleeding procedure is as follows:

1. Fill the fuel tank with fuel.

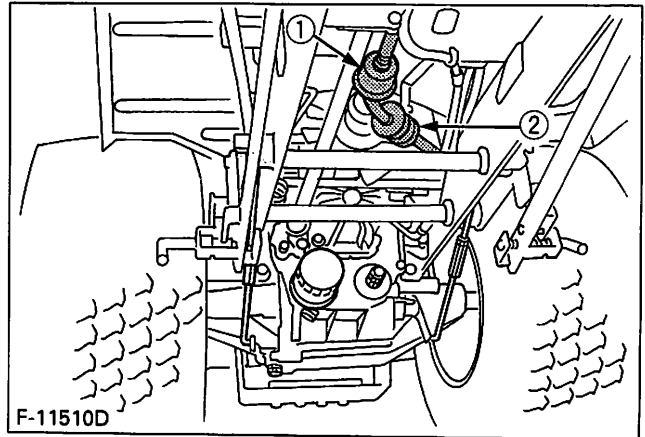

- (1) Fuel pump
(2) Fuel filter

2. Turn the key switch to "ON" position for about 30 seconds. Doing so allows fuel pump to work and pump air out of the fuel system.
3. Start the engine and run for about 30 seconds, and then stop the engine.

■ Replacing Fuse

⚠ CAUTION

To avoid personal injury:

- Be sure to stop the engine and remove the key before replacing fuse.

The tractor electrical system is protected from potential damage by fuses.


A blown fuse indicates that there is an overload or short somewhere in the electrical system.

If any of the fuses should blow, replace with a new one of the same capacity.

IMPORTANT :

- Before replacing a blown fuse, determine why the fuse blew and make any necessary repairs. Failure to follow this procedure may result in serious damage to the tractor electrical system. Refer to the troubleshooting section of this manual or your local KUBOTA Dealer for specific information dealing with electrical problems.


If any of them should blow, replace with a new one of the same capacity.

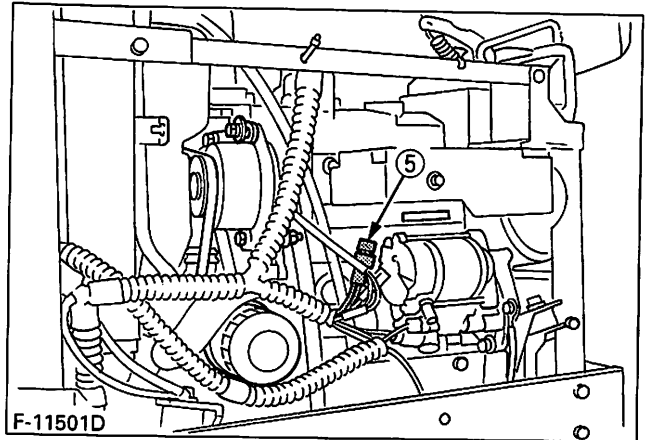

F-11501D

◆ Protected circuit

FUSE No.	CAPACITY (A)	Protected circuit
①	20	Working light
②	15	Head light
③	15	Hazard light
④	15	Key stop
⑤	Slow blow Fuse (30A)	Check circuit against wrong battery connection

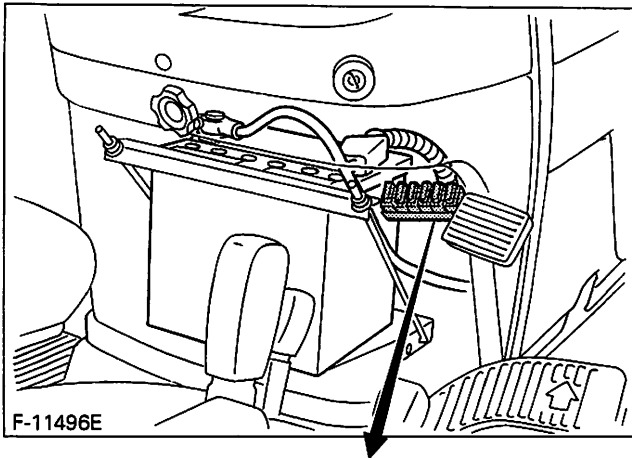


F-11496E

■ Replacing Light Bulb

1. Head lights :
Take the bulb out of the light body and replace with a new one.
2. Other lights :
Detach the lens and replace the bulb.

Light	Capacity
Headlights	24W
Tail light	3W
Hazard light	20W
Additional turn signal lamp	20W

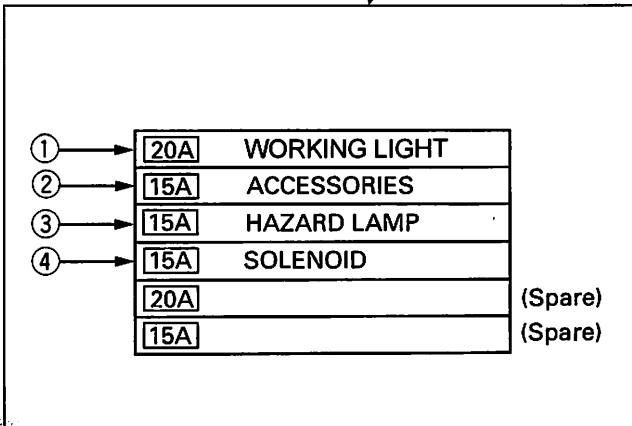

STORAGE



CAUTION

To avoid personal injury:

- Do not clean the machine with engine running.
- To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.
- When storing, remove the key from the key switch to avoid unauthorized persons from operating the tractor and getting injured.

TRACTOR STORAGE

If you intend to store your tractor for an extended period of time, follow the procedures outlined below. These procedures will insure that the tractor is ready to operate with minimum preparation when it is removed from storage.

1. Check the bolts and nuts for looseness, and tighten if necessary.
2. Apply grease to tractor areas where bare metal will rust also to pivot areas.
3. Detach the weights from the tractor body.
4. Inflate the tires to a pressure a little higher than usual.
5. Change the engine oil and run the engine to circulate oil throughout the engine block and internal moving parts for about five minutes.
6. With all implements lowered to the ground, coat any exposed hydraulic cylinder piston rods with grease.
7. Remove the battery from the tractor. Store the battery following the battery storage procedures.
(See "Battery condition" in every 100 hours in periodic service section.)
8. Keep the tractor in a dry place where the tractor is sheltered from the elements. Cover the tractor.
9. Store the tractor indoors in a dry area that is protected from sunlight and excessive heat. If the tractor must be stored outdoors, cover it with a waterproof tarpaulin. Jack the tractor up and place blocks under the front and rear axles so that all four tires are off the ground. Keep the tires out of direct sunlight and extreme heat.

IMPORTANT :

- When washing the tractor, be sure to stop the engine. Allow sufficient time for the engine to cool before washing.
- Cover the tractor after the muffler and the engine have cooled down.

REMOVING THE TRACTOR FROM STORAGE

1. Check the tire air pressure and inflate the tires if they are low.
2. Jack the tractor up and remove the support blocks from under the front and rear axles.
3. Install the battery. Before installing the battery, be sure it is fully charged.
4. Check the fan belt tension.
5. Check all fluid levels (engine oil, transmission/hydraulic oil, engine coolant and any attached implements).
6. Start the engine. Observe all gauges. If all gauges are functioning properly and reading normal, move the tractor outside. Once outside, park the tractor and let the engine idle for at least five minutes. Shut the engine off and walk around tractor and make a visual inspection looking for evidence of oil or water leaks.
7. With the engine fully warmed up, release the parking brake and test the brakes for proper adjustment as you move forward. Adjust the brakes as necessary.

TROUBLESHOOTING

ENGINE TROUBLESHOOTING

If something is wrong with the engine, refer to the table below for the cause and its corrective measure.

Trouble		Cause	Countermeasure
Engine is difficult to start or won't start.		<ul style="list-style-type: none"> No fuel flow. 	<ul style="list-style-type: none"> Check the fuel tank and the fuel filter. Replace filter if necessary.
		<ul style="list-style-type: none"> Air or water is in the fuel system. 	<ul style="list-style-type: none"> Check to see if the fuel line coupler bolt and nut are tight. Bleed the fuel system (See "Bleeding Fuel system" in as required maintenance) Remove water from the system and replace the fuel filter.
		<ul style="list-style-type: none"> In winter, oil viscosity increases, and engine revolution is slow. 	<ul style="list-style-type: none"> Use oils of different viscosities, depending on ambient temperatures. Use engine block heater. (Option)
		<ul style="list-style-type: none"> Battery becomes weak and the engine does not turn over quick enough. 	<ul style="list-style-type: none"> Clean battery cables and terminals. Charge the battery. In cold weather, always remove the battery from the engine, charge and store it indoors. Install it on the tractor only when the tractor is going to be used.
Insufficient engine power.		<ul style="list-style-type: none"> Insufficient or dirty fuel. The air cleaner is clogged. 	<ul style="list-style-type: none"> Check the fuel system. Clean or replace the element.
Engine stops suddenly.		<ul style="list-style-type: none"> Insufficient fuel. 	<ul style="list-style-type: none"> Refuel. Bleed the fuel system if necessary.
Exhaust fumes are colored.	Black	<ul style="list-style-type: none"> Fuel quality is poor. Too much oil. The air cleaner is clogged. 	<ul style="list-style-type: none"> Change the fuel and fuel filter. Check the proper amount of oil. Clean or replace the element.
	Blue white	<ul style="list-style-type: none"> The inside of exhaust muffler is dumped with fuel. Injection nozzle trouble. Poor quality fuel. 	<ul style="list-style-type: none"> Heat the muffler by applying load to the engine. Check the injection nozzle. Change the fuel and fuel filter.
Engine overheats.		<ul style="list-style-type: none"> Engine overloaded. 	<ul style="list-style-type: none"> Shift to lower gear or reduce load.
		<ul style="list-style-type: none"> Low coolant level. 	<ul style="list-style-type: none"> Fill cooling system to the correct level; check radiator and hoses for loose connections or leaks.
		<ul style="list-style-type: none"> Loose or defective fan belt. 	<ul style="list-style-type: none"> Adjust or replace fan belt.
		<ul style="list-style-type: none"> Dirty radiator core or grille screens. 	<ul style="list-style-type: none"> Remove all trash.
		<ul style="list-style-type: none"> Coolant flow route corroded. 	<ul style="list-style-type: none"> Flush cooling system.

If you have any questions, contact your local KUBOTA Dealer.

OPTIONS

Consult your local KUBOTA Dealer for further detail.

- 16 x 7.5-8 Bar Tire [BX1500]
- 24 x 12.0-12 Bar Tire [BX1500]
- 18 x 8.5-8 Bar Tire [BX1800, BX2200]
- 26 x 12.0-12 Bar Tire [BX1800, BX2200]
- Grille guard
- Engine Block heater
For facilitating starting and reducing warm up period in cold weather.
- Rear Work Light
High visibility for night work
- Front end weights
For front ballast
- Rear wheel weight
- Sunshade for ROPS

KUBOTA Corporation is . . .

Since its inception in 1890, KUBOTA Corporation has grown to rank as one of the major firms in Japan.

To achieve this status, the company has through the years diversified the range of its products and services to a remarkable extent. Nineteen plants and 16,000 employees produce over 1,000 different items, large and small.

All these products and all the services which accompany them, however, are unified by one central commitment. KUBOTA makes products which, taken on a national scale, are basic necessities. Products which are indispensable. Products which are intended to help individuals and nations fulfill the potential inherent in their environment. KUBOTA is the Basic Necessities Giant.

This potential includes water supply, food from the soil and from the sea, industrial development, architecture and construction, and transportation.

Thousands of people depend on KUBOTA's know-how, technology, experience and customer service. You too can depend on KUBOTA.

Kubota

- U.S.A. : KUBOTA TRACTOR CORPORATION**
3401 Del Amo Blvd., Torrance, CA 90503, U.S.A.
Telephone : (310)370-3370
- Western Division** : 6665 E. Hardaway Rd., Stockton, CA 95215
Telephone : (209)931-5051
- Central Division** : 14855 FAA Blvd., Fort Worth, TX 76155
Telephone : (817)571-0900
- Northern Division** : 2626 Port Road, Columbus, OH 43217
Telephone : (614)492-1100
- Southeast Division** : 1025 Northbrook Parkway, Suwanee, GA 30024
Telephone : (770)995-8855
- Canada : KUBOTA CANADA LTD.**
5900 14th Avenue, Markham, Ontario, L3S 4K4, Canada
Telephone : (905)294-7477
- Delta Distribution Center** : 7979 82nd St, Delta B.C. V4G 1L7
Telephone : (604)940-6061
- Drummondville Distribution Center** : 5705 Place Kubota, Drummondville, Québec, J2B 6B4
Telephone : (819)478-7151
- France : KUBOTA EUROPE S.A.**
19-25, Rue Jules Vercey, Z.I. BP88, 95101 Argenteuil Cedex, France
Telephone : (33)1-3426-3434
- Germany : KUBOTA (DEUTSCHLAND) GmbH**
Senefelder Str. 3-5 63110 Rodgau /Nieder-Roden, Germany
Telephone : (49)6106-873-0
- U.K. : KUBOTA (U.K.) LTD.**
Dormer Road, Thame, Oxfordshire, OX9 3UN, U.K.
Telephone : (44)1844-214500
- Australia : KUBOTA TRACTOR AUSTRALIA PTY LTD.**
100 Keilor Park Drive, Tullamarine, Victoria 3043 Australia
Telephone : (61)-3-9279-2000
- Malaysia : SIME KUBOTA SDN. BHD.**
Lot pt 11101 Kompleks Sime Darby, Jalan Kewajipan,
Subang Jaya, 47600 Petaling Jaya, Selangor Darul Ehsan, West Malaysia
Telephone : (60)3-736-1388
- Philippines: KUBOTA AGRO-INDUSTRIAL MACHINERY PHILIPPINES, INC.**
155 Panay Avenue, South Triangle Homes, 1103 Quezon City, Philippines
Telephone : (63)2-9201071
- Taiwan : SHIN TAIWAN AGRICULTURAL MACHINERY CO., LTD.**
16, Fengping 2nd Rd, Taliiao Shiang Kaohsiung 83107, Taiwan R.O.C.
Telephone : (886)7-702-2333
- Brazil : KUBOTA BRASIL LTDA.**
Rua Dona Maria Fideles No.171, Diadema, São Paulo, Brazil
Telephone : (55)11-745-4744
- Indonesia : P.T. KUBOTA INDONESIA**
JALAN. Setyabudi 279, Semarang, Indonesia
Telephone : (62)-24-472849
- Thailand : THE SIAM KUBOTA INDUSTRY CO., LTD.**
101/19-24 Navanakorn, Tambol Klongneung, Amphur Klongluang, Pathumtani 12120, Thailand
Telephone : (66)2-529-0363
- Egypt : KUBOTA Corporation CAIRO LIAISON OFFICE**
Flat No.2,27th floor, Swiss Tower Building
3,Ibn Kasir Street, Cornish EL Nile, Giza, Egypt
Telephone : (20)2-338-3851

KUBOTA Corporation

英語(U.S.A.)

Code No. K2511-7121-1